Surge Protection Anthology
All Papers – Part 3
Recorded surge occurrences, surveys and staged tests

FOREWORD

The papers included in this Part 3 of the Anthology report the occurrence of surges in low-voltage AC power circuits. Data on such occurrences were initially collected in the early sixties as the realization developed that the newly introduced solid-state devices were failing in the field, with the suspicion that surge voltages might be the cause. The investigations were conducted by the General Electric R&D Center in support of product departments impacted by these failures or risks of failure. The three papers in this Part 3 were copyrighted by the publisher who graciously gave permission for reprinting. The two GE-TIS reports, initially internal proprietary reports, containing the source data for the published IEEE papers, were declassified by General Electric for the purpose of this anthology.

The subject of surge occurrences has long been of interest to many researchers and organizations, with papers reporting field measurements of unintentional occurrences as well as staged tests performed during equipment failure investigations. The citations of Annex A of Part 3 were collected for the working group that developed the IEEE SPD Trilogy but do not purport to be an exhaustive listing. Although acknowledged and appreciated, for obvious copyright limitations, these 51 papers from other researchers cannot be reprinted here.

CONTENTS

SURGE SUPPRESSION IN A TYPICAL HOME WIRING SYSTEM

Surge Suppression in a Typical Home Wiring System

François Martzloff
General Electric Company
Schenectady NY
f.martzloff@ieee.org

Significance:
Part 3 Recorded occurrences

The present interest in this report is historical as the experiments and devices it described represent initial efforts in addressing the emerging problems associated with the introduction of semiconductors in the consumer market.

This now declassified proprietary report was prepared to document experiments performed in the early sixties to assess the capability of devices available at that time for serving as surge-protective devices in residential circuits. The context was that the emerging electronic appliances were found vulnerable to transient overvoltages and therefore in need of some form of protection.

The technology at that time offered the well-proven selenium rectifier (under the General Electric trade name "Thyrector" among other similar offerings in the market), the well-known low-pass RC filter, and the emerging five-layer semiconductors. All these were then valid candidates but of course became completely supplanted ten years later when zinc-oxide based varistors were stumbled upon and quickly recognized as a promising technology.

Interesting observations on the propagation of surges in a low-voltage ac power system are also documented in this report, and these are still applicable today.

TECHNICAL INFORMATION SERIES

GENERAL ⓖ ELECTRIC

ADVANCED TECHNOLOGY LABORATORIES

AUTHOR	SUBJECT	NO. 63GL97
F.D. Martzloff		DATE 6/24/63

TITLE Surge Suppression in a Typical Home Wiring System	G.E. CLASS ▰ 2
	GOVT. CLASS None

REPRODUCIBLE COPY FILED AT G.E. TECHNICAL DATA CENTER BLDG. 5, SCHENECTADY, N. Y.	NO. PAGES 19

SUMMARY

Artificial surges approximating typical switching surges were injected in a home wiring system. Various types of surge suppressors were connected to various points of the system and their effectiveness evaluated.

For the short (3 μs) surges applied, the following surge suppressors provided the attenuation tabulated below, showing the effectiveness of the AC switch and SSS switch

SUPPRESSOR	% of original surge at location of suppressor	% of original surge at other points
2" Thyrector	50	50
4" Thyrector	50	50
RC	66	66
GE "AC Switch"	10	30
Hunt "SSS Switch"	10	30
Controlled Avalanche Diode	30	90

Further work is required to investigate the Thyrector performance with surges of longer duration

KEY WORDS

INFORMATION PREPARED FOR ___Transient Overvoltages Pooled Program___

TESTS MADE BY ___S. Deiber - F. D. Martzloff___

AUTHOR ___F. D. Martzloff___

COMPONENT ___Converter Circuits Engineering___

APPROVED ___R. G. Hoft___ 7/8/63

SUPPLEMENT TO TIS 63GL97

Surge Suppression in a Typical Home Wiring System

August 2, 1963

SUMMARY

The surge suppression data for the selenium Thyrector devices originally

reported in TIS 63GL97, dated 6/24/64 were based on a 10 cell/250 ACV unit

applied to the 125 ACV circuit. The appropriate unit should have been a

5 cell/125 ACV model, which is the proper rating for the test conditions.

The surge suppression provided by this unit is a significant improvement

over the values previously reported. This summary supersedes the summary

in the original report.

A comparison test was made in a <u>laboratory model</u> of a home wiring sys-

tem, using both 10 and 5 cell Thyrectors as well as a 5 layer switch and the

RC network.

Results of both tests are summarized below. These measurements are

taken at the end of a line with the suppressor at central fuse box and surge

applied on a second line end.

SUPPRESSOR	% of Original Surge at Line End		
	Typical Home Test	Laboratory Model Test	
		Device Rated 250 Volts	Device Rated 125 Volts
1" Thyrector	No Test	70 (with 10 cell)	42 (with 5 cell)
2" Thyrector	50 (with 10 cell)	50 (with 10 cell)	30 (with 5 cell)
GE "AC Switch"	30	28	
RC	66	66	

I. INTRODUCTION

The purpose of this test is to repeat, in the laboratory model of a house wiring system, the work reported in TIS 63GL97 and to evaluate the effectiveness of proposed transient overvoltage suppressors. In the original report, the Thyrectors evaluated were 250 volt models (6RS21SA10D10, etc.). During the test program, the suppression devices were always located in the 120 volt circuit so the evaluation was repeated in the laboratory using the proper 120 volt Thyrector (6RS21SA5D5, etc.), the GE 5 layer AC switch, and the RC network. Surges were injected in the wiring system of the house and measurements recorded at an outlet with the suppression device located at the central fuse box.

This new study reflects the proper comparison of the effectiveness of the various devices studied and this additional data indicates that the 1" Thyrector (6RS21SA5D5) should be considered for household transient protection as well as the 2" Thyrector (6RS25SA5D5). This new look brings the 1" Thyrector price to about $1.00 and the 2" Thyrector to $3.50 which makes the Thyrector competitive valuewise.

to lab supply
(Power company)

118V
60 cps

1:1
Isolating
transformer

gnd wire

8 lines   20 to 60 ft lg
2 wire + gnd Romex

100Ω

60w bulb

Standard
100A service box

4" box

60w
bulb
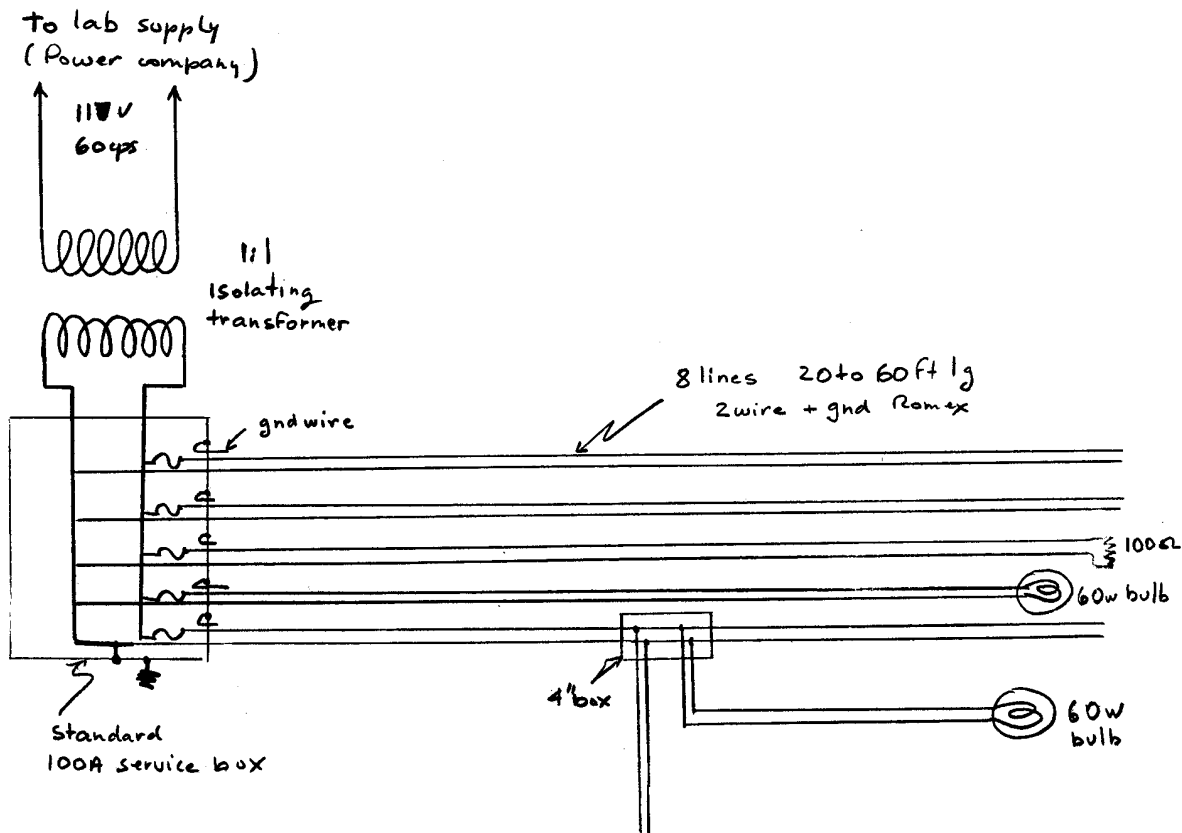
"Laboratory model"

II. TEST CONDITIONS

The tests were made on a laboratory model of a house wiring system consisting of one standard service fuse box feeding 8 lines of Romex cable and 3 branch lines from one line, with length varying from 20 to 50 feet. The cable is strung in the room away from the ground in some locations and is close to the ground in some others. Light bulbs are connected at some line ends while others are left open. Single phase 117 volt 60 cps power is applied to the service box from the low impedance laboratory supply through an isolating transformer.

Initial tests have shown that the portable surge generator used in the "typical house" can induce the same level and wave shape surges in this laboratory model which indicates that a reasonable degree of approximation has been obtained.

This was confirmed further by the similarity of the test results for the same devices between the "typical home" and the laboratory model.

All tests were made with the surge applied at one line end, the suppressor installed with 6" leads at the fuse box, and the resultant surge at one other line end measured with a Tektronix 551 oscilloscope (this provides linear time base compared with the logarithmic time base of the automatic oscilloscopes used in the "typical home" test.

The laboratory model was built for further work in this program and will continue to be available.

III. TEST RESULTS

The two attached oscillogram sheets show a composite recording for 5 cell and 10 cell Thyrector units, both 1" and 2" Thyrectors as well as the original surge and they indicate the improved surge attenuation provided by the 5 cell unit.

The GE five-layer switch limits the voltage peak by abruptly turning on and with a subsequent low voltage, reducing the total surge energy delivered to equipments connected to the wiring system.

IV. SUMMARY AND CONCLUSIONS

Three types of surge suppressors, Thyrectors, RC's and five-layer switche were investigated under conditions approximating typical switching surges generated within the home, which is the most frequent type of transient over-voltage in a house wiring system.

The crest of the surges was in the range of 1500 to 2000 volts with a duration in the order of 3 microseconds.

The resultant attenuation is tabulated below:

SUPPRESSOR	% of Original Surge at Line End		
	Typical Home Test	Laboratory Model Test	
		Device Rated 250 Volts	Device Rated 125 Volts
1" Thyrector	No Test	70 (with 10 cell)	42 (with 5 cell)
2" Thyrector	50 (with 10 cell)	50 (with 10 cell)	30 (with 5 cell)
GE "AC Switch"	30	28	
RC	66	66	

In terms of attenuation per dollar, the RC has the lowest cost, and the five-layer switch and the Thyrector have comparable costs. The limitations are most severe for the RC whose effectiveness is dependent upon circuit parameters and cannot attenuate long surges. The Thyrector effectiveness in the initial period is determined by its junction capacitance and it has proven capability to absorb the energy of longer surges. A combination of Thyrector with RC can increase the initial effectiveness.

The five layer switch requires additional circuitry for DC applications and therefore is primarily attractive for AC circuits when loss of 60 cps

power for a half cycle is not objectionable. It is the most effective and
most promising surge suppressor in the present state of the art.

$C E A / f_{11} r_1$

C. E. Arnold
Rectifier Components Department

F. D. Martzloff
Electrical Conversion Engineering
Advanced Technology Laboratories

Surge Suppression Measurement

in the Laboratory "house wiring system"

Comparison between performance of 5-cell thyrectors and 10-cell thyrectors, 1" and 2".

Surge applied to one line end, propagating to central fuse box where the Thyrector is connected, and measured at one other line end.

0 —

with 5-cell unit, 1"

with 10-cell unit, 1"

original surge, with
    no thyrector con-
    nected

0 —

with 5-cell unit, 2"

with 10-cell unit, 2"

original surge, with
    no thyrector con-
    nected
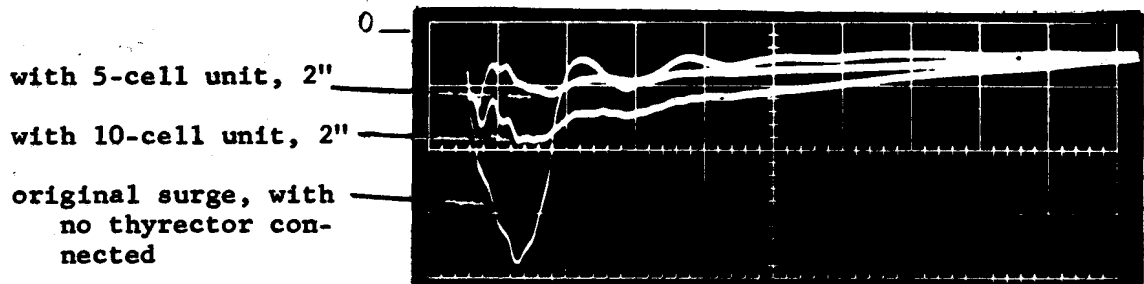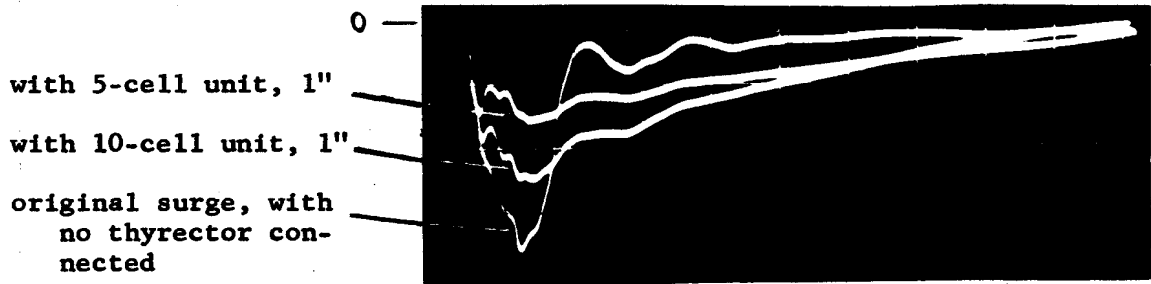
Both oscillograms: 500 volts/division

1 μs/division sweep

Surge Suppression Measurement

in the Laboratory "house wiring system"

Surge suppression with RC and with 5 layer switch.

Surge applied to one line end, propagating to central fuse box where suppressor is connected, and measured at one other line end.

original surge, with

no suppressor con-

nected
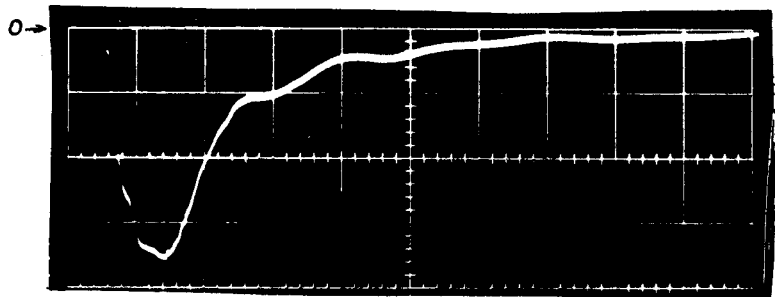
with GE 5 layer AC

switch and 1 ohm

resistor
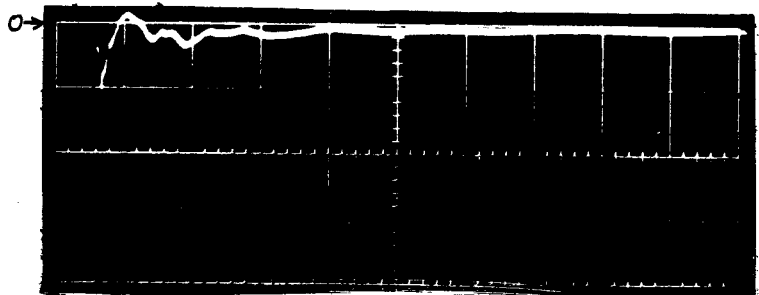
with 0.05 μF capacitor

and 10 ohm resistor

in series
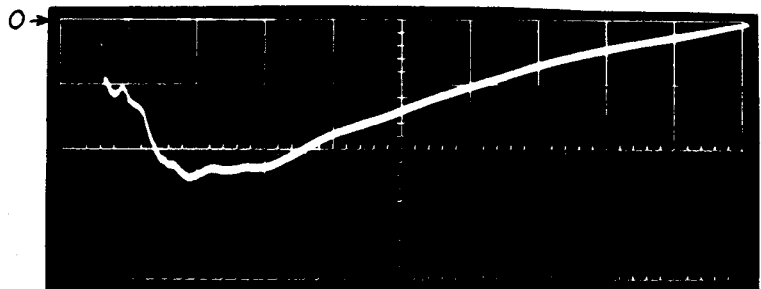
All oscillograms: 500 volts/division

1 μs/division sweep

I Introduction

The purpose of the tests reported here was to evaluate the effectiveness of proposed transient overvoltage suppressors under conditions approaching those observed in actual field measurements.

The experiments were based on previous measurements in order to insure that the test conditions were representative of actual conditions, and also would not endanger the equipment of third persons; i.e. that of neighbors or the power company.

Surges were injected in the wiring system of a house and measurement of the surges at various points of the house were made with the proposed suppressor connected at a central (fuse box) location or at a single outlet.

Although the conclusions apply directly only to a particular house wiring system, worthwhile inferences can be drawn for other applications.

II Test Conditions

A. General Considerations

Previous measurements and observations made during earlier parts of this program and reported under TIS 62GL191 allow to make a reasonable approximation of typical switching surges occurring in a house wiring system. Examples of these are also shown in Figures 4 and 5 at the end of this report.

Because of the difficulty encountered in making transient current measurement in "non-laboratory" conditions, it is nearly impossible to evaluate directly the energy involved in voltage surges. Further work is required in this area.

More specifically, the following facts are known, and allow some conclusions to be drawn:

1. Transients overvoltages in the 1500 volts range which occur "naturally" (i.e., not deliberately created for these tests) in a specific house (J. H. Ross, Schenectady) could not be detected at a significant level (over 400 volts) in the adjacent house (F. D. Martzloff, Schenectady). Thus we have an indication that the attenuation through the meter coils, service entrance and division of the traveling wave at the service pole is sufficient to make harmless to neighbors the surges which would be deliberately injected in a test house.

2. Field measurements have shown that surges due to switching of loads within a house is the most frequent source of damaging transient overvoltages in a house wiring system; protection against these (and eventually only these) would therefore decrease by several orders of magnitude the possible frequency of damaged semiconductor equipments.

3. Several instances were found where voltage crests were in the 1500-2000 volt range, with the duration of the major loop of the oscillation about 1 to 4 microsecond. Thus, a "typical" surge wave form should approximate these values.

4. Surge impedance of a house wiring cable was found to be in the 10 to 100 ohm range. Thus, for short pulses, currents as high as $\frac{2000}{10} = 200$ amperes may easily be involved.

B. Test Procedure

Therefore, based on the above facts, a series of tests were made at the residence of R. G. Hoft in Schenectady, where surge propagation measurements had been made in 1962.
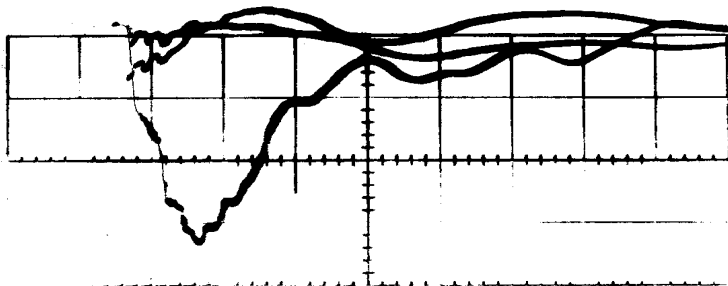
Voltage applied to one phase of house wiring (large pulse) and
surge passing through isolating transformer into both phases
of service entrance.
     (500 volts/division, 1 us/division linear sweep)

Service entrance

To bedroom outlet

To kitchen outlet

House fuse box

Temporary
isolating
transformer
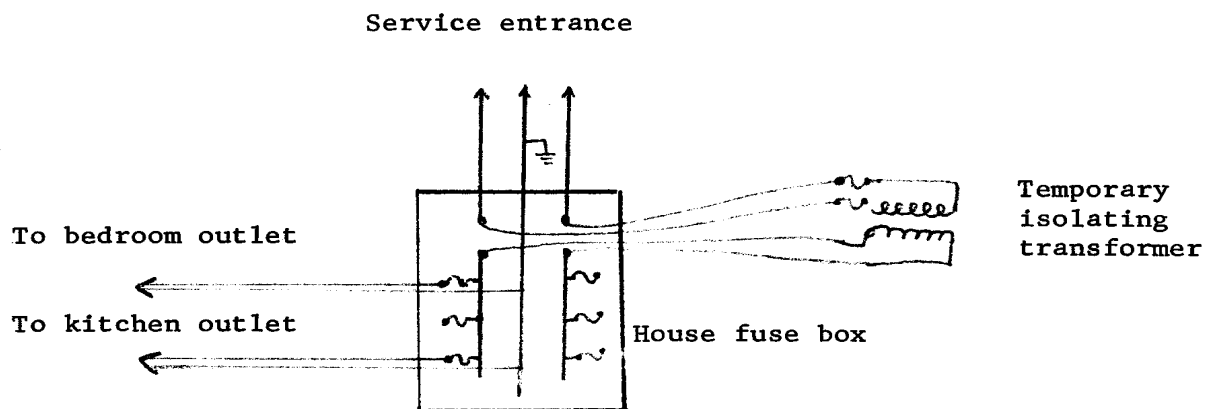
     Circuit diagram showing surge injection into house
     and attenuation of surge for service entrance.

FIGURE 1

The portable surge generator previously used in this work was used again. With additional capacitance added to the charging capacitor, it is capable of delivering single shot surges of 1500 volts crest and 3 microseconds duration into the house wiring system.

A temporary isolating transformer was inserted between the service entrance and the house fuse box in order to attenuate the surge sent into the service entrance, to provide further protection against surging adjacent houses.

Figure 1 shows the connections at the fuse box and oscillograms of the surge applied within the house compared to the surges transmitted to the service entrance.

Automatic recording oscilloscopes (those used for the field measurement of transient overvoltages) were used to make simultaneous recording of the surge at the sending and receiving end, and eventually at an intermediate point.

During the measurements, incadescent lamp loads were turned on, but other appliances were disconnected. Each branch circuit was generall; loaded with one or more 60 watt bulb; open end conditions existed at most wall recptacles, with the resulting reflection and voltage doubling effects.

Two test series were conducted; one with the surge injected at the fuse box and a proposed suppressor connected at a single outlet, presumed to protect whatever device may be connected at that outlet; the other test series was made with the surge injected at one outlet, and propagating to the fuse box where it met a proposed central suppressor installed there; from there the surge, or what was left of it, propagated through the rest of the branch circuits, and was measured at the same outlet as in the first series.

III Proposed Suppressors

The devices investigated in this test series were the following:

- 1" Thyrector cell, cat 6RS21SA10D10 rated 200 volts steady state

- 2" Thyrector cell, cat 6RS25SA10D10 rated 200 volts steady state

- 4" Thyrector cell, cat CRS15SA10D10 rated 200 volts steady state

- RC made of a 0.05 μF 1000 volt paper capacitor and 10 ohm 1 watt carbon resistor in series

- General Electric AC switch (5 layer switch) in series with a current-limiting resistor

- Hunt SSS switch (5 layer switch) in series with a current-limiting resistor

- General Electric controlled-avalanche rectifiers (back-to-back)

The Thyrector transient voltage suppressor has been available for some time, but its response for fast and short transients is not well defined. For very fast transients, it is expected that the junction acts as a capacitor. Prices range from $2.00 for the 1" cell to $24.00 for the 4" cell in quantities above 1,000.

An RC network is, of course, an obvious surge suppressor within the limits of its time constant. The values selected here were deliberately just short of the pulse duration in order to check the marginal case. Price of the two components is about $ 0.40 above 1,000 pieces.

The five-layer switch is a relatively new solid state device[1] which has the property of turning on, regardless of the polarity, when the voltage across its terminals exceeds a predetermined level. In the "off" state it presents a very high impedance right up to the turn-on voltage, contrary to the Thyrector which has a definite maximum steady state voltage rating determined by the leakage current.

The turn-on characteristics of the two five-layer units in this investigation have been measured and are included as Appendix I. It is

significant that the characteristic is far more "flat" than other devices such as gaps or arresters; the curves published in the final report of the 1962 program are also reproduced for reference in the appendix, together with the turn-on time of the five-layer switches.

One unit was a Hunt SSS switch available from Hunt Electronics, Andjon Ave., Dallas, Texas. Its steady state rating is 8 amperes RMS. In lieu of specific surge data, it was decided to limit the half-cycle surge current to 80 amperes peak, so that a 2 ohm resistor was placed in series to limit the 60 cps current following turn-on. Estimated price is $2.00 in quantities to selected customers.

Another unit was an engineering sample of the General Electric AC switch developed by the Rectifier Component Department. It is rated 25 amperes RMS with a ½ cycle rating estimated by ATL at 200 amperes, so that a 1 ohm limiting resistor was connected in series. No price information is yet available for this unit.

The controlled avalanche rectifier can also be used to a certain extent as a surge protector, although the purpose of connecting two diodes across the line in this test series was to compare the performance of a 7 AD diode to that of the diode tested in 1962 for surge characteristics, both of which have fairly comparable mass and physical configuration.

IV Test Results

A. First Series - Suppressor at Outlet

The surge was applied between ground and one line at the fuse box, and the proposed suppressor installed at an outlet in the kitchen connected to the same line. Voltages were measured at both locations, the corresponding oscillograms are shown in Figure 2 for the various

Sending end 20 μs total sweep 500v/division	Receiving end 20 μs total sweep 1000v/division	Additional device connected at receiving end
		none
		1" Thyrector 6RS21SA10D10
		2" Thyrector 6RS25SA10D10
		4" Thyrector 6RS15SA10D10
		0.05 μF and 10 ohms in series
		GE AC switch (25 Amp) in series with 1 ohm
		Hunt SSS switch (8 Amp) in series with 2 ohms
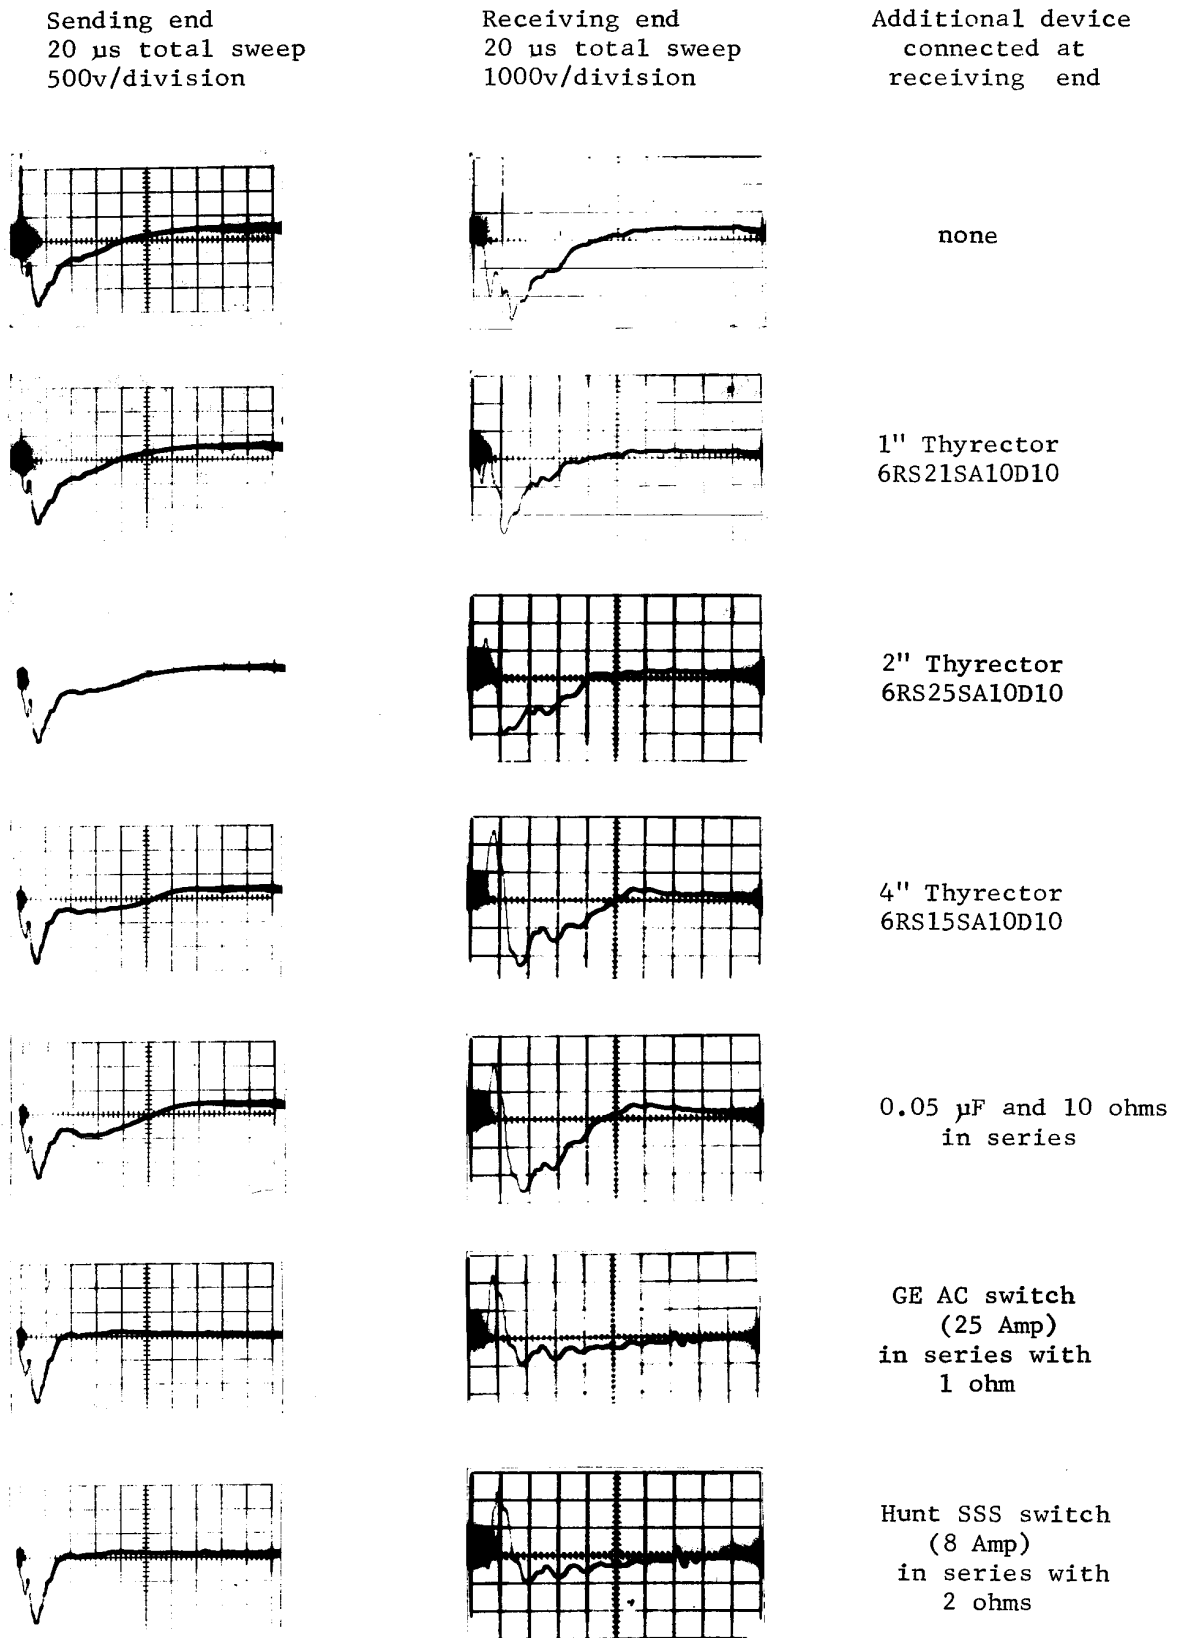
FIGURE 2

Surge applied at fuse box, received at kitchen outlet

types of suppressors. The following observations may be made concerning
the oscillograms:

a - No Suppressor

The voltage crest at the receiving end is approximately the double
of the voltage crest injected at the fuse box, corresponding to the open
transmission line condition; this is the extreme of the case where
there would be only a light load connected to the outlet to absorb any
of the surge energy.

b - 1" Thyrector Cell

The front of the wave is affected, but the crest level is not
significantly decreased; after the second division of the time scale
(2 μs), the surge is reduced to about 60% of the value without suppressor.
No further tests were made with this size cell since the effect on the
surge was so small.

c - 2" Thyrector Cell

The negative crest is reduced to about 70% of the initial value,
but a positive peak appears, due to the effect of loading the "transmis-
sion line" (Romex cable) with the capacitance of the Thyrector cell.

d - 4" Thyrector Cell

The same effects observed for the 2" cell are also apparent here,
with a greater initial positive crest as the capacitance of this cell
is larger.

3 - RC Network

The striking fact here is the similarity of the wave shape with
that of the 4" Thyrector cell, justifying the hypothesis that the initial
behavior of the Thyrector is similar to that of a capacitor.

f - Five-layer Switches - Both GE and Hunt

The positive crest which has appeared previously at receiving end

Sending end 100 µs total sweep 1000v/division	Fusebox 100 µs total sweep 500v/division	Kitchen outlet 100 µs total sweep 1000v/division
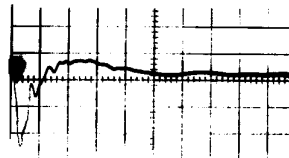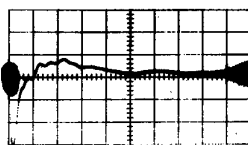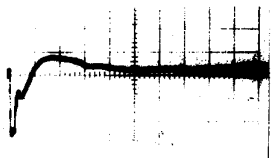
No suppressor
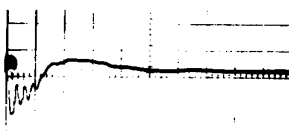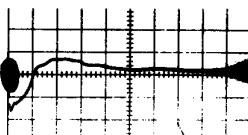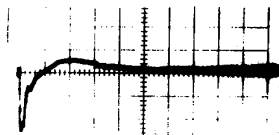
2" Thyrector
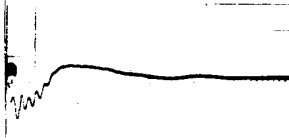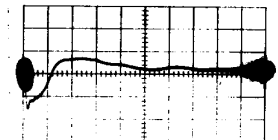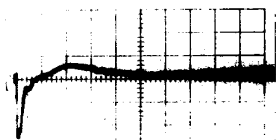
4" Thyrector
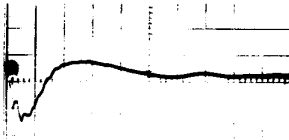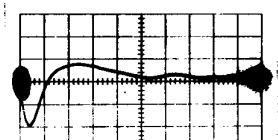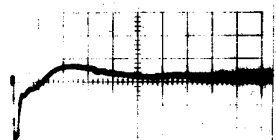
0.05 µF - 10 ohms
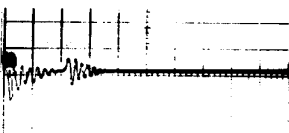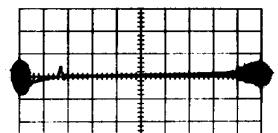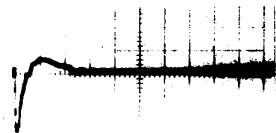
8A Hunt SSS with 2 ohms
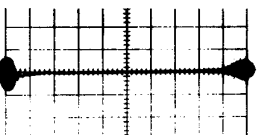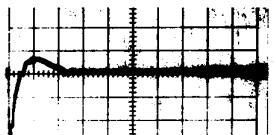
25A GE AC Sw. with 1 ohm
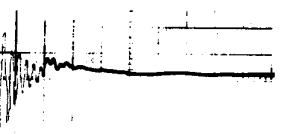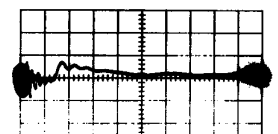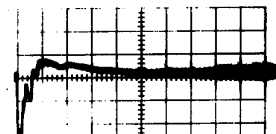
2 7AD back-to-back

FIGURE 3   Surge applied to bedroom outlet, received at kitchen outlet, with suppressor installed at fuse box

is not removed by the expected action of the switch, while the negative portion of the wave is limited to a substantially lower level. Thus, the significance of the initial positive crest is not quite clear. Because of the limitations of time, these readings could not be repeated. However, when compared to the next series, they give an additional indication of the performance of the suppressor. It is also apparent that the clamping effect of the switch is felt at the sending end after 3 microseconds.

B. Second Series - Suppressor at Fuse Box

The surge was applied at a bedroom outlet, between the ground side of the outlet and the other line at 115 volts. From these, the surge was transmitted to the fuse box, where a proposed suppressor was connected between the box ground and the same 115 volt line. From the fuse box, the residual surge resulting from division into the branch circuits and their action of the suppressor was transmitted through the house, and among other points to the same kitchen outlet used in the first series, where the incident surge, without any other suppressor, was measured. Voltage at the sending point as well as at the fuse box, directly across the suppressor, were also measured. The corresponding oscillograms are shown in Figure 3, and the following observations can be made:

a - No Suppressor

The surge applied at the bedroom outlet at 2500 volt crest appears only with a 1500 volt crest at the fuse box, as a result of the attenuation of the cable between the point of application to the fuse box as well as the division between the branches at the fuse box.

The surge leaving from the box and traveling towards the kitchen outlet appears there with a 2800 volt crest again as a result of the refelection at the high impedence line terminal.

b - Thyrector Cells (2" and 4")

The initial negative crest at the sending end is not appreciably affected by the presence of the Thyrector at the fuse box; the following positive oscillation however is reduced.

At the fuse box, the negative crest is reduced to half the value without the suppressor, and the positive oscillation is slightly reduced.

The resulting surge at the kitchen outlet is also reduced to about half the original crest value, with some oscillations or reflections.

c - RC

There again the similarity between the effect of the Thyrector and the RC is apparent. The reduction for the small value of RD is slightly less than for the Thyrector, but the wave shapes are quite similar, suggesting that for short transients, the Thyrector is effective inasmuch as the junction capacitance acts as an RD. It would be desirable to measure this capacitance; this will be attempted.

d - Five-layer Switches - GE and Hunt

For both switches, the initial negative crest at the sending end is not affected; the positive oscillation occurs sooner, as the clamping effect of the switch is transmitted back to the sending end; the clamping effect is then complete after 2.2 divisions of the oscillogram (3 us).

At the fuse box the clamping effect of the switch is such that the initial crest is lost within the beam halo, at less that 600 volts. The Hunt unit seems to take a slightly longer time - or higher voltage - to turn on, as indicated by the slope of the trace as it leaves the halo, and the short positive pulse at the probable polarity reversal of the surge.

The voltage at the kitchen outlet shows the resulting low amplitude oscillations or reflections for the surge existing at the fuse box.

e - Controlled Avalanche Rectifiers

Two diodes connected back-to-back were also used as a possible suppressor, as a side effect of another test discussed later. The avalanche effect of the rectifier effectively limited the crest of the voltage surge at the fuse box, the maximum crest value for this 400 volt rated diode did not exceed 800 volts.

f - Controlled Avalanche versus Conventional Rectifiers

Attempts were made to correlate the test results of the 1N679 diode investigation made in 1962 with the results under the simulated switching surge of this test series. The 1962 tests used a .1 x 5 us wave shape while the present simulated surge had an approximate wave shape of .2 x 2 us wave shape.

The 1N679 diode (2 samples) survived a 2000 volt crest, while it failed at 3000 volts (average failure level for similar conditions under .1 x 5 us wave were 1500 volts). The difference is attributed to the shorter impulse duration.

On the other hand, the 7 AD controlled avalanche rectifier (sub-miniature size) which proved an effective suppressor for the surge up to the 2000 volt level, also failed (by short circuit) for the energy level corresponding to the 3000 volt crest surge which was also fatal for the 1N679. Here again, because of time limitations in the non-laboratory conditions, the test was not refined further.

V Discussion of the Results

The three types of suppressors investigated in this test series represent radically different approaches to surge protection, and thus their effectiveness and limitations, as well as cost, are widely different. The Thyrector has proven adequate capability of energy absorption; however,

for fast transients, its action is limited to that of the equivalent

junction capacitance, which is not to say that it is ineffective. The

Thyrector will then have the same limitations as an RC for fast transient

while of course having a higher price. On the other hand, for longer

transients, when the RC becomes ineffective to absorb the energy, the

Thyrector can dissipate it.

When fast transients are involved both the RC and the Thyrector

act as capacitance dividers. Their effectiveness in limiting voltage

transients thus depends on the load circuit parameters and will vary

depending on the load conditions. This makes them questionable as

universal surge protectors to be merely plugged in any circuit. For

specific applications when the load is well defined, this objection

does not apply.

Now, the five-layer devices operate as voltage sensitive switches.

As long as there is enough current (milliamperes) available to turn

them on, their clamping effect is independent from other cirucit param-

eters. Their action is also the fastest (200 to 500 nanoseconds) and

the voltage they allow to pass the lowest. The junction capacitance of

these devices is not known at this time; if anything, it contributes

further to the surge suppression.

When applied on an AC line (obviously they could not be used in a

DC circuit without forced commutation or other circuit complexity), the

60 cps power supply will be shorted from the moment of application of

the surge to the next zero of the sine wave. This may or may not be an

objection. Of course, a current-limiting resistor will be needed in

series with the switch if the impedance of the AC supply is too low

for the short-circuit current to remain below the ½ cycle surge rating

of the switch. The cost of the device is not yet very firm. There is a strong possibility that if other applications justify large production quantities, or if the use as an effective surge suppressor can become popular, the price may be lower than that of Thyrectors.

VI Summary and Conclusions

Three types of surge suppressors, Thyrector, RC's and five-layer switches, were investigated under conditions approximating typical switching surges generated within the home, which is the most frequent type of transient overvoltage in a house witing system (Figure 4 and 5).

The crest of the surges was in the range of 1500 to 2000 volts with a duration in the order of 3 microseconds.

The resultant attenuation is tabulated below.

SUPPRESSOR	% of original surge at location of suppressor	% of original surge at other points
2" Thyrector	50	50
4" Thyrector	50	50
RC	66	66
GE "AC Switch"	10	30
Hunt "SSS Switch"	10	30
Controlled Avalanche Diode	30	90

In terms of attenuation per dollar, the RC is the lowest cost, then the five-layer switch and last the Thyrector. The limitations are most severe for the RC whose effectiveness is dependent upon the circuit parameters anc cannot attenuate long surges. The Thyrector effectiveness is limited in the initial period by the circuit parameters, and in order to have sufficient junction capacitance, an extremely large (and expensive) cell may be required. A combination of Thyrector with RC is more appropriate.

The five-layer switch, primarily attractive for AC circuits is the most effective and the most promising universal surge suppressor which has been found in the present state of the art.

APPENDIX I

Turn-on Characteristics of
Five-layer Switches

Test Circuit

A capacitor C_1 is charged at an adjustable voltage. It is discharged into a capacitor C_2 through resistor R_1 when the thyratron T fires. The test piece, with or without additional parallel resistance is in parallel with C_2. The rate of voltage rise is controlled by R_1C_2' while the rate of decay is controlled by $R_2'C_1$ where R_2' and C_2' are the equivalent values of all the resistance and capacitance across the terminals of the test circuit.
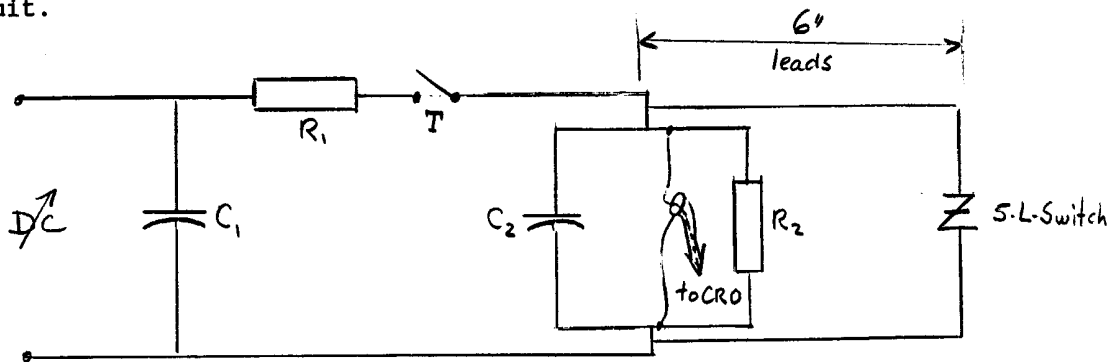
The values used for the data shown below are the following:

R_1 = 25 ohms, non inductive

R_2 = 750 ohms, non inductive

C_1 = 0.01 μF 15 KV oil filled

C_2 = 0.001 μF 15 KV oil filled

Resulting in a .1 x 5 μs double exponential wave where where R_1 and C_2 shape the tail of the wave

The wave shapes of the applied voltage and of the voltage measured with the five-layer switch connected across C_2 are plotted on the following page, from the oscilloscope readings.

TABLE I

Turn-on Characteristic of Five Layer Switches
With .1 x 5 μs Voltage Wave

Original Crest Volts	Hunt Unit			GE Unit		
	V_R Crest Volts	t_1 μs	t_2 μs	V_R Crest Volts	t_1 μs	t_2 μs
600	250	.5	.1	220	.5	.1
800	300	.5	.1	220	.5	.1
1000	350	.5	.1	225	.5	.1
1500	420	.5	.1	250	.5	.1
2000	500	.5	.1	300	.5	.1
3000	750	.5	.1	350	.5	.1
4000	1000	.5	.1	400	.5	.1
DC turn-on	235			220		

NOTES- 1   The GE unit shows a lower increase in the voltage V_R as the original crest voltage is increased.

This may be due to a lower resistance across the turned on switch or to a longer function capacitance (7½ x 7½ mm for the GE unit and 3 x 3 mm for the Hunt unit). Part of the voltage V_R is also due to inductive drop in the 6" leads used to simulate a practical connection to the protected circuit.

2   An increase of one decade in the values of C_1 and a decrease of one decade in the value of R_2, resulting in the same wave shape with 10 times the energy flowing across the switch did

NOTES (continued)

      not produce significant change in the time to turn on. The

voltage V_R was increased by about 20 to 30%, as a result of

the increased IR + L $\dfrac{di}{dt}$ increase across the switch and leads.
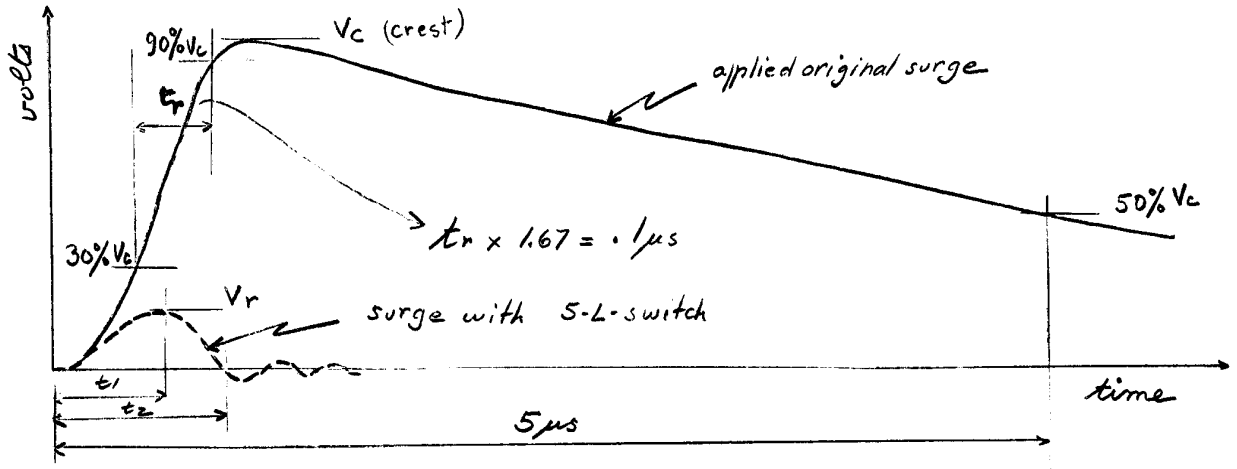
In order to apply increasing surge voltages, the DC voltage of the

charging circuit was raised step by step, resulting in the crest volts

values shown in Table I without the five-layer switch across C_2. The

Hunt unit and the GE unit were successively connected across C_2 with

6" leads simulating a practical connection to a circuit to be protected

and the crest V_R across the protected circuit read as well as the times

t_1 and t_2, which are tabulated in Table I.

Conclusion

     The voltage clamping action of these devices is considerably faster

than any other surge suppressor, and the time to clamp practically con-

stant. The crest of the voltage allowed to pass does, however, increase

with the crest of the initial surge; this corresponds to a simultaneous

increase of the rate of voltage rise since the time to crest is held

constant, as well as an increased current through the device and the leads.

Compared to other voltage sensitive devices, such as the gaps or arresters measured in 1962[2], or a Thyrector under the same conditions, the surge suppression is considerably greater.

Time-lag Characteristics of Various Gaps - 0.1 μs rise
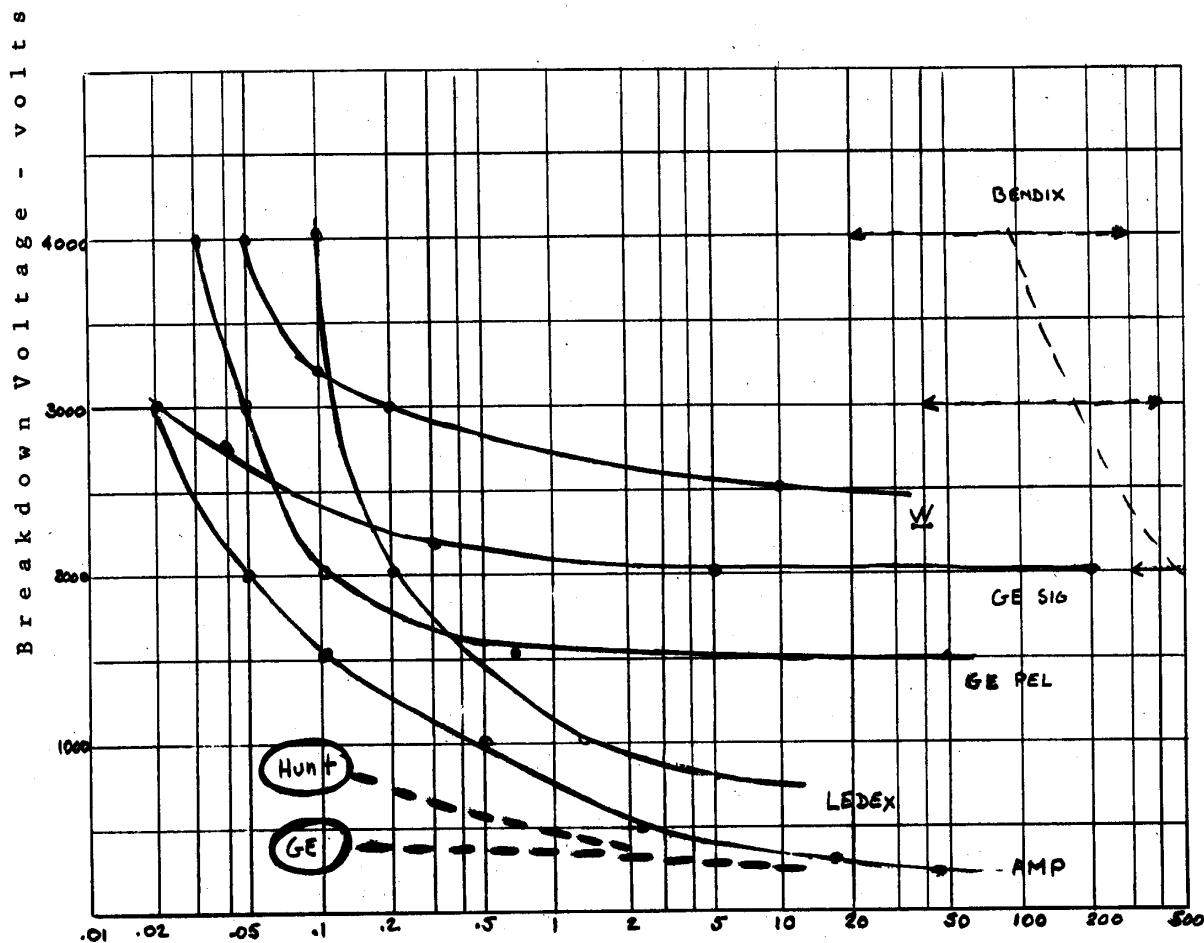
1963 Data: (Hunt) & (GE) 5layer switches. equivalent time-lag characteristic

1962 Data: <u>Gap Description</u>

BENDIX	-	Cat. TG98 Rated 375 volts
<u>W</u>	-	Style 632A189A01 Rated 175 volts max.
GE Sig	-	Signal arrester Cat. 9LA4C4
GE Pel	-	Secondary arrester Model 9L15CCB001 rated 175 volts max.
LEDEX	-	Transient Control Part No. A-46800-001 rated 200 volts
AMPEREX	-	Cat. 4369

Points shown are average values of several single shot, except Bendix which was extremely erratic.

Time-lag Characteristics of Various Gaps - 0.1 μs rise

REFERENCES

1. Two-terminal Asymmetrical and Symmetrical Silicon Negative Resistance Switches, Journal of Applied Physics, Vol. 30 #11, November 1959, Pg. 1819 - 1824.

2. TIS 62GL191 - Transient Overvoltages in Low Voltage Systems and Their Effect on Solid State Products.

ACKNOWLEDGMENT

The author wishes to acknowledge the contributions of J. D. Harnden, Jr., in establishing the program of this test series and in the presentation of the test results.

Typical Surges Recorded at
Mr. W.H. Bellamy's House - Stewart Manor, L.I., N.Y.
Feb. 16-Feb. 21, 1963
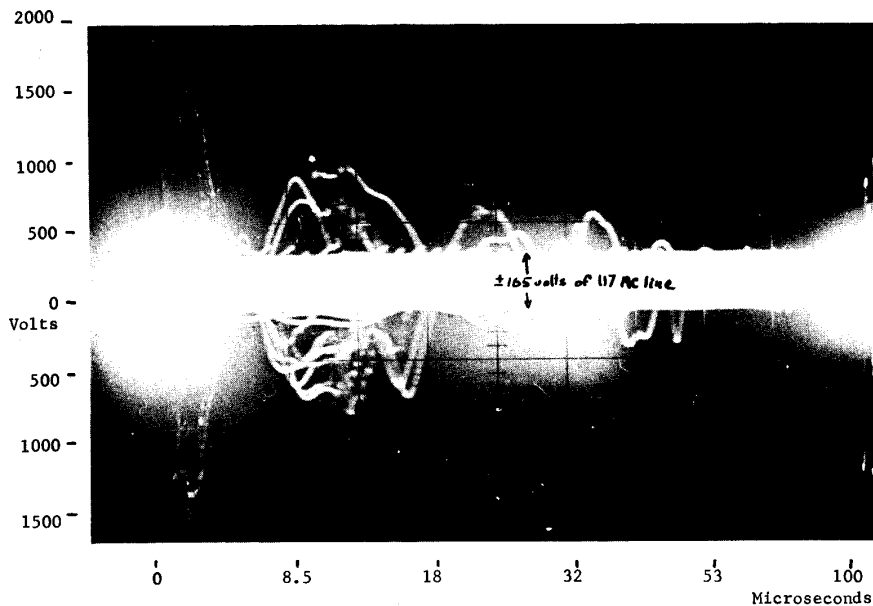
Composite record showing surges for a 24-hour period.

Oscilloscope is triggered for each surge, plus once every hour, resulting in $\pm$ 165 volt band of steady-state 60 cps voltage.

Recordings above 1800V are blanked out by oscilloscope.

±165 volts of 117 AC line
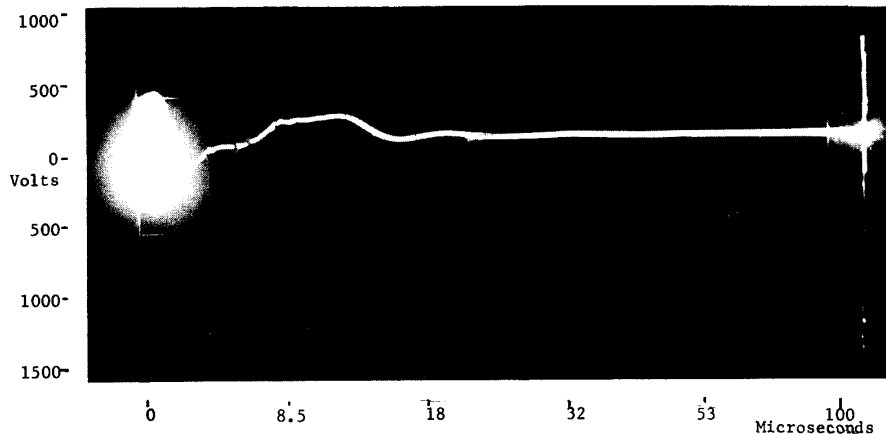
Single surge occurring 150 μs after initial, low amplitude surge triggered the oscilloscope.

Cause not determined.
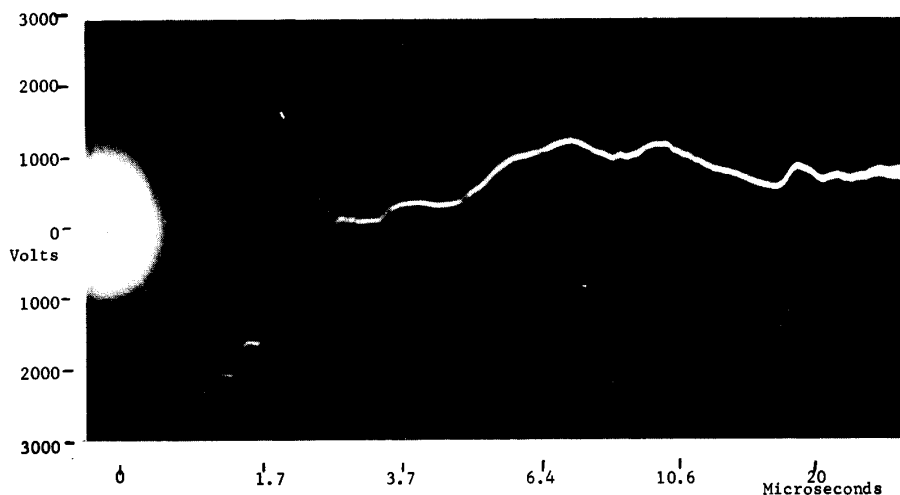
Maximum recorded surge, at 2600 volts.

In a 5-day period surges of this wave shape were recorded as follows:

Number of surges	Voltage Range
1	2500 - 3000
21	2000 - 2500
18	1500 - 2000
13	1000 - 1500

Cause: H.V. transformer for oil furnace interrup

FIGURE 4

TYPICAL SURGES RECORDED

AT H. R. SELLERS, UTICA, N. Y.

JANUARY 1963
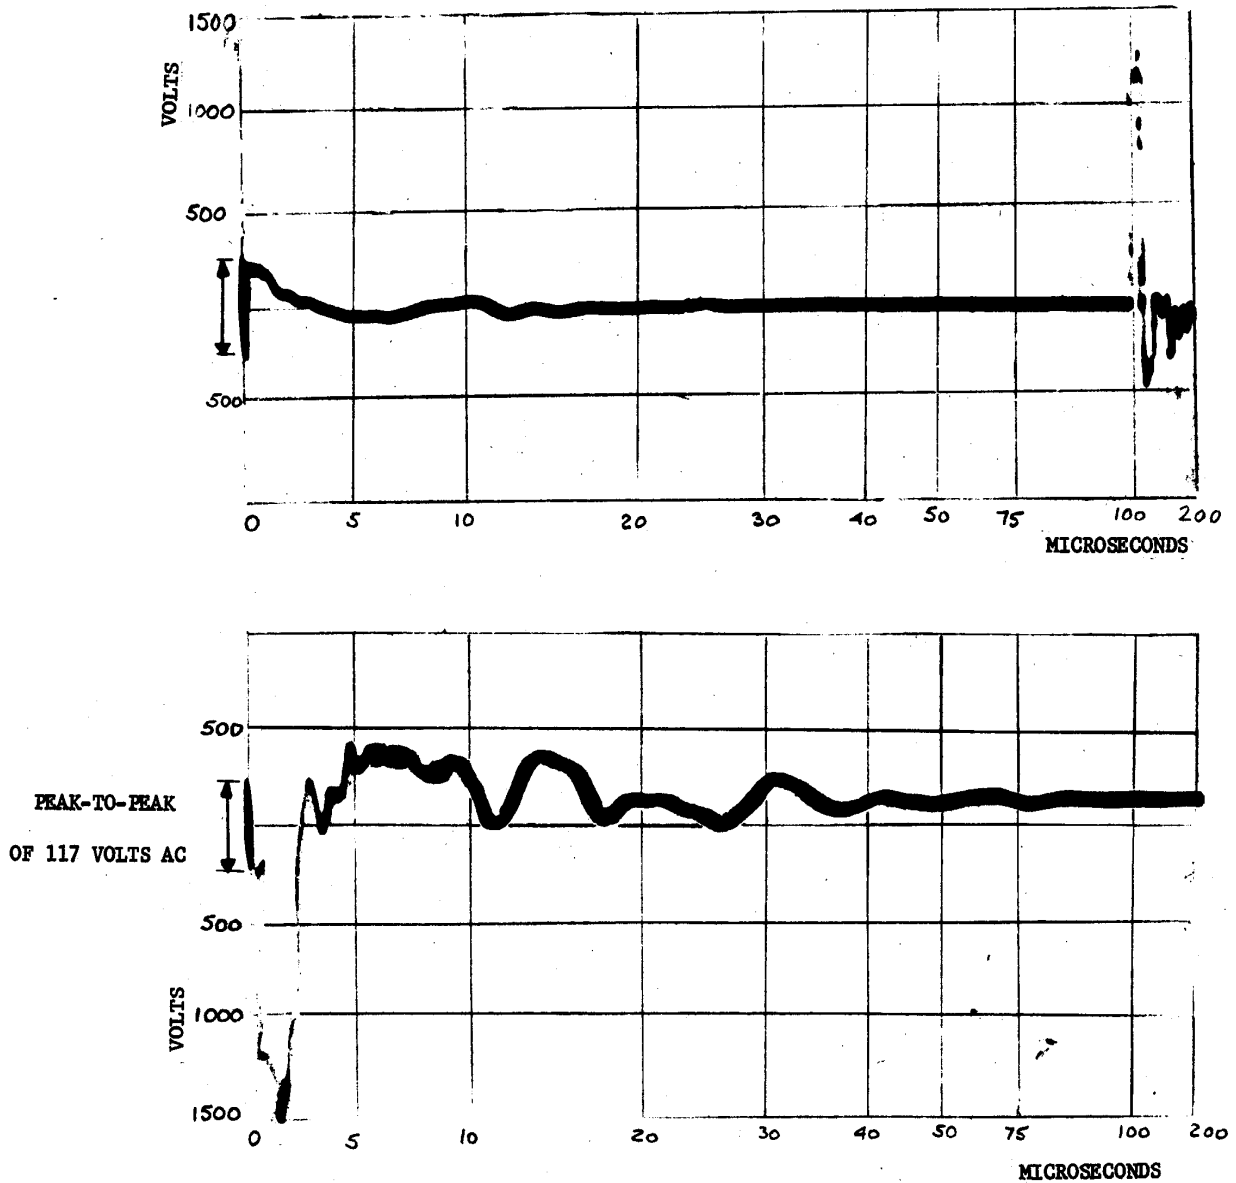
FIGURE 5

SURGE VOLTAGES IN RESIDENTIAL POWER CIRCUITS

Surge Voltages in Residential Power Circuits

G.J. Hahn
General Electric Company
Schenectady NY

François Martzloff
General Electric Company
Schenectady NY
f.martzloff@ieee.org

Significance:
Part 3 – Recorded occurrences

One of the first papers reporting surge recording in low-voltage ac power circuits (see footnote).
Both waveform information and frequency of occurrence marked the beginning of the IEEE effort toward characterizing surge voltages in low-voltage ac power circuits, a departure from the traditional unidirectional and separate 1.2/50 and 8/20 waveforms in use for high-voltage equipment testing.

In the mid-sixties, when these recordings took place, there were very few, if any, surge-protective devices (SPDs) installed in residential power circuits. After the emergence of ubiquitous consumer-type SPDs, the results of subsequent monitoring campaigns were drastically changed (See "Galore" in Part 2) but the information is still valid for the frequency of occurrences to the extent that the origins of surges have not changed, only the observed levels are now considerably reduced by the proliferation of SPDs.

---

[1] *A nostalgic footnote:*
As noted on the cover page,1967 IEEE Conference papers were available at the meeting at the then-current price of \$0.75, and later for \$1.00. However, they became no longer available from IEEE some time thereafter. This reprint is one of the rare archival records.

Conference Paper

SURGE VOLTAGES IN RESIDENTIAL POWER CIRCUITS

G. J. Hahn

F. D. Martzloff
Member IEEE

Both of:
General Electric Company
Schenectady, N. Y.

Paper No.

31 CP 67-430

SURGE VOLTAGES IN RESIDENTIAL POWER CIRCUITS

by
G.J. Hahn and F.D. Martzloff
Research and Development Center
General Electric Company
Schenectady, New York

Abstract

Special instrumentation was developed for monitoring the magnitude and frequency of occurrence of surge voltages in residential circuits.

Over a period of two years, more than 400 locations in 20 cities were surveyed. Monitoring was accomplished by automatic recording cathode ray oscilloscopes and simple surge counters.

Two significant sources of surge voltages were identified: load switching within the house, and external surges, most likely associated with lightning, coming through the service drop.

Internally generated surges as high as 2500 volts were recorded during this test program, and six of the 250 households (i.e., 2.4 percent) in the sample experienced surges of this type in excess of 1200 volts once or more per day. A statistical evaluation indicated that a 90 percent confidence interval for the true proportion of homes with such surge voltages is between 1.0 and 4.7 percent.

Surges due to lightning reaching 5600 volts have been recorded on a 120-volt overhead distribution line. Independent evidence shows the occurrence of a number of surges in excess of 2000 volts.

In this study, a total of 8 surges in excess of 1200 volts were caused by lightning and recorded on 39 counters at room outlets in 14 localities over the summer months.

Introduction

The successful operation of semiconductors and new insulation systems in appliances and consumer electronic devices may be adversely affected by transient overvoltages occurring on the 120-volt power supply. Detection and measurement of these transient surges permits a designer to provide suitable built-in tolerance, or at least to recognize that there is a need for appropriate suppression or protection.

Special instrumentation has been developed for detection and measurement of surge voltages. In the first phase of testing automatic recording cathode ray oscilloscopes provided complete information on wave shape, and on magnitude and frequency of occurrence at a small number of arbitrarily chosen locations. These data, though statistically restricted, were adequate to demonstrate the existence of the problem, define some sources, and indicate typical wave shapes. It also became clear that there was a need for a larger sample that would be more statistically valid.

In the second phase of testing, one hundred surge counters, simple in design and easy to install, were developed especially for this program. These counters were installed in several hundred homes in various cities located in the East and middle West of the United States.

The purpose of this paper is to discuss recordings obtained during the two phases of this program and the statistical aspects of the results. It is hoped that publication of this paper will encourage other investigators to publish their findings. This would provide a broader statistical base for verification of the frequency and magnitude of surge voltages.

Instrumentation

Recording surge voltages in the field poses special problems. For example, the instruments cannot be continually attended and the signals to be recorded are unpredictable in magnitude, polarity, and frequency of occurrence.

In cooperation with Tektronix, Incorporated, a type 515 cathode ray oscilloscope was modified to record transients on film, with automatic advance of the film after a recording.

The modifications involved a change in the trigger and sweep circuits, as well as removal of all knobs (an important detail for an instrument to be left in all types of locations).

Most oscilloscope trigger circuits are polarized. This often causes a loss of recording when the polarity of the initial signal is not known. For surge recording, the trigger circuit was modified by feeding to the time base trigger through two OR logic diodes the push-pull signal that is applied to the input of the oscilloscope delay line. With this modification, the sweep is started for either polarity, while the signal is delayed before reaching the deflection plate of the CRT. In addition, the conventional blanking circuit holds the beam in low intensity before the sweep starts.

A second modification changed the sweep from a constant speed to a logarithmic speed, fast at the start and slow toward the end. This allows the recording of an impulse front with good resolution, while providing sufficient duration of the sweep to record a long tail.

Finally, a relay was added with its coil energized whenever the beam sweep is triggered. Through a set of contacts on this relay, the film advance sequence in the camera is activated.

The camera, attached to the scope bezel, is a Beattie-Coleman system, accommodating 100 feet of 35 mm film, with no shutter, and recording on a 24 x 36 mm frame the trace displayed on the CRT. Following the sweep, the contact mentioned above closes the motor circuit, advancing the film to the next frame in a few seconds. This film transport duration is matched in the oscilloscope trigger circuit by a hold-off so that no sweep will occur during film advance.

In order to prevent the film from being fogged by extended exposure to the faint glow on the phosphor (caused by imperfect blanking of the beam, cathode glow or light leaks) a built-in timer in the oscilloscope advances the film by one frame every hour. This provides an approximate method for timing the occurrence of surges. Since the surge-voltage tests were conducted, an automatic time recording feature has been added to give a more precise recording of time at each event.

Figure 1 is a photograph of this oscilloscope camera system. The relatively high cost of this system, its conspicuous presence (e.g., size, camera noise, etc.) in a home, and the amount of film to be scrutinized frame by frame limit the number of locations at which recordings can be made. However, for conclusions to rest on a sound statistical basis, it is necessary to investigate a large number of locations. To be acceptable to cooperative home owners, a transient detector should therefore lend itself to inconspicuous installation and simple data handling. Thus, a device which can merely be plugged into a wall receptacle, and that has a digital counter indicating the number of surges occurring above a specified threshold is satisfactory for widespread recording.

The circuit shown in Figure 2 was developed for the purpose, and packaged as shown in Figure 3. This device is connected to a wall receptacle by a conventional appliance cord, not a special probe. This connection is simple, establishes a typical final path for a surge impinging upon any appliance connected to this particular wall receptacle, and provides power for the high impedance rectifier circuit and a signal input to the trigger-sensor circuit.

A crudely compensated divider (R1C1/R2C2) attenuates the incoming surge before application to the Silicon Symmetrical Switch (SSS). This device has the characteristic of turning on abruptly whenever the voltage across it reaches a threshold, such as 250 volts. This threshold remains constant for durations as short as $0.1 \mu s$. When the SSS turns on, the attenuated surge is applied to the gate of the very sensitive, fast switching Silicon Controlled Switch (SCS). If the polarity of this surge is positive, the SCS turns on,

allowing the capacitor C to discharge through the coil of the solenoid-actuated counter S. A high impedance (50,000 ohm) divider and half-wave rectifier provide a trickle charge 15-volt supply for the capacitor C. The resistance of this divider represents a negligible load for the house wiring system, yet is sufficiently low to allow some leakage in the electrolytic capacitor C. The long charging time (several seconds) of the capacitor is not objectionable, since the transients to be detected do not have a high repetition rate.

Calibration of the circuit is obtained by adjusting the value of the divider (R1C1/R2C2). In these tests, the threshold level was set at 1200 volts for one group of counters and at 2000 volts for another group. A bench circuit was set up, whereby a surge with adjustable level and duration could be superimposed on a 60 Hz, 120-volt power supply. Some consideration was given to the need to segregate, or filter out, the surge from the 60 Hz power voltage; in this case, however, with the minimum level at 1200 volts, the base 170-volt crest represented a small contribution and was included in the signal detected by the circuit. Surges with approximately flat top and durations from several microseconds to 0.2 microsecond were applied to determine the variation of the threshold voltage as a function of surge duration. A typical response curve is shown in Figure 4. The response of this crest-indicating counter can be considered satisfactory, since the oscilloscope recordings in homes, as will be discussed later, have indicated that the shortest half-period of oscillatory surges is in the order of 2 microseconds.

Recording Procedure

In the first phase, oscilloscopes were installed at the basement service entrance of homes in the Schenectady, New York area. These locations do not represent a statistician's ideal sampling, but, during the initial phase of the program, the nature of transients rather than statistical accuracy was the major subject of interest. Later in the program, the range of locations was broadened to include homes in other urban and rural areas, particularly in Florida and South Carolina.

In the second phase, surge counters were installed at unspecified outlets in the homes of engineers in 20 cities in the northeast and midwest. Two distinct recording periods were scheduled: winter, because there is usually a minimum of lightning activity at that time of year, and summer, which ordinarily includes a maximum of lightning activity.

Since the oscilloscope input circuit operates at a level of a few volts, it is somewhat sensitive to direct radiation of electromagnetic noise in the preamplifier, even if there is no signal from the probe. In order to discriminate against this type of spurious indication, the recording procedure included a period during which the oscilloscope probe was shorted with the ground terminal remaining connected, so that spurious signals due

to ground loops would be detected. In this manner, any noise entering the system could be recorded and later recognized for what it was in the analysis of the recordings made with the short circuit removed from the probe.

The surge counters record only one polarity; in order to minimize record keeping by the homeowner, the connection of the cord was not polarized. In the event of an oscillatory surge (which is always quickly damped in these systems) two cases of counting can occur. For instance, the high side of the divider can be connected to the "hot" terminal of the receptacle (Figure 5). If the first half-cycle is positive and exceeds 1200 volts, a count is registered. If the first half-cycle is negative, and the second, positive half is highly damped, no count is registered. If the first half-cycle is well above 1200 volts causing the second half, in spite of some damping, to exceed 1200 volts, a count is registered. For the reverse connection, the same would occur for reverse polarity. Thus, the actual number of surge occurrences of both polarities in excess of 1200 volts is between 1 and 2 times the number indicated by the counter. The objective of the recording in this test series was only to determine whether or not surges occurred rather than their exact number. Consequently, the value of the multiplying factor is not very significant.

Results Of The Recordings - Oscilloscopes

The first recording analysis revealed that some homes were subject to frequent surge voltages, some experienced only a few isolated surges, and others did not experience any surges in excess of the trigger level (300 to 400 volts). Furthermore, among those installations where surge voltages frequently occurred, the surges at some houses were relatively low (rarely in excess of 800 volts), while other houses had surges in the range of 1200 to 2500 volts.

Rates of surge occurrence ranged from zero (no surge in one to two weeks) to 0.5 per hour, with peak values from 400 volts (trigger threshold) to 5600 volts.

At the conclusion of the recording program, a total of 16 homes and two overhead distribution poles had been monitored for a total of 7000 hours. The peak of the surges was distributed as shown in Figure 6a; the most frequent and severe surges were distributed as shown in Figure 6b.

Further analysis of some recordings was made by deliberate switching of loads in the houses where frequent surges had been observed. In some cases, the operation of a specific device (e.g., oil burner, fluorescent lamp, pump motor, refrigerator, food mixer, etc.) was found to be the cause of the surges. In other cases, no amount of deliberate load switching could reproduce surges such as those recorded during unattended monitoring. The home owner was occasionally able to correlate surge recordings with lightning or power system disturbances.

A pattern emerged from all this information, showing two definite causes of surge voltages in the homes:

1. Load switching in the house occasionally produced transient surges; these affected only that particular house. For any particular house, these transient surges had a wave shape which was consistently repeated with variations in amplitude along the entire film recording. This probably resulted from combination of switch characteristics and the impedance of the house wiring system; the variations in amplitude were probably caused by variations of the switching angle and/or connected loads. Typical wave shapes of the recorded surges are shown in Figures 7a, 7b, and 7c.

In one case, it was possible to install an oscilloscope in a house adjacent to that where repetitive surges up to 1700 volts were being recorded. The service drops were connected to the same pole, yet no surges occurring simultaneously were recorded in the second house.

2. Surge voltages not associated with load switching within the house were associated with lightning storms. In some cases, the home owner was able to correlate the film advance counts with the storm. Although recorded during lightning storms at two different locations, the surges shown in Figures 8a and 8b present the interesting characteristic of being oscillatory at a frequency in the range of 300 kHz. The surge shown in Figure 8a was recorded at the overhead distribution line (oscilloscope mounted on the pole), while the surge of Figure 8b was recorded at the service entrance in a home. The first exhibits far less damping than the second; this might be explained by the lower damping due to lower resistance of the system at the pole than at the end of a service drop.

Both of these surges, as well as most of the other surges recorded during lightning storms, exhibit this oscillatory characteristic at a frequency which is nearly constant for a particular locality. This constancy suggests that the oscillation of the system followed an excitation caused by the lightning stroke. A number of surges in the range of 800 to 1200 volts were observed during several storms. The maximum surge voltage recorded was 5600 volts; several other surges recorded during the same period were in excess of 4000 volts.[1]

Results of The Recordings - Counters

With the two causes of transients identified by the oscilloscope measurements, the surge counters were applied in two separate programs. First, during the winter months, the counters were installed in a large number of houses for periods of one or two weeks; the objective was to

determine how many houses sustained repetitive surges. Second, during spring, summer, and fall, each counter was left at one or two locations for periods of 9 to 48 weeks; it was known from the first test that these homes were not subject to load switching surges. The objective was to determine the frequency and characteristics of externally generated surges, presumably caused by lightning.

The first period produced the data shown in Table 1, and the results obtained during the second period are shown in Table 2.

Statistical Analysis of The Recordings

Internally Generated Surges

The data in Table 1 show that 6 houses, or 2.4 percent, were subjected to repetitive surges from among a total of 250 homes sampled. The true percentage doubtless differs somewhat from 2.4 percent due to statistical variations. However, one may be 90 percent confident that the true percentage is between 1.0 percent and 4.7 percent.* This band could be narrowed by taking additional samples. However, it should be noted that the precision is proportional to the square root of the sample size. Thus, four times the number sampled, or 1000 homes, would be necessary to cut the size of the statistical error band by approximately one-half. Since the above results refer to statistical variations only, they do not take into account possible biases due to such factors as restrictions in selecting members of the sample (principally engineers in a number of designated locations) or the time of year (winter months).

The probability of internally generated surges undoubtedly varies among economic groupings (i.e., the devices in use in homes probably vary with the economic status of the resident); however, devices found to generate surges (i.e., furnaces, refrigerators, etc.) exist in most homes.

Externally Generated Surges

Results from the second testing period that was concerned with externally generated surges are shown in Table 2. From 39 counters installed in a total of 91 homes in 14 localities, a total of 8 occurrences in 6 separate localities were observed during an equivalent exposure time of 846 weeks. A ninth occurrence was disregarded in this analysis because it occurred in the same home during the same storm. Of the two pairs of occurrences which took place in the same location, one pair occurred during the same storm and the second involved two occurrences at different times.

Analyses could be conducted based on the following alternative assumptions:

1. Voltage surges above 1200 volts occur only during the period of the year that the counters were installed in the homes. Thus, although the counters were in homes for only part of the year, the time involved (i.e., the summer months) was so chosen that no further surges would have been noted even if each counter had been run for 52 consecutive weeks. The average number of surges per year would then be 8/39, or 0.205.

2. Voltage surges occur randomly at a constant rate throughout the year. Thus, a counter which was in use 9 weeks, on the average, would be subject to a third as many surges as a counter in use for a period of 27 weeks. Under this assumption, a total of 8 surges observed in a total time equivalent to 16 years (846 weeks) yields an average of 0.5 surges per year.

Using these two extreme assumptions, a range could be established for the estimated number of surges per year in a larger sample, based on this specific sample. The above calculations refer only to single polarity surges. If all surges are being considered, the given values must be multiplied by a value corresponding to the additional proportion of opposite polarity surges above 1200 volts which do not also result in positive surges above 1200 volts. This multiplying factor is probably about 1.6; it accounts for the damping between the first and second 1/2 cycle of an oscillatory surge.

Lightning-induced surges are likely to affect more than one house when they occur. Local geographical and meteorological conditions are critical influences on these surges; however, these factors could not be considered in this preliminary investigation.

To relate the above data to risk of appliance failure, the given values must be modified by the probability that a surge above 1200 volts would cause failure of operating appliances. Failure effects would vary with different appliances.

Possible Further Analysis

A more refined analysis for a probability measurement of voltage surges per lightning storm is possible if the geographical location of the homes, the occurrence rate of lightning storms during the testing period, and exact dates at which voltage surges occur is considered. The resulting values can then be used in conjunction with information given in Reference 5 to calculate the probability of a voltage surge in any specified geographic area, during a particular part of the year. Such an analysis would remove the need for making one of the two alternative assumptions stated above and lead to a single set of estimates. However, this would require more detailed data than could be collected in this program.

---

*This result is obtained by the well-known method of setting confidence intervals for a sample percentage. Further details may be found in statistical texts.[2,3,4]

Finally, it is noted that if one has knowledge of the actual voltage surges, rather than merely the information concerning whether or not a surge above 1200 volts occurred, a more sensitive analysis is possible. In this case, for example, probability plotting and other techniques based upon the statistical theory of extreme values[4,6] might well be applicable.

Effects of Surge-Voltages
On Connected Electrical Devices

The surges which have been recorded in this program occurred during normal operation of the household, with no knowledge of the connected load situation at the time of occurrence.

The question of energy involved in the surge is related to the impedance of the system, since these recordings provide voltage data only. Surge impedance measurements of house wiring cable indicate a value of 100 to 300 ohms for a typical branch circuit, so that the surge impedance at the service entrance could be in the order of 5 to 10 ohms. However, this low value exists only for the travel time (i.e., a fraction of a microsecond). Connected loads will have a lower impedance than that of the branch circuit. This value will be dependent upon frequency whenever inductive components are present. These loads will absorb part of the energy of the surges and thus lower their peak.

Devices such as motors and transformers have solid insulation and such a long history of successful application that their performance is not in question. Perhaps unusual failures can be explained by extreme values of surges as indicated by the data.

Defective wiring practices (e.g., pinched insulation, reduced air clearances in wall boxes, etc.) will cause air flashover with or without 60 Hz power follow. In fact, one house was brought to our attention because of complaints of sparking in a light fixture. With the switch in the ground wire and the frame attached to a grounded pipe, flashover at 1700 volts was observed in correlation with the start of an oil burner in the house. This defective light fixture was acting as a voltage limiting gap for the house.

Appliances containing semiconductors and directly exposed to the line transients may be more vulnerable. Actually, the 1200-volt threshold level was selected as the result of this consideration. It is interesting to note that, although a number of surges above 2000 volts were recorded by the oscilloscopes, the few surge counters calibrated for 2000 rather than 1200 volts did not produce any recording above 2000 volts.

An independent study of clock motor failures produced information on failure rates versus withstand levels. This study was very pertinent to the surge counter program, since thousands of clocks are connected at all times to the power system. Over a period of three years, failure rates were correlated with insulation level of the coils. A very significant 100 to 1 drop in failure rate resulted from an increase in withstand voltage from approximately 2000 to approximately 6000 volts. This shows that, even though no surges over 2000 volts were recorded by the 2000-volt counters, surges in excess of 2000 volts do indeed occur.

Conclusions

1. Residential power circuits are subjected to surge voltages due to two distinct causes: load switching within the house, and externally generated surges that are most likely associated with lightning.

2. Internally generated surges caused by load switching are likely to be repetitive. They can generally be associated with a specific device, probably operating erratically or exciting some natural frequency of the wiring system. They are not related to lightning or disturbances from the utility. Peaks as high as 2500 volts have been observed. The best single statistical estimate is that 2.4 percent of households of the type sampled experience these internally generated repetitive surges in excess of 1200 volts. However, because of the statistical variability in the sample, this value may be as low as 1 percent or as high as 4.7 percent. Surges may be repeated several times a day.

3. The frequency of surges caused by lightning is not affected by household electrical devices, but rather by local geographical and meteorological conditions. The limited data in this program reveal several lightning-caused surge occurrences above 3000 volts with one reaching 5600 volts.

4. Independent evidence shows that a significant number of surges above 2000 volts do occur periodically in residential power lines.

Acknowledgments

References

1. Lenz, James E., "Basic Impulse Insulation Levels of Mercury Lamp Ballast for Outdoor Applications," (Discussion), Illuminating Engineering, February 1964, pp. 133-140.

2. Dixon, W.J. and Massey, F.J., Jr., Introduction to Statistical Analysis, McGraw-Hill, New York, 1957.

3. Bowker, A.H. and Liberman, G.J., Engineering Statistics, Prentice-Hall, New Jersey, 1959.

4. Hahn, G.J. and Shapiro, S.S., Statistical Models in Engineering, John Wiley and Sons, New York, 1967.

5. Brownlee, K.A., Statistical Theory and Methodology in Science and Engineering, John Wiley and Sons, New York.

6. Gumbel, E.J., Statistics of Extremes, Columbia University Press, New York, 1958.

Bibliography

Recording Techniques

K.G. Beauchamp, "A Multiple Beam Oscilloscope for the Study of High Voltage Transient Discharges," Electronic Engineering, Vol. 30, June 1958, pp. 358-365.

S.F. Pearce and J.H. Bull, "High-frequency Transients in Low-voltage Power Systems," The Electrical Research Association, Leatherhead, Surrey, 1962.

P. Chowdhuri, "Portable Fast Response Transient Voltage Counter," Institute of Electrical and Electronics Engineers Transactions Power Appliances and Systems, Vol. 84, May 1965, pp. 417-422.

J. Czech, Oscilloscope Measuring Techniques, New York, Philips Technical Library, Springer-Verlag, 1965.

O.H. Davie and J. Wood, "An Automatic Cathode-ray Oscilloscope Beam Brightening Device for Transient Recordings," Journal of Scientific Instruments, Vol. 33, No. 5, May 1956, p. 203.

F.A. Fisher, "Transient Response of Impulse Voltage Dividers," Transactions of American Institute of Electronics Engineers I, Vol. 77, 1958, pp. 411-420.

C.W. Hargens, "Cathode-ray Recorder Compares Transients," Electronics, Vol. 31, No. 3, January 17, 1958, pp. 84-87.

D.H. Kekas, "Trigger Generator Used in Recording Power-line Transients," Electro-Technology, July 1966, p. 85.

H.W. Lord, "High Frequency Transient Voltage Measuring Techniques," Institute of Electrical and Electronics Engineers Transactions Communications and Electronics, November 1963, pp. 602-605.

Results

J.H. Bull and W. Nethercot, "The Frequency of Occurrence and the Magnitude of Short Duration Transients in Low-voltage Supply Mains," Radio and Electronic Engineer, September 1964.

S.F. Pearce and J.H. Bull, "High Frequency Transients in Low Voltage Supply Systems," The Electrical Research Association, Leatherhead, Surrey, 1962.

R.D. Goldblum, "Measuring DC Relay Coil Transients," Electronic Industries, Vol. 24, April 1965, pp. 68-71.
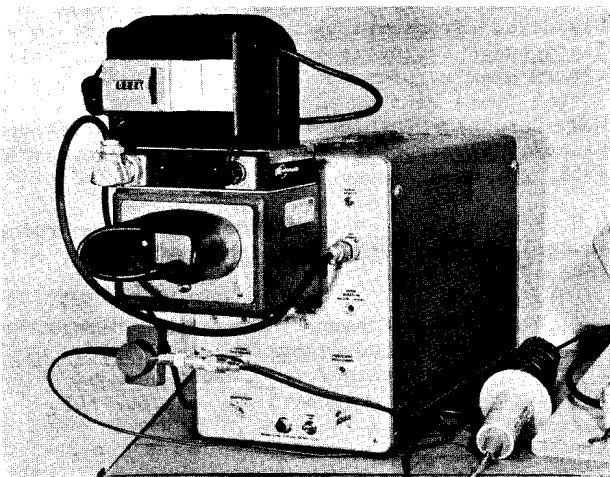
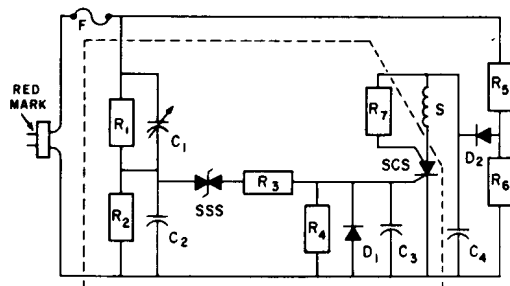Figure 1.   Oscilloscope and Camera

Figure 2.   Surge Counter Circuit
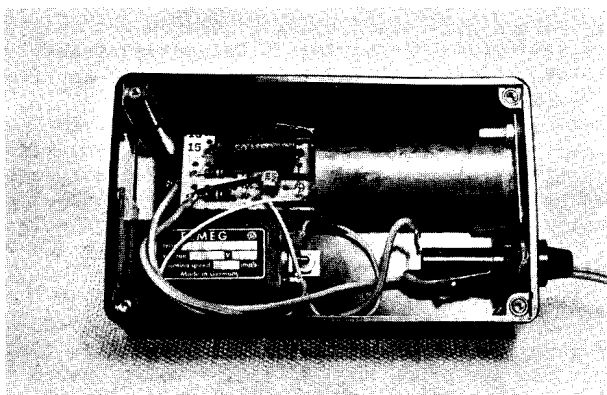
Figure 3a.   Surge Counter--Cover Removed
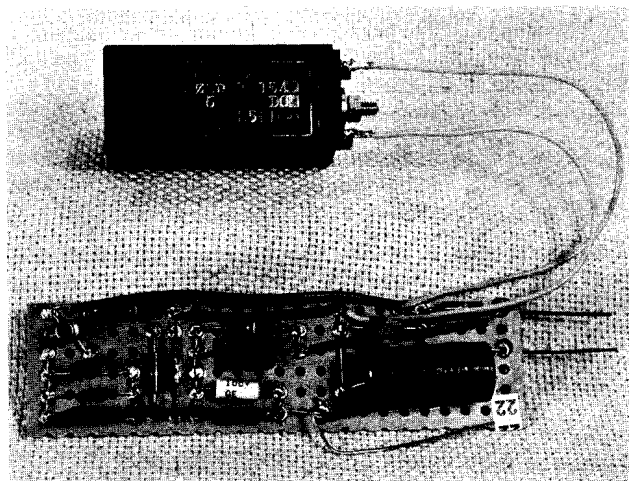
Figure 3b.   Surge Counter Elements--Removed from Shield
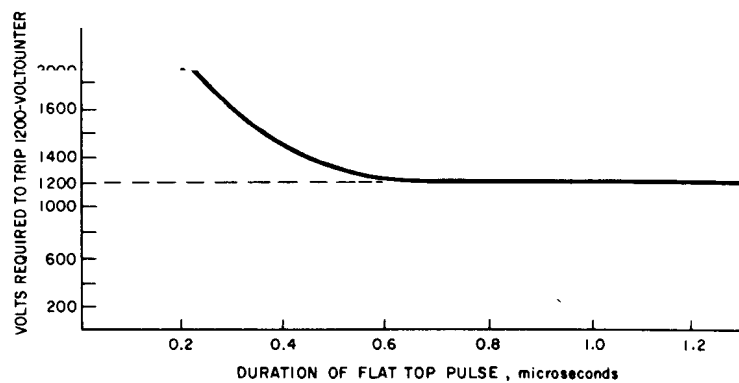
Figure 4.   Response of Surge Counter

a) MOST FREQUENT SURGE

b) MOST SEVERE SURGE

ZERO-TO-PEAK VOLTS

+ I AT 5600 →

ZERO-TO-PEAK VOLTS

NUMBER OF LOCATIONS WHERE SURGES SHOWN WERE RECORDED

Figure 6a. Distribution of Surges--Most Frequent Surge

Figure 6b. Distribution of Surges--Most Severe Surge

1200 V — — —

I COUNT REGISTERED

1200 V — — — —

I COUNT REGISTERED

1200 V — — — —

NO COUNT REGISTERED
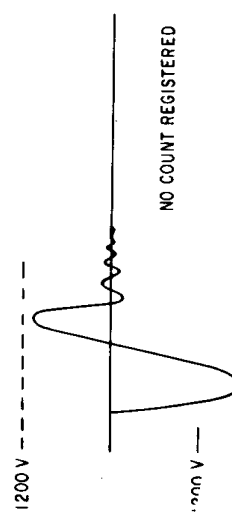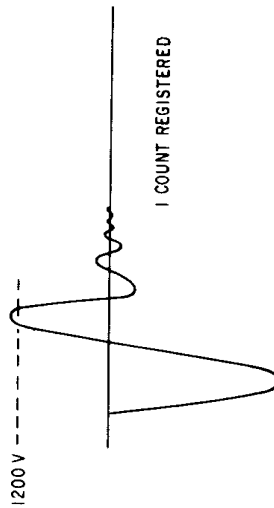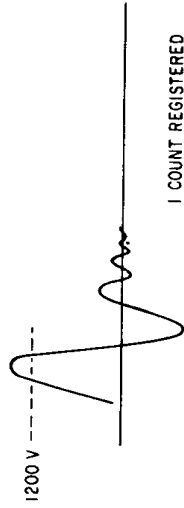
Figure 5. Recording of Surge with Single Polarity Counter
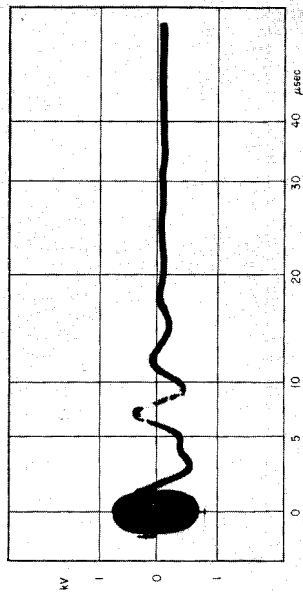
Figure 7a. Internal Switching Transient Recorded at a Farmhouse (15 such transient surges in 1500 hours)

Figure 7c. Single Surge with 1700-volt Peak, Recorded at the Same Location as Figure 7b. (In a 5-day period surges of this wave shape were recorded as follows: 13 above 1000 volts, 18 above 1500 volts, 21 above 2000 volts, and 1 above 2500. volts. Source was determined to be interruption of a high-voltage transformer for an oil furnace.)

Figure 7b. Composite Record Showing Surges for a 24-hour Period at a Suburban Home. (Oscilloscope is triggered for each surge, plus once every hour, resulting in $\pm$ 165-volt band of steady state 60 Hz voltage. Recordings above 1800 volts are blanked out by the oscilloscope.)
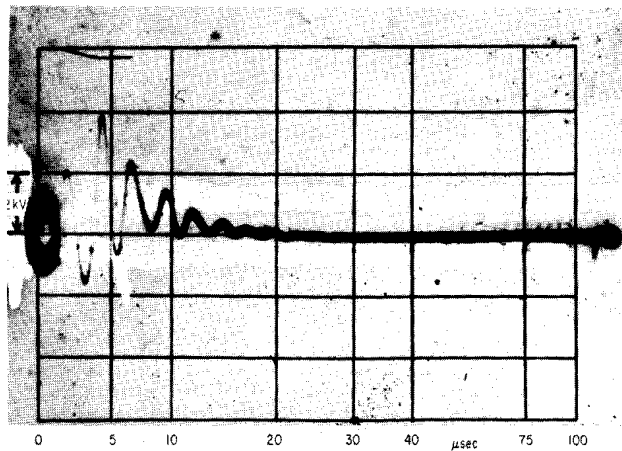
Figure 8a.   Transient Surges Recorded on Overhead
Distribution Systems in Charleston, South Carolina
(3800-volt crest, 300 kHz oscillation.)
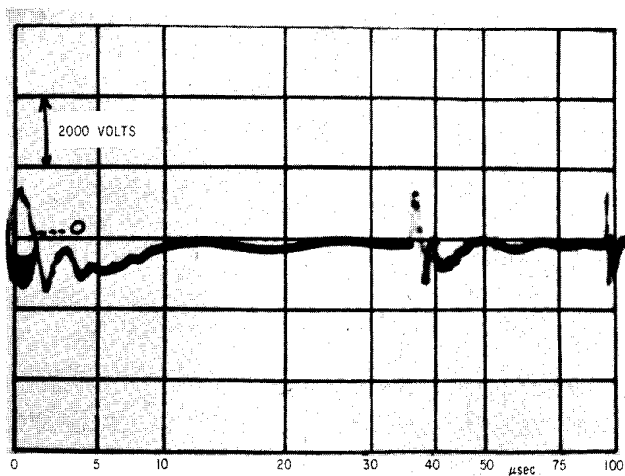
Figure 8b.   Transient Surge Recorded at the Service Entrance of a Home in Florida

SURGE VOLTAGES IN RESIDENTIAL AND INDUSTRIAL POWER CIRCUITS

Surge Voltages in Residential and Industrial Power Circuits

François Martzloff
General Electric Company
Schenectady NY
f.martzloff@ieee.org

G.J. Hahn
General Electric Company
Schenectady NY

Significance:
Part 3 Recorded occurrences

At the invitation of the Surge Protective Devices Committee, the 1967 Conference Paper was resubmitted for consideration as a Transactions paper, with additional information presented on industrial case histories acquired since publication of the conference paper.

Both waveform information and frequency of occurrence marked the beginning of the IEEE effort toward characterizing surge voltages in low-voltage ac power circuits, a departure from the traditional unidirectional and separate 1.2/50 and 8/20 waveforms in use for high-voltage equipment testing. One of the outcomes of that effort was IEEE Std 587, which eventually evolved into IEEE Std C62.41 and its successive 1980, 1991, and 2002 versions.

Note that the title still refers only to *surge voltages*, not surge currents. In the mid-sixties, when these recordings took place, there were very few, if any, surge-protective devices (SPDs) installed in residential power circuits and the threat was indeed one of surge voltages. After the emergence of ubiquitous consumer-type SPDs, the results of subsequent monitoring campaigns were drastically changed (See "Galore" in Part 2) but the information is still valid for the frequency of occurrences to the extent that the origins of surges have not changed, only the observed levels are now considerably reduced by the proliferation of SPDs (for which the available *surge current* becomes a matter of interest).

Surge Voltages in Residential and Industrial Power Circuits

FRANÇOIS D. MARTZLOFF, MEMBER, IEEE, AND GERALD J. HAHN

Abstract—Special instrumentation was developed for monitoring the magnitude and frequency of occurrence of surge voltages in residential and industrial circuits. Over a period of 2 years, more than 400 locations in 20 cities were surveyed. Monitoring was accomplished by automatic recording cathode-ray oscilloscopes and simple surge counters. In residential circuits, two significant sources of surge voltages were identified: load switching within the house, and external surges, most likely associated with lightning, coming through the service drop. In industrial circuits, the levels of surges are lower than in residential circuits. However, switching surges on the load side of the switch can be severe. Internally generated surges as high as 2500 volts were recorded during this test program, and surges due to lightning reaching 5600 volts have been recorded on a 120-volt overhead distribution line.

INTRODUCTION

THE successful operation of semiconductors and new insulation systems in appliances and consumer electronic devices may be adversely affected by transient overvoltages occurring on the 120-volt power supply. Detection and measurement of these transient surges permits a designer to provide suitable built-in tolerance, or at least to recognize that there is a need for appropriate suppression or protection.

Special instrumentation has been developed for detection and measurement of surge voltages. In the first phase of testing, automatic recording cathode-ray oscilloscopes (CRO) provided complete information on waveshape, and on magnitude and frequency of occurrence at a small number of arbitrarily chosen locations. These data, although statistically restricted, were adequate to demonstrate the existence of the problem, define some sources, and indicate typical waveshapes. It also became clear that there was a need for a larger sample that would be more statistically valid. In the second phase of testing, 100 surge

counters, simple in design and easy to install, were developed especially for this program. These counters were installed in several hundred homes in various cities located in the East and Midwest of the United States.

The purpose of this paper is to discuss recordings obtained during the two phases of this program and the statistical aspects of the results. It is hoped that publication of this paper will encourage other investigators to publish their findings. This would provide a broader statistical base for verification of the frequency and magnitude of surge voltages.

In regard to industrial circuits, less data have been accumulated, but a number of significant case histories are presented to illustrate the problems likely to be encountered in that field.

INSTRUMENTATION

Recording surge voltages in the field poses special problems. For example, the instruments cannot be continually attended, and the signals to be recorded are unpredictable in magnitude, polarity, and frequency of occurrence.

In cooperation with Tektronix, Inc., a type 515 CRO was modified to record transients on film, with automatic advance of the film after a recording.

The modifications involved a change in the trigger and sweep circuits, as well as removal of all knobs (an important detail for an instrument to be left in all types of locations).

Most oscilloscope trigger circuits are polarized. This often causes a loss of recording when the polarity of the initial signal is not known. For surge recording, the trigger circuit was modified by feeding to the time base trigger through two OR logic diodes the push–pull signal that is applied to the input of the oscilloscope delay line. With this modification, the sweep is started for either polarity, while the signal is delayed before reaching the deflection plate of the cathode-ray tube (CRT). In addition, the conventional blanking circuit holds the beam in low intensity before the sweep starts.

A second modification changed the sweep from a constant speed to a logarithmic speed, fast at the start and slow toward the end. This allows the recording of an impulse front with good resolution, while providing sufficient duration of the sweep to record a long tail.

Finally, a relay was added with its coil energized whenever the beam sweep is triggered. Through a set of contacts on this relay, the film advance sequence in the camera is activated.

The camera, attached to the scope bezel is a Beattie–Coleman system, accommodating 100 feet of 35-mm film, with no shutter, and recording on a 24- by 36-mm frame the trace displayed on the CRT. Following the sweep, the contact mentioned above closes the motor circuit, advancing the film to the next frame in a few seconds. This film transport duration is matched in the oscilloscope trigger circuit by a hold off so that no sweep will occur during film advance.

In order to prevent the film from being fogged by extended exposure to the faint glow on the phosphor (caused by imperfect blanking of the beam, cathode glow, or light leaks) a built-in timer in the oscilloscope advances the film by one frame every hour. This provides an approximate method for timing the occurrence of surges. Since the surge-voltage survey was conducted, an automatic time recording feature has been added to give a more precise recording of time at each event.

Fig. 1 shows this oscilloscope camera system. The relatively high cost of this system, its conspicuous presence (e.g., size, camera noise, etc.) in a home, and the amount of film to be
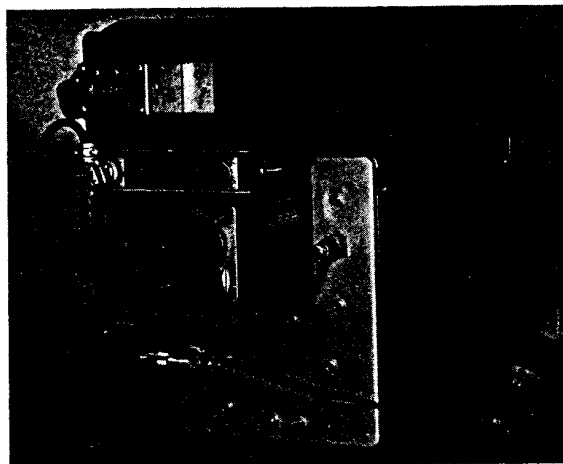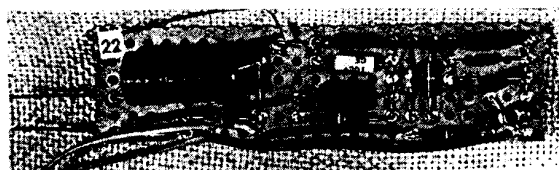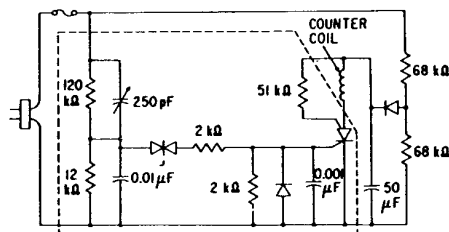

Fig. 1. Oscilloscope and camera.

Fig. 2. Surge-counter circuit.

scrutinized frame by frame limit the number of locations at which recordings can be made. However, for conclusions to rest on a sound statistical basis, it is necessary to investigate a large number of locations. To be acceptable to cooperative home owners, a transient detector should therefore lend itself to inconspicuous installation and simple data handling. Thus a device which can merely be plugged into a wall receptacle, and that has a digital counter indicating the number of surges occurring above a specified threshold is satisfactory for widespread recording.

The circuit shown in Fig. 2 was developed for this purpose. This device is connected to a wall receptacle by a conventional appliance cord, not a special probe. This connection is simple, establishes a typical final path for a surge impinging upon any appliance connected to this particular wall receptacle, and provides power for the high-impedance rectifier circuit and a signal input to the trigger-sensor circuit.

A crudely compensated divider attenuates the incoming surge before application to the silicon symmetrical switch (SSS). This device has the characteristic of turning on abruptly whenever the voltage across it reaches a threshold, such as 250 volts. This threshold remains constant for durations as short as 0.1 μs. When the SSS turns on, the attenuated surge is applied to the gate of the very-sensitive fast-switching silicon controlled switch
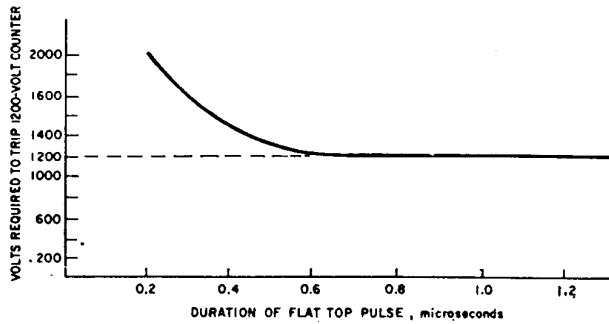
Fig. 3.   Response characteristic of counter.

Fig. 4.   Surge-counter package.

(SCS). If the polarity of this surge is positive, the SCS turns on, allowing the 50-μF capacitor to discharge through the coil of the solenoid-actuated counter. A high-impedance divider and half-wave rectifier provide a trickle charge 15-volt supply for the 50-μF capacitor. The resistance of this divider represents a negligible load for the house wiring system, yet is sufficiently low to allow some leakage in the electrolytic capacitor. The long charging time (several seconds) of the capacitor is not objectionable since the transients to be detected do not have a high repetition rate.

Calibration of the circuit is obtained by adjusting the value of the divider elements. In these tests, the threshold level was set at 1200 volts for one group of counters and at 2000 volts for another group. A bench circuit was set up, whereby a surge with adjustable level and duration could be superimposed on a 60-Hz 120-volt power supply. Some consideration was given to the need to segregate, or filter out, the surge from the 60-Hz power voltage; in this case, however, with the minimum level at 1200 volts, the base 170-volt crest represented a small contribution and was included in the signal detected by the circuit. Surges with approximately flat top and durations from several to 0.2 μs were applied to determine the variation of the threshold voltage as a function of surge duration. A typical response curve is shown in Fig. 3. The response of this crest-indicating counter can be considered satisfactory since the oscilloscope recordings in homes, as will be discussed later, have indicated that the shortest half-period of oscillatory surges is in the order of 2 μs.

RECORDING PROCEDURE

In the first phase, oscilloscopes were installed at the basement service entrance of homes in the Schenectady, N. Y., area. These locations do not represent a statistician's ideal sampling, but during the initial phase of the program, the nature of transients, rather than statistical accuracy, was the major subject of interest. Later in the program, the range of locations was broadened to include homes in other urban and rural areas, particularly in Florida and South Carolina.

In the second phase, surge counters were installed at unspecified outlets in the homes of engineers in 20 cities in the Northeast and Midwest. Two distinct recording periods were scheduled: winter, because there is usually a minimum of lightning activity at that time of year; and summer, which ordinarily includes a maximum of lightning activity.

Since the oscilloscope input circuit operates at a level of a few volts, it is somewhat sensitive to direct radiation of electromagnetic noise in the preamplifier, even if there is no signal from the probe. In order to discriminate against this type of spurious
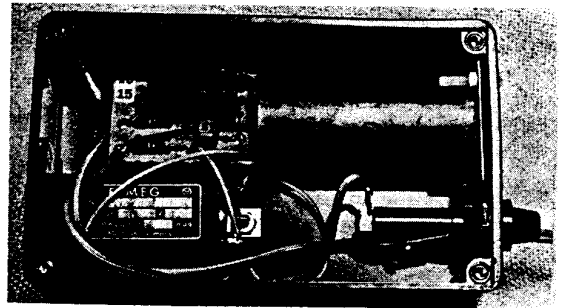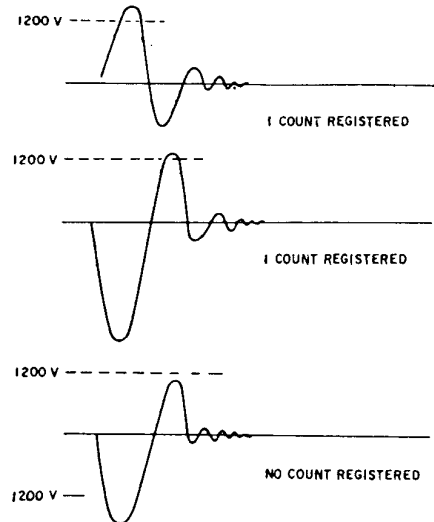

Fig. 5.   Recording with single-polarity counter.

indication, the recording procedure included a period during which the oscilloscope probe was shorted with the ground terminal remaining connected so that spurious signals due to ground loops would be detected. In this manner, any noise entering the system could be recorded and later recognized for what it was in the analysis of the recordings made with the short circuit removed from the probe.

The surge counters record only one polarity; in order to minimize record keeping by the homeowner, the connection of the cord was not polarized. In the event of an oscillatory surge (which is always quickly damped in these systems), two cases of counting can occur. For instance, the high side of the divider can be connected to the "hot" terminal of the receptacle (Fig. 5). If the first half-cycle is positive and exceeds 1200 volts, a count is registered. If the first half-cycle is negative, and the second, positive half is highly damped, no count is registered. If the first half-cycle is well above 1200 volts causing the second half, in spite of some damping, to exceed 1200 volts, a count is registered. For the reverse connection, the same would occur for reverse polarity. Thus the actual number of surge occurrences of both polarities in excess of 1200 volts is between 1 and 2 times the number indicated by the counter. The objective of the recording in this test series was only to determine whether or not surges occurred rather than their exact number. Consequently, the value of the multiplying factor is not very significant.

TABLE I

DETAILED ANALYSIS OF RECORDED SURGES

House	Most Severe Surge			Most Frequent Surge			Average Surges per Hour	Remarks
	Type*	Crest (volts)	Duration (μs or cycles)	Type*	Crest (volts)	Duration (μs or cycles)		
1	A-1.5	700	10 μs	A-1.5	300	10 μs	0.07	
2	A-2.0	750	20 μs	A-2.0	500	20 μs	0.14	fluorescent light switching
3	B-0.5	600	1 cycle	B-0.5	300	1 cycle	0.05	
4	B-0.5	400	2 cycles	B-0.5	300	2 cycles	0.2	
5	C	640	5 μs	too few to show typical			10 total	
6	B-0.3	400	1 cycle	B-0.3	250	1 cycle	0.01	
7	B-1	1800	1 cycle	B-1.0	800	1 cycle	0.03	lightning storm
8	C	1200	10 μs	B-0.5	300	4 cycles	0.1	
9	B-0.25	1500	1 cycle	same as most severe			0.2	oil burner
10	B-0.25	2500	1 cycle	B-0.25	2000	1 cycle	0.4	oil burner
11	B-0.2	1500	1 cycle	same as most severe			0.15	water pump
12	B-0.2	1700	1 cycle	B-0.2	1400 °	1 cycle	0·06	oil burner
13	B-0.1	350	1 cycle	too few to show typical			4 total	house next to 12
14	C	800	15 μs	—	—	—	1 total	lightning
15	B-0.25	800	3 cycles	B-0.25	600	3 cycles	0.05	rural area
16	B-0.15	400	15 μs	B-0.13	200	30 μs	0.4	surges
Street pole	B-0.5	5600	4 cycles	B-0.3	1000	1 cycle	0.1	lightning stroke nearby
Hospital	C	2700	9 μs	C	900	5 μs	0.1	lightning storm
Hospital	B-0.3	1100	1 cycle	too few to show typical			4 total	
Department store	B-0.5	300	1 cycle	B-0.5	300	1 cycle	0.5	
Street pole	B-0.2	1400	4 cycles	B-0.2	600	4 cycles	0.07	lightning storm

* A—long oscillation; B—damped oscillation; C—unidirectional. Number shows frequency in megahertz.

RESULTS OF THE RECORDINGS

Oscilloscopes

The first recording analysis revealed that some homes were subject to frequent surge voltages, some experienced only a few isolated surges, and others did not experience any surges in excess of the trigger level (300 to 400 volts). Furthermore, among those installations where surge voltages frequently occurred, the surges at some houses were relatively low (rarely in excess of 800 volts), while other houses had surges in the range of 1200 to 2500 volts. Rates of surge occurrence ranged from 0 (no surge in 1 to 2 weeks) to 0.5 per hour, with peak values from 300 volts (trigger threshold) to 5600 volts.

At the conclusion of the recording program, a total of 30 locations, including two overhead distribution poles had been monitored for a total of about 10 000 hours. Table I shows a detailed analysis of the recordings at 21 locations. Three homes and six industrial locations did not produce any triggering with the threshold as low as 400 volts.

Further analysis of some recordings was made by deliberate switching of loads in the houses where frequent surges had been observed. In some cases, the operation of a specific device (e.g., oil burner, fluorescent lamp, pump motor, refrigerator, food mixer, etc.) was found to be the cause of the surges. In other cases, no amount of deliberate load switching could reproduce surges such as those recorded during unattended monitoring. The home owner was occasionally able to correlate surge recordings with lightning or power system disturbances.

A pattern emerged from all this information, showing two definite causes of surge voltages in the homes: load switching within the house and lightning storms.

Load Switching: Load switching in the house occasionally produced transient surges; these affected only that particular house. For any particular house, these transient surges had a waveshape which was consistently repeated with variations in amplitude along the entire film recording. This probably resulted from a combination of the switch characteristics and the impedance of the house wiring system; the variations in amplitude were probably caused by variations of the switching angle and/or connected loads. In an industrial circuit, the same repetition of a particular pattern was also noted [1]. Typical waveshapes of the recorded surges are shown in Figs. 6–8.

In one case, it was possible to install an oscilloscope in a house adjacent to that where repetitive surges up to 1700 volts were being recorded. The service drops were connected to the same pole, yet no surges occurring simultaneously were recorded in the second house.

Lightning: Surge voltages not associated with load switching within the house were associated with lightning storms. In some cases, the home owner was able to correlate the film advance counts with the storm. Although recorded during lightning storms at two different locations, the surges shown in Figs. 9 and 10 present the interesting characteristic of being oscillatory at a frequency in the range of 300 kHz. The surge shown in Fig. 9 was recorded at the overhead distribution line (oscilloscope mounted on the pole), while the surge of Fig. 10 was recorded at the service entrance in a home. The first exhibits far less damping than the second; this might be explained by the lower damping due to lower resistance of the system at the pole than at the end of a service drop. Both of these surges, as well as most of the other surges recorded during lightning storms, exhibit this oscillatory characteristic at a frequency which is nearly constant for a particular locality. This constancy suggests that the oscillation of the system followed an excitation caused by the lightning stroke. A number of surges in the range of 800 to 1200 volts were observed during several storms. The maximum
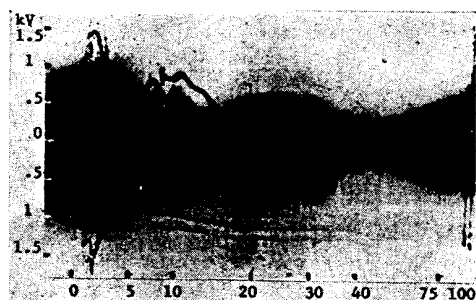
Fig. 6. Residential surges, 24-hour composite. Black band is ±170-volt sweeps at hourly intervals.
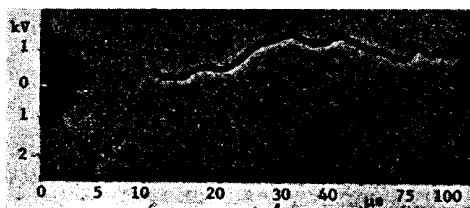
Fig. 7. Residential surge, oil burner ignition.
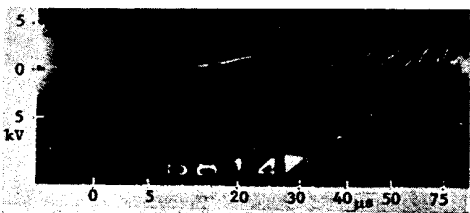
Fig. 8. Industrial circuit. Surge due to equipment maintenance; note digital timer record.
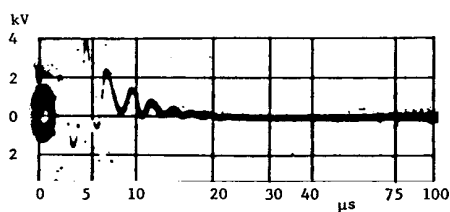
Fig. 9. Surge recorded on street pole in Charleston, N. C.
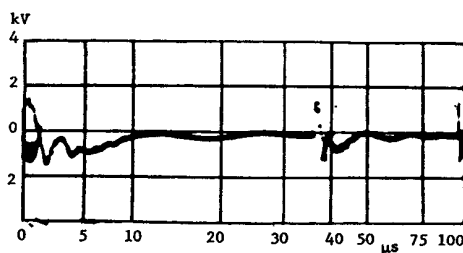
Fig. 10. Surge recorded at service entrance of Florida home.

TABLE II
NUMBER OF HOUSES WITH REPETITIVE
SURGE ACTIVITY ABOVE 1200 VOLTS

Location	Number of Homes Surveyed	Recording Period (weeks)	Houses with Repetitive Surges
Providence, R. I.	4	2–6	none
Cleveland, Ohio	28	2–4	none
Auburn, N. Y.	12	2–3	none
Lynchburg, Va.	3	2–3	none
Syracuse, N. Y.	8	1–2	1
Chicago, Ill.	23	1–6	none
Ashland, Mass.	24	1–2	1
Holland, Mich.	6	2–10	none
Louisville, Ky.	10	2–6	none
Somersworth, N. H.	50	1–2	1
Plainville, Conn.	5	10	none
Asheboro, N. C.	24	1–2	none
Fort Wayne, Ind.	38	1–4	3
DeKalb, Ill.	14	3–12	none

TABLE III
SURGE COUNTER RECORDINGS ABOVE 1200 VOLTS
(SPRING, SUMMER, AND FALL)

Location	Number of Homes	Total Homes × Weeks	Number of Surges
Providence, R. I.	6	60	1
Ashboro, N. C.	13	85	none
DeKalb, Ill.	11	60	2
Somersworth, N. H.	3	48	1
Chicago, Ill.	12	58	none
Cleveland, Ohio	8	106	1
Decatur, Ill.	12	72	2
Holland, Mich.	7	56	none
Auburn, N. Y.	3	70	none
Springfield, Pa.	1	24	none
Ashland, Mass.	6	72	none
Pittsfield, Mass.	3	60	1
Plainville, Conn.	3	60	none
Lynchburg, Va.	3	15	none
Total	91	846	8 in 8 homes

surge voltage recorded was 5600 volts; several other surges recorded during the same period were in excess of 4000 volts [2]

Counters

With the two causes of transients identified by the oscilloscope measurements, the surge counters were applied in two separate programs. First, during the winter months, the counters were installed in a large number of houses for periods of 1 or 2 weeks; the objective was to determine how many houses sustained repetitive surges. Second, during spring, summer, and fall, each counter was left at one or two locations for periods of 9 to 48 weeks; it was known from the first test that these homes were not subject to load switching surges. The objective was to determine the frequency and characteristics of externally generated surges, presumably caused by lightning.

The first period produced the data shown in Table II, and the results obtained during the second period are shown in Table III.

STATISTICAL ANALYSIS OF THE RECORDINGS

Internally Generated Surges

The data in Table II show that 6 houses, or 2.4 percent, were subject to repetitive surges from among a total of 250 homes sampled. The true percentage doubtless differs somewhat from 2.4 percent due to statistical variations.

However, one may be 90-percent confident that the true percentage is between 1.0 and 4.7 percent.[1] This band could be narrowed by taking additional samples. However, it should be noted that the precision is proportional to the square root of the sample size. Thus four times the number sampled, or 1000 homes, would be necessary to cut the size of the statistical error band by approximately one half. Since the preceding results refer to statistical variations only, they do not take into account possible biases due to such factors as restrictions in selecting members of the sample (principally engineers in a number of designated locations) or the time of year (winter months).

The probability of internally generated surges undoubtedly varies among economic groupings (i.e., the devices in use in homes probably vary with the economic status of the resident); however, devices found to generate surges (i.e., furnaces, refrigerators, etc.) exist in most homes.

Externally Generated Surges

Results from the second testing period that was concerned with externally generated surges are shown in Table III. From 39 counters installed in a total of 91 homes in 14 localities, a total of 8 occurrences in 6 separate localities were observed during an equivalent exposure time of 846 weeks. A ninth occurrence was disregarded in this analysis because it occurred in the same home during the same storm. Of the two pairs of occurrences which took place in the same location, one pair occurred during the same storm and the second involved two occurrences at different times.

Analyses could be conducted based on the following alternative assumptions.

1) Voltage surges above 1200 volts occur only during the period of the year that the counters were installed in the homes. Thus although the counters were in homes for only part of the year, the time involved (i.e., the summer months) was so chosen that no further surges would have been noted even if each counter had been run for 52 consecutive weeks. The average number of surges per year would then be estimated as 8/39, or 0.205, with a 90-percent confidence band of 0.102 to 0.370.

2) Voltage surges occur randomly at a constant rate throughout the year. Thus a counter which was in use 9 weeks, on the average, would be subject to a third as many surges as a counter in use for a period of 27 weeks. Under this assumption, a total of 8 surges observed in a total time equivalent to 16 years (846 weeks) yield an estimated average of 0.5 surges per year, with a 90-percent confidence band of 0.25 to 0.90.

Using these two extreme assumptions, a range could be established for the estimated number of surges per year. The preceding calculations refer only to single-polarity surges. If all surges are being considered, the given value must be multiplied by a value corresponding to the additional proportion of opposite

polarity surges above 1200 volts which do not also result in positive surges above 1200 volts. This multiplying factor is probably about 1.6.

Lightning-induced surges are likely to affect more than one house when they occur. Local geographical and meteorological conditions are critical influences on these surges; however, these factors could not be considered in this preliminary investigation.

To relate the preceding data to risk of appliance failure, the given values must be modified by the probability that a surge above 1200 volts would cause failure of operating appliances. Failure effects would vary with different appliances.

Possible Further Analysis

A more refined analysis to estimate the probability of voltage surges per lightning storm is possible if the geographical location of the homes, the occurrence rate of lightning storms during the testing period, and exact dates at which voltage surges occur is considered. The resulting values can then be used in conjunction with information given in [8], [9] to calculate the probability of a voltage surge in any specified geographic area and season. Such an analysis would remove the need for making one of the two alternative assumptions stated previously and lead to a single set of estimates. However, this would require more detailed data than could be collected in this program.

Finally, it is noted that if one has knowledge of the actual voltage surges, rather than merely the information concerning whether or not a surge above 1200 volts occurred, a more sensitive analysis is possible. In this case, for example, probability plotting and other techniques based upon the statistical theory of extreme values [5], [7] might well be applicable.

EFFECTS OF SURGE VOLTAGES ON CONNECTED
ELECTRICAL DEVICES

The surges which have been recorded in this program occurred during normal operation of the household, with no knowledge of the connected load situation at the time of occurrence.

The question of energy involved in the surge is related to the impedance of the system since these recordings provide voltage data only. Surge impedance measurements of a house wiring cable indicate a value of 100 to 300 ohms for a typical branch circuit so that the surge impedance at the service entrance could be in the order of 5 to 10 ohms. However, this low value exists only for the travel time (i.e., a fraction of a microsecond). Connected loads will have a lower impedance than that of the branch circuit. This value will be dependent upon frequency whenever inductive components are present. These loads will absorb part of the energy of the surges and thus lower their peak.

Devices such as motors and transformers have solid insulation and such a long history of successful application that their performance is not in question. Perhaps unusual failures can be explained by extreme values of surges as indicated by the data.

Defective wiring practices (e.g., pinched insulation, reduced air clearances in wall boxes, etc.) will cause air flashover with or without 60-Hz power follow. In fact, one house was brought to our attention because of complaints of sparking in a light fixture. With the switch in the ground wire and the frame attached to a grounded pipe, flashover at 1700 volts was observed in correlation with the start of an oil burner in the house. This defective light fixture was acting as a voltage limiting gap for the house.

---

[1] This result is obtained by the well-known method of setting confidence intervals for a percentage from a sample. Further details may be found in statistical texts [3]–[5].

Appliances containing semiconductors and directly exposed to the line transients may be more vulnerable. Actually, the 1200-volt threshold level was selected as the result of this consideration. It is interesting to note that, although a number of surges above 2000 volts were recorded by the oscilloscopes, the few surge counters calibrated for 2000 rather than 1200 volts did not produce any recording above 2000 volts.

An independent study of clock motor failures produced information on failure rates versus withstand levels. This study was very pertinent to the surge counter program since thousands of clocks are connected at all times to the power system. Over a period of 3 years, failure rates were correlated with the insulation level of the coils. A very significant 100 to 1 drop in failure rate resulted from an increase in withstand voltage from approximately 2000 to approximately 6000 volts. This shows that, even though no surges over 2000 volts were recorded by the 2000-volt counters, surges in excess of 2000 volts do indeed occur.

INDUSTRIAL CIRCUIT CASE HISTORIES

The authors have been associated with a number of investigations where surges were suspected to be the cause of equipment problems. In the industrial environment, isolated cases tend to attract more attention than in residential circuits. The few case histories briefly summarized in this paper illustrate the types of problems likely to be encountered, where often surges are not in fact the cause of the problem, but where the presence of the test crew at the site precipitates a more thorough evaluation of the problem and sometimes reveals an unsuspected new fact.

On the occasion of these investigations, the surge counters were installed at the same time on the system and left for several weeks or months at the site whenever possible. So far, in over 15 locations, no surge over 1200 volts has been recorded on 240- or 480-volt buses ("mains"). On the other hand, severe surges have sometimes been recorded on the load side of the switch. However, these load side surges are associated with the subsystem operation and can be controlled (if recognized) by the subsystem designer or operator, in contrast with the surges on the mains that affect all users in the house, building, or plant, and on which they have little control.

Problem

Occasional flashover in a 480-volt distribution system at a steel welding shop.
Suspect: Switching surges associated with arc welding.
Investigation: Install surge recording oscilloscopes on the bus.
Result: No surges recorded.
Second Investigation: Power factor capacitors had been installed on the bus, but this fact had not been revealed by the initial discussions; their presence on the bus practically eliminated the possibility of surges on the bus. (Switching the whole bus system was tested and produced no surges in this case.) Final conclusion was contamination of the insulation in the polluted atmosphere.

Problem

Failures of a 480-volt saturable reactor in a motor control system.
Suspect: Switching surges associated with contactor operation.

Investigation: Record surges on site during deliberate, controlled switching of the contactor.
Result: Contactor bouncing and restrike produce a number of steep front (0.1 μs) surges on the winding, causing excessive turn-to-turn stress.

Problem

Failures of rotor windings in 440-volt induction motors in a crane system.
Suspect: Switching surges associated with contactor operation.
Investigation: Record surges with monitoring oscilloscope during deliberate, controlled switching of the contactor.
Result: No excessive surges found; however the test crew notices during the on-site test that the overspeed protection of the motor control had been bypassed by the user.

Problem

Frequent blowing of fuses in a power factor correction capacitor bank.
Suspect: Switching surges.
Investigation: Record current in the fuse and system voltage during switching operation.
Result: Contactor bouncing produces a number of inrush current surges exceeding the rms capability of the fuse.

Problem

Failures of lamp ballasts in an industrial plant.
Suspect: Switching surges.
Investigation: Install monitoring oscilloscopes.
Results: No surges found in several weeks of monitoring, no further problem.
Conclusion: The best surge suppressor is a surge monitor.

CONCLUSIONS

1) Residential power circuits are subjected to surge voltages due to two distinct causes: load switching within the house, and externally generated surges that are most likely associated with lightning.

2) Internally generated surges caused by load switching are likely to be repetitive. They can generally be associated with a specific device, probably operating erratically or exciting some natural frequency of the wiring system. They are not related to lightning or disturbances from the utility. Peaks as high as 2500 volts have been observed. The best single statistical estimate is that 2.4 percent of households of the type sampled experience these internally generated repetitive surges in excess of 1200 volts. However, because of the statistical variability in the sample, this value may be as low as 1 percent or as high as 4.7 percent. Surges may be repeated several times a day.

3) The frequency of surges caused by lightning is not affected by household electrical devices but rather by local geographical and meteorological conditions. The limited data in this program reveal several lightning-caused surge occurrences above 3000 volts with one reaching 5600 volts.

4) Independent evidence shows that a significant number of surges above 2000 volts do occur periodically in residential power lines.

5) Industrial power circuits appear less likely to be subjected to surges on the mains. However, switching surges in subsystems can originate at the switch and affect the loads.

REFERENCES

[1] D. W. Spencer, "Power line disturbances in a semiconductor component life test area," M.S. thesis, Cornell University, Ithaca, N. Y., 1968.
[2] J. E. Lenz, "Basic impulse insulation levels of mercury lamp ballast for outdoor applications," *Illuminating Engrg.*, pp. 133–140, February 1964.
[3] W. J. Dixon and F. J. Massey, Jr., *Introduction to Statistical Analysis*. New York: McGraw-Hill, 1957.
[4] A. H. Bowker and G. J. Liberman, *Engineering Statistics*. Englewood Cliffs, N. J.: Prentice-Hall, 1959.
[5] G. J. Hahn and S. S. Shapiro, *Statistical Models in Engineering*. New York: Wiley, 1967.
[6] K. A. Brownlee, *Statistical Theory and Method-Methodology in Science and Engineering*. New York: Wiley, 1965.
[7] E. J. Gumbel, *Statistics of Extremes*. New York: Columbia University Press, 1958.
[8] IEEE Committee Report, "Bibliography on surge voltages in ac power circuits rated 600 volts and less," this issue, pp. 1056–1061.
[9] "Frequency of thunderstorms" in *Electrical Transmission and Distribution Reference Book*. Pittsburgh, Pa.: Westinghouse Corp., 1942, chs. 12–18.

TRANSIENT OVERVOLTAGES IN SECONDARY SYSTEMS

Transient Overvoltages in Secondary Systems

François Martzloff
General Electric Company
Schenectady NY
f.martzloff@ieee.org

Reprint of unclassified General Electric Technical Information Series Report 81CRD121

Significance:
Part 3 Recorded occurrences

This unclassified (available to anyone) report was prepared to provide more details – until then contained in classified internal reports or summarized in the two IEEE papers reprinted in this Part 3 – on the measurements made in the 1963-1967 period.

Only brief remarks are made in this report on possible suppression methods. Papers included in Part 6 (Tutorials), Part 7 (Mitigation techniques) and Part 8 (Coordination of cascades SPDs) provide information on protection techniques prior to and after the emergence and widespread use of metal-oxide varistors.

TECHNICAL INFORMATION
SERIES

AUTHOR	SUBJECT	NO. 81CRD121
Martzloff, FD	transient overvoltages	DATE May 1981

TITLE	GE CLASS 1
Transient Overvoltages in Secondary Systems	NO. PAGES 20

ORIGINATING COMPONENT	
Automation and Control Laboratory	CORPORATE RESEARCH AND DEVELOPMENT SCHENECTADY, N.Y.

SUMMARY

Transient overvoltages have been recorded in secondary systems for a period of four years, using recording oscilloscopes and surge counters.

Conclusive evidence has been accumulated on the occurrence of surges at potentially damaging levels on 120 volts residential circuits. Less frequent and less severe surges were found on commercial and industrial circuits.

This report is a summary of measurements made from 1963-1967 and has been adapted from a 1967 internal report. An up-to-date bibliography is included.

KEY WORDS

surge

INFORMATION PREPARED FOR _____

TRANSIENT OVERVOLTAGES IN SECONDARY SYSTEMS

F. D. Martzloff

I. INTRODUCTION

The increasing use of semiconductors in consumer and commercial applications has increased the risk of component failures due to transient overvoltages. This situation was recognized by the General Electric Company in the early sixties, and a program was initiated in 1962 for the purpose, among others, of recording transient overvoltages in low voltage systems in order to obtain factual information for an estimate of this risk.

Transients were recorded with oscilloscopes at a number of locations, in order to obtain data on representative waveshapes. These data were supplemented by a second project in which a large number of locations were monitored, using a fixed threshold surge counter especially developed for this program.

This report combines a presentation of the new results with a review of earlier data, in order to summarize present knowledge on the occurrence of transient overvoltages in secondary systems, with references to related areas of effects on semiconductors and transient suppression.

The cause of transients, the recording and the results are discussed, and conclusions based on statistical considerations are presented.

II. CONCLUSIONS

1. (a) Two major causes of transient overvoltages exist in residential secondary circuits: surges generated within the house by some device such as relays, contactors, mercury switches, etc., and surges fed in from the power service entrance, primarily lightning-induced.

(b) Commercial or industrial secondary systems are not subjected to the internally generated surges found in residential circuits, as they are "stiffer" than the latter.

2. Internally generated surges above 1200 volts are likely to occur at frequent intervals (one or more per day) in about 2.5% of all U.S. households.

3. Lightning-induced surges may occur at a rate of 0.1 to 0.9 per household and per year. Statistical evidence in this case is not as firm as in the case of the internally generated surges.

4. These surges can definitely cause failures in unprotected appliances, especially those containing semiconductors directly exposed to the line voltage.

5. A number of commercially available devices offer various amounts of protection at various costs. The need for built-in protection versus no protection, or protection external to the appliance at the owner's expense is a subject of

discussion rather than a hard fact, since it involves variable parameters such as nuisance costs, prestige, duration of warranties, etc., in addition to the simple probability of failure considerations.

6. In spite of the impossibility of making definitive and all-encompassing conclusions, the author hopes that this report will increase the awareness of the occurrence of potentially damaging surge voltages on residential secondary circuits and promote a better anticipation of associated problems, which should ultimately increase the reliability of electronic products.

III. TRANSIENT MEASUREMENTS IN SECONDARY CIRCUITS

The measurement of transients was conducted over a period of three years; in 1962 and 1963 with oscilloscopes and in 1965 with surge counters designed and built in 1964. The objective of the oscilloscope measurements was to explore the characteristics (waveshape, magnitude) of surges, while the objective of the surge counter measurements was to establish a broad base for the statistical treatment of the results.

1. Oscilloscope Measurements

Table I shows an analysis of the surges recorded in terms of most severe, most frequent, and average number per hour at each of 23 locations.

Briefly, the oscilloscopes are modified Tektronix 515 oscilloscopes where a nonpolarized sweep trigger is provided by the transient overvoltage occurring in the circuit being monitored. A 35 mm camera, with no shutter, continuously monitors the blanked-out screen until a surge triggers the logarithmic sweep, at which time the transient is displayed on the screen and recorded on the film, and the motor-driven camera advances one frame.

This equipment, not without electronic and mechanical incidents, provided the means to monitor the voltage in homes and commercial buildings for a period of several days and thus establish patterns for transients recurring within this time period.

Typical waveshapes (corresponding to severe cases for <u>amplitude</u> but typical as far as <u>shape</u> is concerned) are shown in the oscillograms of Figs. 1, 2, and 3.

These oscilloscope measurements indicated that potentially damaging surges can occur very frequently in some households, while other households were relatively free from frequent disturbances. In some cases, the occurrence of frequent surges was correlated with the operation of an appliance such as a furnace, refrigerator, etc.

Measurements in larger secondary systems, i. e., commercial or industrial buildings, did not record frequent, internally generated surges similar to those found in households. Lower amplitude, less frequent occurrences were found, believed to be associated with switching surges or lightning-induced surges involving the complete local power grid.

2. Recordings with Surge Counters

The oscilloscope measurements clearly established the dual source of surges in households, internal or external. In order to evaluate the possible effect of these on a national scale, a program of designing and building about 100 surge counters for installation in as many households as possible was initiated in 1964. These were installed late in 1964, and the readings monitored and analysed in 1965.

2.1 Test Plan

The recording of household surges was divided into two separate periods, each with distinct objectives. A first recording period held in winter and early spring covered short periods at each of a large number of residences, in order to investigate the proportion of households subjected to frequent internally generated surges.

A second recording period held in late spring and summer was organized at a reduced number of locations with longer periods, in order to investigate the frequency of lightning-induced surges at a number of specific locations.

A related program was also carried on at two locations where frequent internally generated surges were occurring, to demonstrate the effectiveness of the suppression obtainable from a small Thyrector stack connected at the outlets.

The surge counter design has been described in a previously published paper.[1] It provides cumulative counting of surges in excess of 1200 V or 2000 V for durations above 0.2 μs when plugged into the 120 V outlet.*

Briefly, these recorders consist of a solenoid driven counter, with a storage capacitor discharged into the solenoid when triggered by a surge in excess of a set threshold, of one polarity. The threshold level of the counter was set at 1200 volts for three quarters and at 2000 volts for one quarter of the counters. The storage capacitor was held charged by a high resistance rectifier power supply drawing power from the line being monitored.

The choice of the 1200 volts and 2000 volts threshold levels was the result of data on the performance of semiconductors, especially diodes and SCR's under transient inverse voltage. It seems that appliance circuits containing diodes or SCR's connected either directly or by low impedance components to the incoming 120 volt line may fail when the surges on this line exceed 1200 volts. On the other hand, a device with some degree of filtering, such as an input transformer, may require in the order of 2000 volts on the incoming line to pass on 1200 volts to the semiconductor(s) in the circuit.

---

*These recorders were designed specifically for installation in 120 V outlets and have a relatively low input impedance. Therefore, they may load down a circuit if, for instance, installed on the load side of a switch.

2.2 Internally Generated Surges Investigation

This investigation was carried on with the cooperation of individual engineers at 18 departments, who installed the counters in their homes and returned the records to the author for compilation.

The recording period lasted from December 1964 to March 1965, corresponding to an expected minimum of lightning activity, and involved about 250 homes. Complete results are shown in Table II.

The results are summarized as follows:

1. Six homes in a total of 250 homes are subjected to repetitive surges in the 1200 to 2000 volt range, which are most likely limited to each of the six, i.e., not affecting adjacent houses. This represents a percentage of 2.4% of the houses surveyed where potentially damaging repetitive surges can occur. The statistical validity of this percentage is discussed below.

2. Three isolated random surges were recorded, associated with no known or suspected system disturbances.

The recording results were analyzed by G.J. Hahn, who prepared the following discussion.

Statistical Aspects of the Recording Results

The data indicated 6 voltage surge situations in a total of 250 homes sampled. This indicates a rate of 2.4% in the sample. One would expect that the true voltage surge rate in the population from which the random sample was taken would differ from the sample rate due to statistical variations. However, one may be 99% confident that the voltage surge rate in the population is between 0.6% and 6.3% and 95% confident that the true proportion is between 0.9% and 5.3%.

Assuming now that more homes had been surveyed, one can wonder how much narrower the band would be. In response to this question, if we had observed 12 voltage surges in 500 homes, the 99% confidence interval would have been 1.0% to 4.8% and the 95% interval would have been 1.2% to 4.2%. Similarly, with 24 voltage surges in a sample of 1000 the 99% confidence interval would have been 1.3% to 4.0% and the 95% confidence interval would have been 1.5% to 3.6%.

The above results refer to statistical variations only, and thus represent limits on the proportion of voltage surges in the population from which the sample was selected. Thus, they do not take into account any possible biases that might have been introduced by such factors as restrictions in selecting members of the sample (principally GE engineers in a number of designated locations) or the time of year (winter months).

The statistical calculations are based on the well-known method of establishing confidence intervals for the binomial parameter using the Poisson approximation. Further details may be found in statistical tests.[2, 3, 4]

<u>Discussion of the Results</u>

Within the limitation that the homes surveyed are assumed to be typical of all residential buildings where new solid state appliances are likely to be found, the 1% to 5% probability of repetitive surges is not negligible. That is, electronic appliances with a surge damage threshold below 1200 volts are likely to suffer in-warranty failures at a rate of 1% to 5% of sales.

While the small number (6) of locations detected in this survey may appear to be small and thus intuitively unconvincing, there is a 99% level of confidence that the actual rate is 0. 6 to 6%. *

Continuing the data accumulation by increasing the number of homes surveyed will of course increase the validity of the conclusions, but not by a very large amount; for instance, if the same percentage (2. 4%) had been obtained from a sample of 1000 homes (an effort 4 times as large as the one reported here) the range of probability for a 99% confidence level would be reduced to 1. 3 to 4% compared to the present 0. 6 to 6%. This offers some incentive for increasing the number of homes surveyed, especially at locations where only a few homes were surveyed, but again, the return of better data are disproportionate to the effort that could be applied in one year.

2. 3   Externally Generated Surges

2. 3. 1   Test Procedure

At the conclusion of the repetitive surge detection program the surge counters were installed for an extended period at a few homes for the duration of the summer, or at least for several weeks. Presumably, these homes were not subjected to repetitive internally generated surges (as confirmed by the recordings), so that only externally generated surges would be recorded. Except when a correlation was established with a lightning storm, there is no available information on the cause of the surge, so that lightning as well as system switching surges are included in this statistic.

Table III summarized the recording data. A complete discussion of the results by G. J. Hahn follows.

2. 3. 2   Analysis of Voltage Surge Data and Some Implications

A.   Introduction

Data have been obtained on single polarity voltage surges above 1200 volts on 39 counters installed in a total of 91 homes in 15 localities for a total exposure time of 841 weeks. A total of 8 occurrences were observed during this

---

*The fact that the counters record only one polarity is immaterial in this case: the point was to detect those houses which had repetitive surges, not the number of surges at each location. (With random polarity in the surges, and some damping in oscillating surges, there is a factor of more than one and less than two to be applied to the number of surges indicated in order to obtain the total number of surges of both polarities.)

period. From this information, it is desired to draw some conclusions concerning the expected number of such surges per home per year. The total time per counter ranged from 9 weeks to 48 weeks, with the average time per device being 22 weeks. The program was so planned that all devices would be in homes during the summer months, that is, the period during which lightning storms, and thus voltage surges, are most likely to occur.

B. Results of Analysis

Analyses were conducted based on the following two alternate assumptions:

1. Voltage surges above 1200 volts occur only during the period of year that the counters were installed in the homes. Thus, although the counters were in homes only for parts of the year, the time involved was so chosen (namely, the summer months) that no further surges would have been noted even if each counter had been run for 52 consecutive weeks.

2. Voltage surges occur completely randomly throughout the year. Thus a counter that was in use only 9 weeks would on the average have only a third as many observed surges as a counter in use for a period of 27 weeks.

The above two assumptions clearly represent extremes. Thus, although neither is very realistic, results based on such assumptions permit one to obtain bounds within which one can reasonably expect the true expected number of surges to lie. The results are as follows:

Under assumption 1: A total of 8 surges occurred on 39 counters, thus the best estimate of the expected number of surges per home per year is 8/39 or 0.205. This estimate is subject to statistical error, since only a limited number of counters were involved. However, from the appropriate statistical calculations[3, 4] we can state with 90% confidence that the average number of surges is between 0.102 per year and 0.370 per year.

Under assumption 2: A total of 8 surges were observed in a total of 16.173 years of testing. Thus the expected number of surges per year is 8/16.173 or 0.495. The 90% confidence interval on this estimate is 0.246 surges per year to 0.892 surges per year.

The above calculations refer only to single polarity surges. If one is interested in all surges, the given values need be multiplied by a value corresponding to the additional proportion of opposite polarity surges above 1200 volts, which do not also result in positive surges above 1200 volts. This multiplying factor is probably in the order of 1.6, accounting for the damping between the first and second 1/2 cycle of an oscillating surge.

Some additional assumptions are also involved in the analysis. Although these assumptions are not strictly met, they are probably not sufficiently incorrect to critically affect the validity of the analysis. These assumptions are:

1. The homes were selected strictly at random.

2. The voltage surge rate is the same from one home to the next.

3. All voltage surges of one polarity during the period of installation were recorded.

If it is desired to relate the above data to probability of appliance failure, one must clearly multiply the given values by the probability that a surge above 1200 volts would lead to appliance failure assuming the appliance is in use during the time of the lightning storm. (This would clearly be different for a toaster from what it would be for a radio.) If one is interested only in failures during the warranty period an additional adjustment would be required.

C. Possible Further Analysis

A more refined analysis is possible by taking into account the geographical location of the homes, the occurrence rate of the lightning storms during the period under examination in these homes, and the exact dates at which the voltage surges occurred in order to obtain a measure of the probability of a voltage surge per lightning storm. The resulting values can then be used in conjunction with the information given in Ref. 4 to calculate a probability of voltage surge in any specified geographic area during a particular part of the year. Such an analysis would remove the need for making one of the two alternate assumptions stated above and lead to a single set of estimates. However, this would require more detailed data than could be collected in this program.

2.4 Surge Suppression Experiment

At two of the locations where repetitive surges were found, a prototype surge suppressor was installed at the receptacle into which the counter was plugged. This suppressor consists of a Thyrector packaged for plug-in installation at receptacles, and is currently under evaluation by the Semiconductor Products Department for the home market. The counters were installed in alternating periods with and without suppressors, and the recording rates compared. A counter was especially modified to record surges over 600 volts in order to roughly evaluate the effectiveness of the suppressor in reducing the surges of 1200 volts or more occurring without suppression.

Location No. 1 - (Home in Ft. Wayne, Ind., refrigerator identified as source)

Dates (1965)	Conditions	Days	No. of Surges Above 1200 Volts Recorded	No. of Surges Above 600 Volts Recorded
3/11 to 8/10	No Suppressor	152	252	Unknown
8/10 to 9/16	Suppressor	37	0	Unknown
9/16 to 11/12	No Suppressor	57	107	Unknown
10/29 to 11/12	No Suppressor	14	Unknown	11
11/12 to 11/26	Suppressor	14	0	0
(1966)				
1/24 to 1/31	No Suppressor	7	Unknown	3
1/31 to 2/8	No Suppressor	7	Unknown	12

Location No. 2 - (Home in Newton, Mass., oil burner identified as source)

Dates (1966)	Conditions	Days	No. of Surges Above 600 Volts Recorded
5/10 to 5/17	No Suppressor	7	8
5/17 to 5/24	Suppressor in	7	0
5/24 to 5/31	No Suppressor	7	0

There were eight recordings which occurred in the first seven days without the use of the suppressor. On or about May 18, the warm weather really set in, and it is doubtful that the burner went on after that, which explains the absence of surges in the second period without the suppressor.

The results of the experiment at both locations are quite conclusive for the effectiveness of the Thyrector in suppressing the internally generated surges from a potentially damaging value in excess of 1200 volts to an innocuous value of less than 600 volts.

IV. DISCUSSION OF THE TRANSIENT MEASUREMENTS

1. Distribution of Magnitudes

The histogram, Fig. 4, shows the distribution as recorded by the oscilloscopes; the low frequency shown below 500 volts is due to a deliberate cutoff in the sensitivity of the oscilloscopes (in order to limit the number of oscilloscope triggers). This is to be compared with the distribution reported in Ref. 5 and reproduced on Fig. 5, where the frequency increased by three decades with a threshold lowered from 400 to 50 volts.

The highest internally generated surge was about 2800 volts, with the majority of the surges in the 1000 to 1500 volts range at locations where these were occurring frequently.

Lightning surges were found as high as 5.6 kV; however, the small total number of surges recorded makes it difficult to present definitive conclusions.

2. Distribution of Surge Generating Appliances

The 2.4% estimate derived from the surge counter survey has already been discussed from the statistical point of view in Section III. The real problem, however, is that of trading off minimum manufacturing cost (and, therefore, a calculated risk of failure) against complaint expenses. This is certainly the prerogative and responsibility of individual departments, and not that of the author. However, it is hoped that the data presented here will contribute a factual input to this trade-off.

V. EFFECTS OF TRANSIENT OVERVOLTAGES ON SEMICONDUCTORS

Previous investigations have indicated some significant factors to be considered when semiconductors are exposed to transient voltages in the reverse direction (forward direction generally results at worst in one-half cycle forward conduction into the load, which is not catastrophic with the AC power sources):

1. Failure modes, nonavalanche rectifiers

    a. The nonavalanche (or at least the non-"controlled avalanche") rectifiers fail by breakdown of the insulation surface at the edges of the wafer. This breakdown is a characteristic of the semiconductor geometry and materials, and has no direct relation to the PRV rating of the device.

    b. Application of a reverse voltage transient during forward conduction produces failure at levels substantially lower than when the transient is applied during blocking.

    c. No significant difference was found between the failure level for single vs multiple (several thousands) application of overvoltages.

    d. For steep pulse fronts (shorter than 1 μs), the failure level increases with rate of rise.

    e. Aging of semiconductors by storage at high temperature does not affect the failure levels.

    f. Energy level of the transient, i.e., duration for a specified voltage appearing across a specified impedance, does not affect the failure level.

2. Failure Modes--Controlled Avalanche Rectifiers

    The energy dissipating characteristic of the device can hold the transient voltage level below surface breakdown level, however, long pulses may heat the material so much as to produce:

    ● bulk failures by hot spot

    ● an increase in the voltage across the device such that surface breakdown voltage is reached

    Therefore, care and not indiscriminate selection is required in applying avalanche characteristics for circuits exposed to "long" transients.

VI. SUPPRESSION METHODS

Transient suppression can be accomplished either at the source or at the sensitive load. System designers may be able to specify the suppression at the source, but the majority of users will have to protect their appliances at the load, or at some location of their system. For instance, in a home, the suppressor may be installed at the service entrance or at an outlet. The service entrance location is optimum for protection against incoming surges, while the

outlet location is optimum for protection of a single appliance at that outlet. Nevertheless, a substantial protection is obtained throughout the house if a suppressor is installed at one outlet only.

While protective devices are fairly well known, their application can lead to some pitfalls.[6] For large and expensive equipment, it seems more acceptable to provide some investment in surge protection, which can then be specified by technical performance rather than cost. On the other hand, mass market devices are subject to economic criteria which make the selection of a surge protector a more delicate trade-off.

VII. REFERENCES

1. Martzloff, F. D. and Hahn, G. J., "Surge Voltage in Residential and and Industrial Power Circuits," IEEE Transactions on Power Apparatus and Systems, Vol. PAS-89, July/August 1970, pp. 1049-1056.

2. Dixon, W. J. and Massey, F. J., Jr., Introduction to Statistical Analysis, McGraw-Hill Book Company, Inc., New York, 1957.

3. Bowker, A. H. and Lieberman, G. J., Engineering Statistics, Prentice-Hall, Inc., Englewood Cliffs, New Jersey, 1959.

4. Brownlee, K. A., Statistical Theory and Methodology in Science and Engineering, John Wiley & Sons, Inc., New York, N. Y.

5. Bull, J. H. and Nethercot, W., "The Frequency of Occurrence and the Magnitude of Short Duration Transients in Low Voltage Mains," The Radio and Electronic Engineer, September 1964.

6. Martzloff, F. D., "Coordination of Surge Protectors in Low-Voltage AC Power Circuits," IEEE Transactions on Power Apparatus and Systems, Vol. PAS-99, January/February 1980, pp. 129-133.

VIII. ACKNOWLEDGMENTS

TABLE I

DETAILED ANALYSIS OF RECORDED SURGES

LOCATION	MOST SEVERE SURGE				MOST FREQUENT SURGE				AVERAGE NUMBER OF SURGES PER HOUR	DURATION OF OBSERVATION HOURS	REMARKS
	*TYPE	CREST VOLTS	PK-TO-PK VOLTS	DURATION μs OR CYCLES	*TYPE	CREST VOLTS	PK-TO-PK VOLTS	DURATION μs OR CYCLES			
D.P. Shattuck	A-1.5	700	1400	10 μs	A-1.5	300	600	10 μs	0.07	450	
K.N. Mathes	A-2.0	750	1440	20 μs	A-2.0	500	1000	20 μs	0.14	250	Fluorescent light switching
P. Chowdhuri	B-0.5	600	1000	1 cycle	B-0.5	300	500	1 cycle	0.05	500	
P.H. Bosworth	B-0.5	400	750	2 cycles	B-0.5	300	500	2 cycles	0.2	300	
R.L. Maul	C	640	-	5 μs	Two few surges to show typical value.				10 surges total	500	
R.G. Hoft	B-0.3	400	600	1 cycle	B-0.3	250	400	1 cycle	0.01	300	
P.A. Fessler	B-1	1800	3400	1 cycle	B-1.0	800	1400	1 cycle	0.03	1000	Probably all during lightning storm.
Ellis Hospital	C	1200	-	10 μs	B-0.5	300	600	4 cycles	0.1	900	
St. Clare's Hospital	C	2700	-	9 μs	C	900	-	5 μs	0.1	1000	All during lightning storm.
Barney's Dept. Store	B-0.3	1100	1400	1 cycle	Two few surges to show typical value.				4 surges total	700	
L & M Motel	B-0.5	300	500	1 cycle	B-0.5	300	500	1 cycle	0.5	600	
H.R. Sellers	B-0.25	1500	2000	4 μs 1 cycle	same as most severe				0.2	100	Probably oil burner.
W.H. Bellamy	B-0.25	2500	3500	4 μs 1 cycle	B-0.25	2000	3000	4 μs 1 cycle	0.4	125	oil burner
W.J. Smiley	B-0.2	1500	2000	5 μs 1 cycle	same as most severe				0.15	150	Probably water pump
J.R. Ross	B-0.2	1700	2000	5 μs 1 cycle	B-0.2	1400	1700	5 μs 1 cycle	0.06	500	oil burner
F.D. Martzloff	B-0.1	350	400	5 μs 1 cycle	too few to show typical				4 surges total	150	House adjacent to J.R. Ross
P.A. Abetti	C	800	-	15 μs	-	-	-	-	1 surge total	200	Probably lightning
D.G. Gruber	B-0.25	800	1000	12 μs 3 cycles	B-0.25	600	800	12 μs 3 cycles	0.05	1500	Rural area
K.H. Hoffmann	B-0.15	400	600	15 μs	B-0.13	200	350	30 μs	0.4	130	includes low amplitude surges
Deer Park	B-0.5	5600	10000	2 μs 4 cycles	B-0.3	1000	1500	3 μs 1 cycle	0.1	400	Lightning stroke within 1000 feet.
Palmetto	B-0.2	1400	200	10 μs 4 cycles	B-0.2	600	1000	10 μs 4 cycles	0.07	100	Lightning
#2 MG System	C	600	-	50 μs	C	300	-	50 μs	0.15	150	isolated system
480 volt feed system	B-1.2	300	400	.4 μs ½ cycle	too few to show typical				0.1	100	

No surges above 300 volts were recorded at the 7 following locations: GE Bldg. 37, roof-top house, air conditioning bus, 440 volts bus, 550 volts bus; Hotel Van Curler; MG system #1; B. Murphy.

*TYPE: A - Long Oscillation; B - Damped Oscillation; C - Unidirectional - NUMBER SHOWS FREQUENCY IN MEGACYCLES

(1962 spans the upper section; 1963 spans the lower section)

TABLE II

SUMMARY OF SURGE COUNTER RECORDINGS IN HOMES - DECEMBER 1964 to MARCH 1965

Location (Approximate)	Number of homes surveyed	Recording Period (weeks)	Number of Houses with Surge Activity	Detailed Information
Providence, R.I.	4	2-6	None	
Cleveland, Ohio				
Lg. Lamp data	14	2-4	1	1 surge over 1200 - community-wide power failure.
Min. Lamp data	14	2-4	None	
Auburn, N.Y.	12	2-3	None	
Lynchburg, Va.	3	2-3	None	
Syracuse, N.Y.	8	1-2	1	1200 to 2000V surge, 1 polarity only, 64 counts in 10 days, probably refrigerator.
Chicago, Ill.	23	1-6	None	
Ashland, Mass.	24	1-2	2	1 surge over 1200V in a 20 day period, no known system disturbance. 6 surges over 1200V in a 12 day period, no known system disturbance.
Holland, Mich.	6	2-10	None	
Louisville, Ky.	10	2-6	1	1 surge over 1200V - lightning stroke which burned out TV set and UHF converter in the home.
Somersworth, N.H. (and nearby N.H. & Maine locations)	50	1-2	1	Surges between 1200 and 2000 volts, some probably close to 1200 as two counters at same location had difference in count. Counter simultaneously installed in adjacent house did not record any surges. Most frequent count at night in cold weather; probable cause is oil burner.
Plainville, Conn.	5	10	None	DAD & CPDD data.
Asheboro, N.C.	24	1-2	None	
Ft. Wayne, Ind.				
Spty. Transf. data	23	1-2	None	
Laboratory data	15	2-4	3	Location #1*: Ballast side of switch controlling a fluorescent lamp, no surges on the line side. (7 counts) Location #2*: Surges recorded in connection with operation of GE portable mixer. (5 counts) Location #3*: Surges recorded as fan motor plug is removed from same outlet as counter. (5 counts) * All between 1200 and 2000V
DeKalb, Ill.	10 4	3 12	None	
Pittsfield	26	1-2	1	One surge with no known system disturbance

TABLE III

Summary of Surge Counter Recordings in Homes
April - December 1965

Location	No. of Homes	Total Home x Week	No. Surges Over 1200 V	Remarks
Providence, R.I.	6	60	1 in 1 Home	Frequent power interruption at home where surge was recorded.
Ashboro, N.C.	13	85	0	Several storms in area.
De Kalb, Ill.	11	60	1 in Home #1 1 in Home #2	Violent storm. No known disturbance.
Somersworth, N.H.	3	48	1 in 1 Home	Owner installed arrester after the first count.
Chicago, Ill.	12	58	0	
Cleveland, Ohio	5	66	1 in 1 Home	During power outage.
Decatur, Ill.	12	72	1 in Home #1 2 in Home #3	During storm. During same storm.
Cleveland, Ohio	3	40	0	
Holland, Mich.	7	56	0	
Auburn, N.Y.	3	70	0	
Springfield, Pa.	1	24	0	
Ashland, Mass.	6	72	0	
Pittsfield, Mass	3	60	1 in 1 Home	2000 volt counter at same outlet did not register (during storm).
Plainsville, Conn.	3	60	0	
Lynchburg, Va.	3	15	0	
Total	91	846	9 in 8 Homes	

Composite record showing
surges for a 24-hour
period.

Oscilloscope is triggered
for each surge, plus once
every hour, resulting in
± 165 volt band of steady-
state 60 cps voltage.

Recordings above 1800V
are blanked out by
oscilloscope.

± 165 volts of 117 AC line

2000 —
1500 —
1000 —
500 —
0 —
Volts
500 —
1000 —
1500 —

0   8.5   18   32   53   100
Microseconds

Single surge occurring
150 µs after initial,
low amplitude surge
triggered the oscilloscope.

1000 —
500 —
0 —
Volts
500 —
1000 —
1500 —

0   8.5   18   42   53   100
Microseconds

Maximum recorded surge,
at 2600 volts.

In a 5-day period surges of
this wave shape were
recorded as follows:

Number of surges	Voltage Range
1	2500 - 3000
21	2000 - 2500
18	1500 - 2000
13	1000 - 1500

Cause: H.V. transformer for
       oil furnace interrupted

3000 —
2000 —
1000 —
0 —
Volts
1000 —
2000 —
3000 —

0   1.7   3.7   6.4   10.6   20
Microseconds
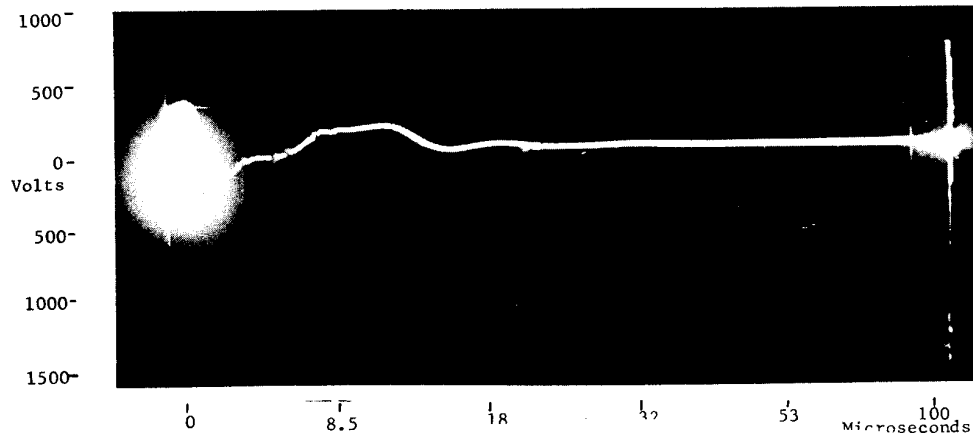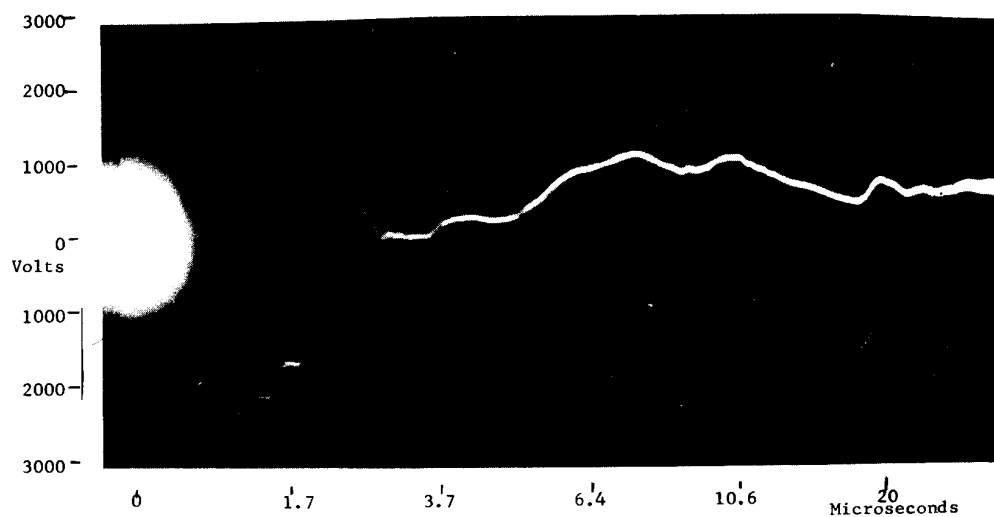
Fig. 1.   Typical Surges Recorded at Stewart Manor, L.I., N.Y.,
February 16-21, 1963.
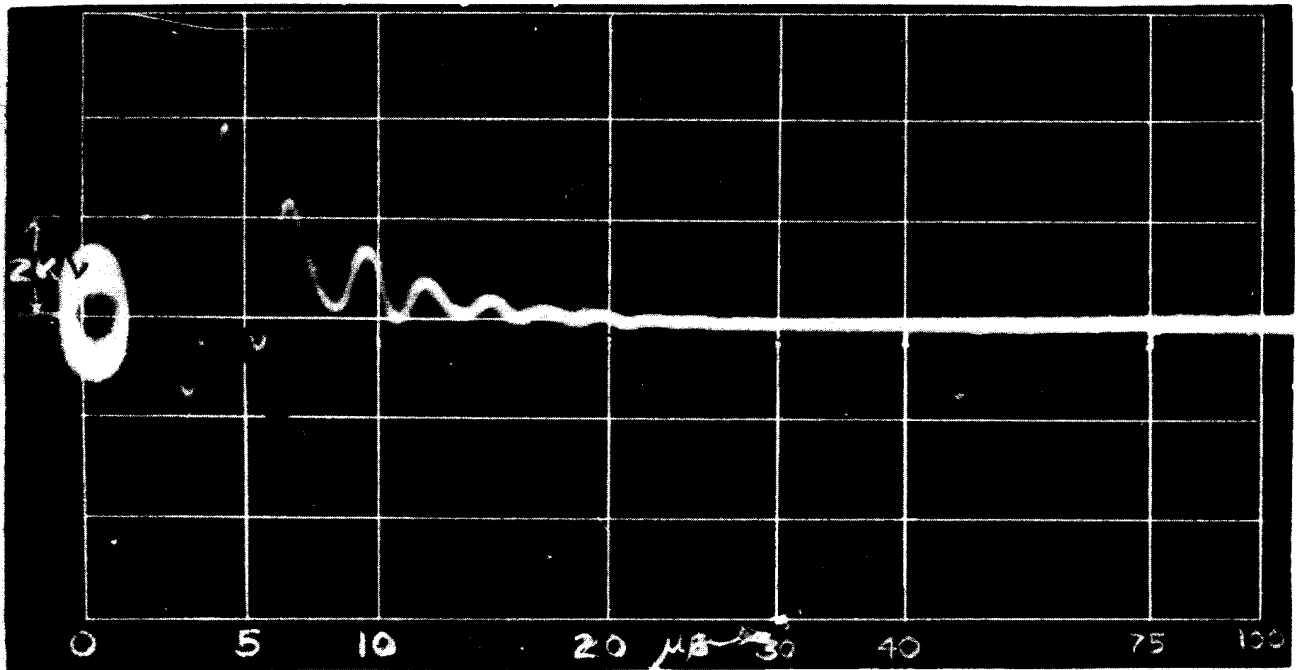
Lightning surge at Deer Park   3.8 KV crest, 1μs rise time
330 KC oscillation
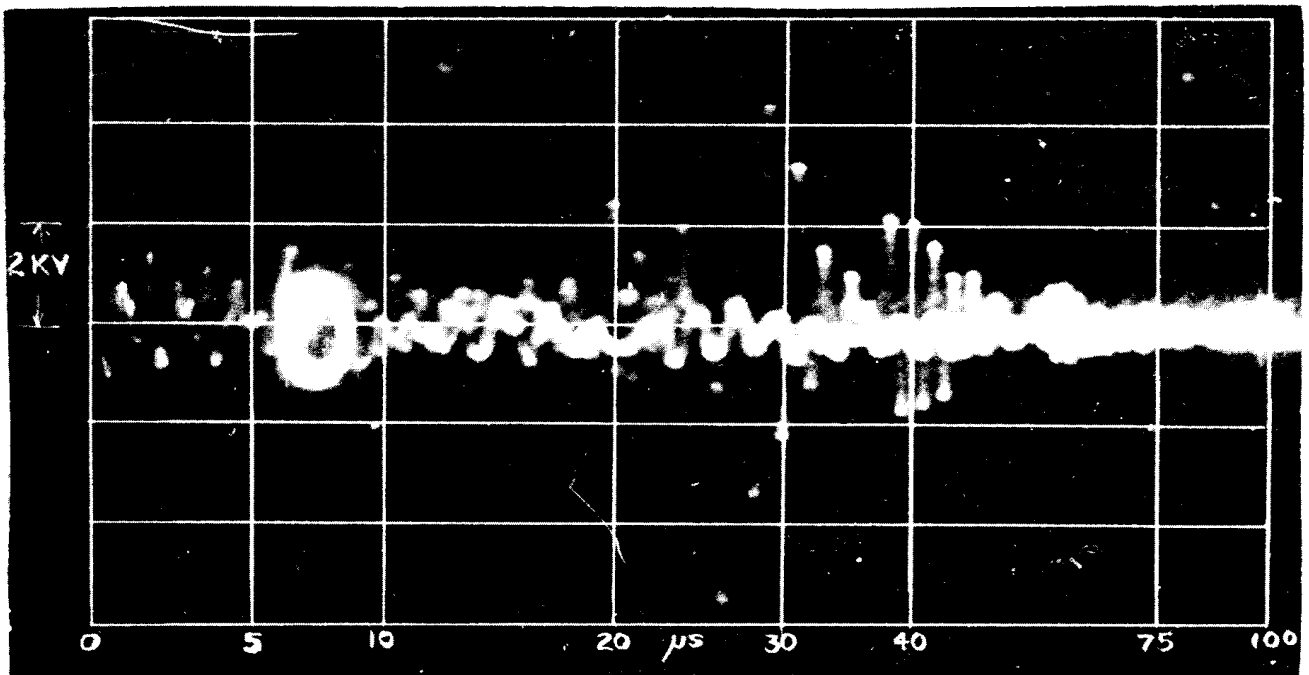
Lightning surge at Deer Park   5.6 KV crest, rise time < 1μs
500 KC oscillation

Fig. 2. Transients Recorded on Overhead Distribution Systems in Charleston, S. C., July 1963.
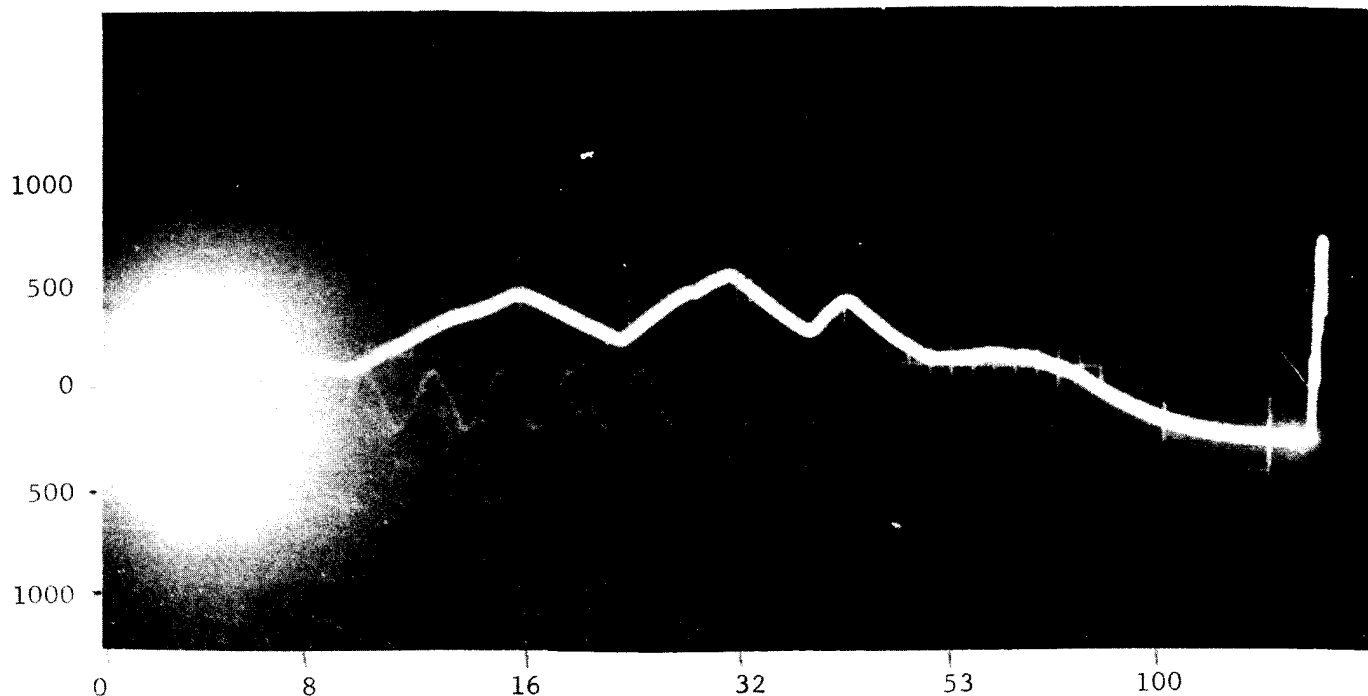
Switching transient with restrikes--probably external to the house.
(The faint sine wave corresponds to the return of the electron beam which was
not completely blanked out. It illustrates the peak-to-peak value of the
steady state 117 voltage, but not at the same rate as the forward sweep.)
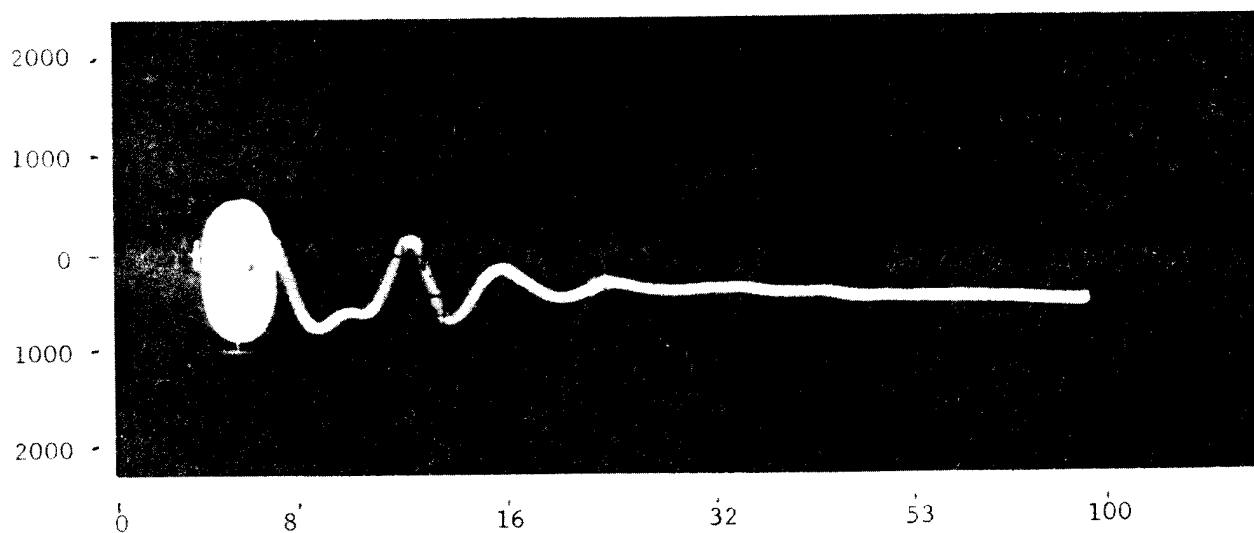
Internal switching transient
(15 such transients in 1500 hours)

Fig. 3. Transients Recorded at a Farmhouse, August 1963.

Fig. 4

-17-
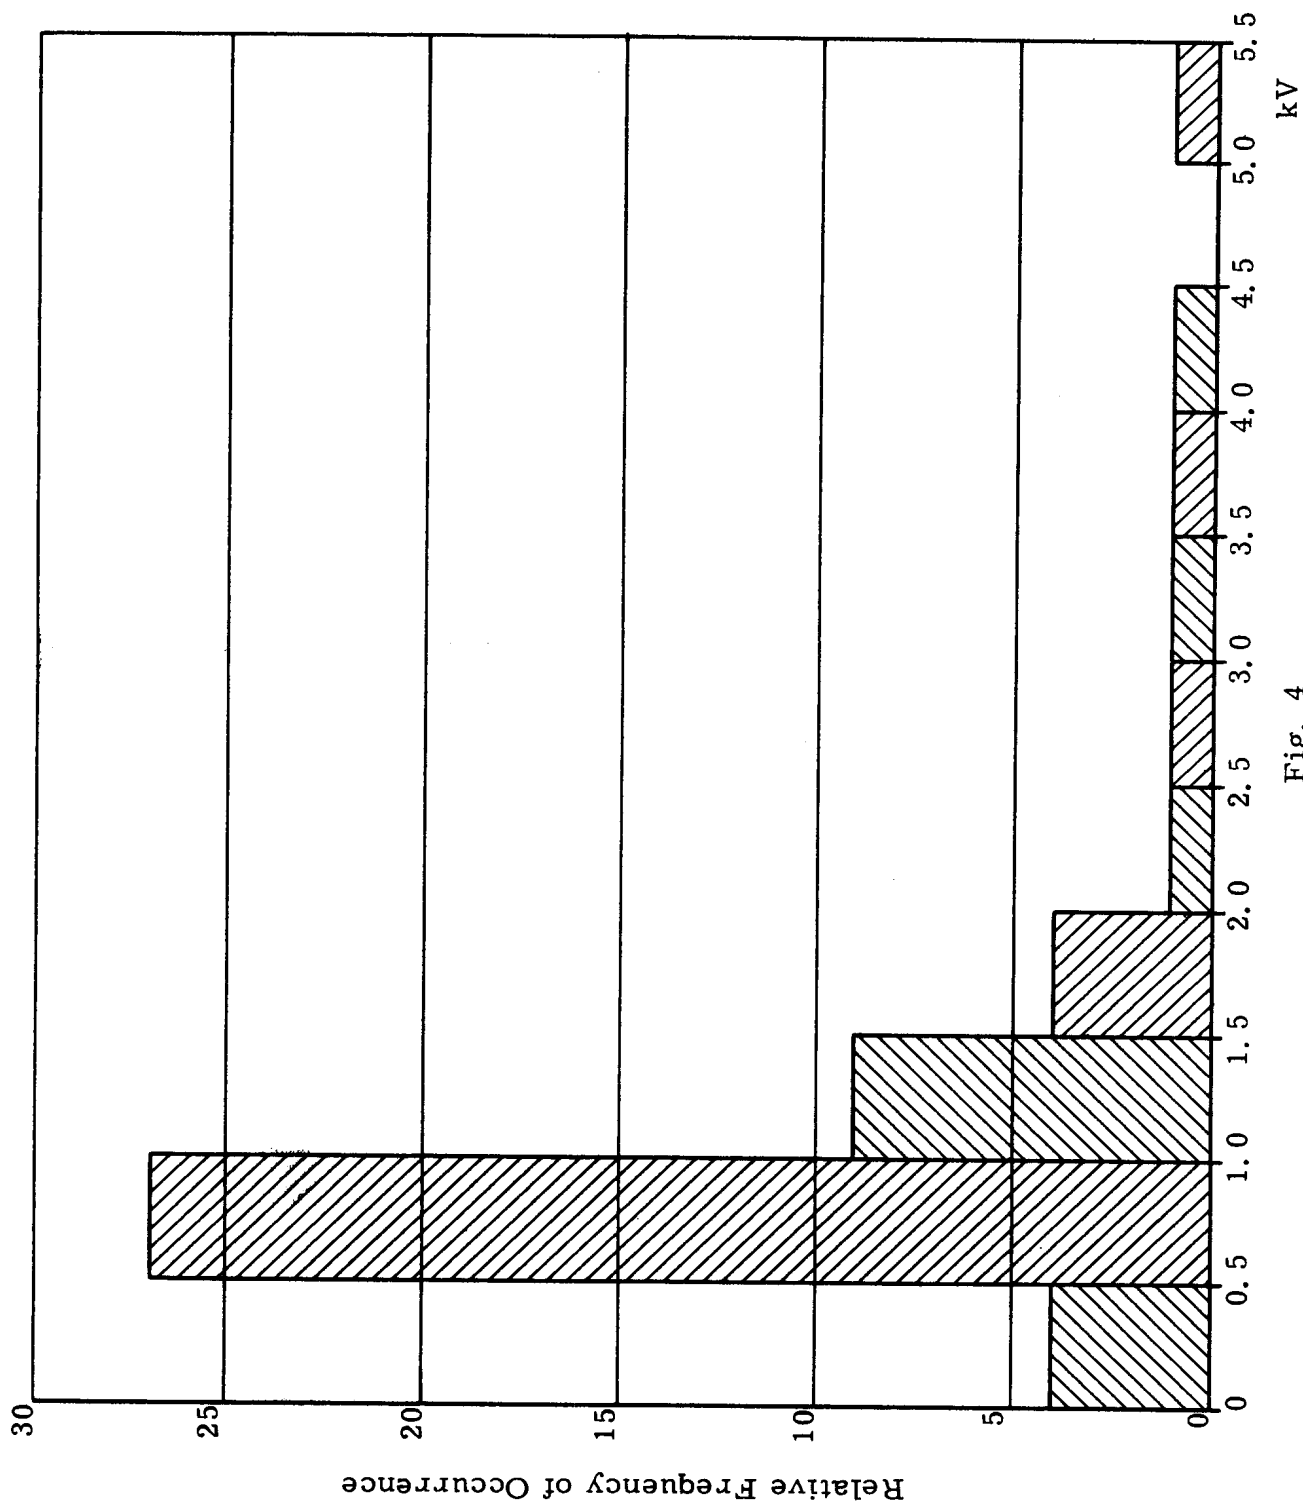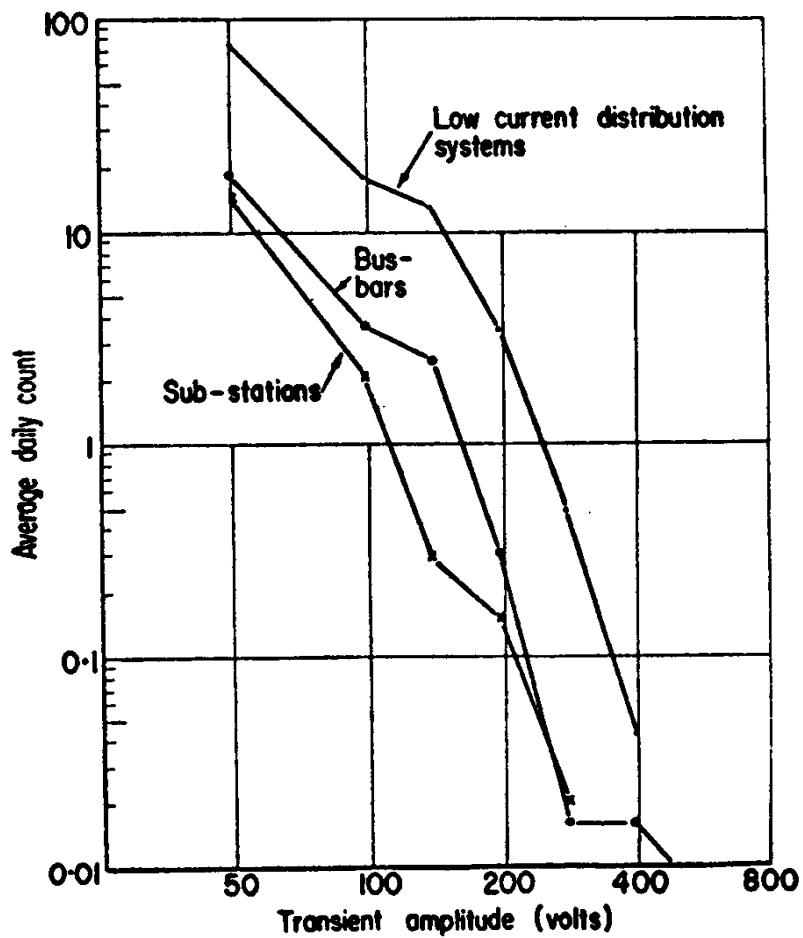
Fig. 5. Variation of frequency of occurrence with amplitude for short duration transients.

Fig. 5. Excerpt from Bull and Nethercot Paper.

BIBLIOGRAPHY

This bibliography was prepared by the author for IEEE Standard 587 - 1980, "IEEE Guide for Surge Voltages in Low-Voltage AC Power Circuits". It is reprinted with permission of The Institute of Electrical and Electronics Engineers, Inc., 345 East 47th Street, New York, New York 10017.

D1. Publications Describing the Environment

[D1] AIEE COMMITTEE REPORT. Switching Surges Due to De-Energization of Capacitive Circuits, *AIEE Transactions*, Aug 1957, pp 562–564.

[D2] ALLEN, G. W., and SEGALL, D. Monitoring Computer Installations for Power Line Disturbances, presented at the IEEE Power Engineering Society Winter Meeting, New York, NY, Jan 1974, Paper C74-199-6.

[D3] BODLE, D. W., GHAZI, A. J., SYED, M., and WOODSIDE, R. L. *Characterization of the Electrical Environment*, Toronto and Buffalo, NY: University of Toronto Press, 1976.

[D4] BULL, J. H. Impedance of the Supply Mains at Radio Frequencies, *Proceedings of the First Symposium on EMC*, Montreux, May 1975, 75CH1012-4 Mont.

[D5] CHOWDHURI, P. Transient-Voltage Characteristics of Silicon Power Rectifiers, *IEEE Transactions on Industry Applications*, vol IA-9, Sept/Oct 1973, p 582.

[D6] CIANOS, N., and PIERCE, E. T. A Ground-Lightning Environment for Engineering Usage, Stanford Research Institute, Menlo Park, CA 94205, Aug 1972.

[D7] Golde, R. H., Ed. *Lightning*, vols 1 and 2, New York: Academic Press, 1977.

[D8] HASLER, R., and LAGADEC, R. Digital Measurement of Fast Transients on Power Supply Lines, proceedings of the Third Symposium on EMC, Rotterdam, May 1979.

[D9] JOHNSON, I. B. IEEE Tutorial Course: Surge Protection in Power Systems, IEEE Power Engineering Society, 79EH0144-6-PWR, 1978.

[D10] LENZ, J. E. Basic Impulse Insulation Levels of Mercury Lamp Ballast for Outdoor Applications, *Illuminating Engineering*, Feb 1964, pp 133–140.

[D11] LERSTRUP, K. Atmospheric Overvoltages on Low-Voltage Installations, International Electrotechnical Commission, Doc IEC-28A/WG1, Feb 1976.

[D12] MARTZLOFF, F. D. Coordination of Surge Protectors in Low-Voltage AC Circuits, presented at the IEEE Power Engineering Society Summer Meeting, 1979, Paper F 79 635-4.

[D13] MARTZLOFF, F. D. Protection contre les surtensions: Importance des nouvelles techniques. *Proceedings, 1980 IEEE Canadian Conference on Communications and Power*, 80CH1583, pp 267–270.

[D14] MARTZLOFF, F. D., and CROUCH, K. E. Coordination de la protection contre les surtensions dans les réseaux basse tension résidentiels, *Proceedings 1978 IEEE Canadian Conference on Communications and Power*, 78CH1373-0, pp 451–454.

[D15] MARTZLOFF, F. D., and Hahn, G. J. Surge Voltage in Residential and Industrial Power Circuits, *IEEE Transactions on Power Apparatus and Systems*, vol PAS-89, July/Aug 1970, pp 1049–1056.

[D16] PLUMER, J. A., and CROUCH, K. E. *Lightning Protection for Traffic Control Systems*, Washington, DC, and Pasadena, CA: Public Technology, 1978.

D2. Publications Describing Test Methods

[D17] CROUCH, K. E., FISHER, F. A., and MARTZLOFF, F. D. Transient Control Levels: A Better Way to Voltage Ratings in Power Converter Applications, *Conference Record*, IEEE Industry Applications Society, 11th Annual Meeting, Chicago, IL, Oct 11–14, 1976, pp 940–944.

[D18] FISHER, F. A. and MARTZLOFF, F. D. Transient Control Levels, a Proposal for Insulation Coordination in Low-Voltage Systems, *IEEE Transactions on Power Apparatus and Systems*, vol PAS-95, Jan/Feb 1976, pp 120–129.

[D19] LUTZ, M. Testing with Impulse Voltages and Impulse Currents in the Range of 0.5 to 75 kV and 1 A to 30 kA, Haefely Application Note, 1979. (Available from American HV Test Systems, Central Garrett Industrial Park, Accident, MD 21520.)

[D20] MARTZLOFF, F. D. Transient Control Level Test Generators, Corporate Research and Development, General Electric Company, Schenectady, NY, 1977, Rep 77CRD241.

[D21] MARTZLOFF, F. D. and FISHER, F. A. Transient Control Level Philosophy and Implementation: The Reasoning Behind the Philosophy, *Proceedings 2nd Symposium on EMC*, Montreux, June 1977, 77CH1224-5EMC.

[D22] MONDRUSAN, M. Long-Duration Impulse Current Generator for Arrester Tests According to IEC Recommendations, *Bulletin SEV/VSE*, vol 68, 1977, pp 1304-1309.

[D23] RICHMAN, P. Conductive Surge Testing of Circuits and Systems, presented at the FAA-NASA Symposium on Lightning Technology, Florida Institute of Technology, Apr 22-24, 1980.

[D24] RICHMAN, P. Diagnostic Surge Testing, pts I, II, *Power Conversion*, Oct/Nov, 1979.

[D25] TIMPERLEY, J. E. Construction and Application of a SWC Generator, presented at the IEEE Power Engineering Society Winter Meeting, New York, NY, Jan 1972, Paper C72-040-9.

D3. Standards and Related Documents

[D26] ANSI C62.2-1969, Guide for Application of Valve Type Lightning Arresters for Alternating Current Systems.

[D27] ANSI/IEEE C37.90a-1974, Guide for Surge Withstand Capability (SWC) Tests.

[D28] ANSI/IEEE Std 28-1974, Standard for Surge Arresters for AC Power Circuits.

[D29] Code of Federal Regulations, Longitudinal Voltage Surge Test #3, sec 68.302(e), title 37, Telecommunications. Washington, DC: US Government Printing Office, 1977.

[D30] IEC No 664 (1980), Insulation Coordination within Low-Voltage Systems Including Clearances and Creepage Distances for Equipment.

[D31] IEEE Std 4-1978, Standard for High-Voltage Testing Techniques.

[D32] IEEE Std 465.1-1977, Test Specifications for Gas Tube Surge Protective Devices.

[D33] Rural Electrification Administration (REA) Specification PE-60, Trunk Carrier Multiplex Equipment. Washington, DC 20250, 1975.

[D34] UL943, Standard for Safety — Ground Fault Circuit Interrupters, May 1976.

VARISTOR VERSUS ENVIRONMENT: WINNING THE REMATCH

Varistor versus Environment: Winning the Rematch

François Martzloff, Life Fellow, IEEE
National Institute of Standards and Technology
Gaithersburg MD 20899 USA
f.martzloff@ieee.org

Significance:

This paper is listed under four categories of the Annotated Bibliography as it bears on the corresponding topics. The multiple listing reflects the sections in which this paper is cited as supporting material for IEEE Std C62.41.1 and C62.41.2.   Therefore, it can be found in the following four parts of the Anthology:

Part 2 Development of standard – Reality checks
Provides an example of the need to recognize capacitor switching transients when characterizing the surge environment

Part 3 Recorded occurrences, surveys and staged tests
Provides an example of monitoring and staged tests motivated by field failure, leading to a better understanding of the environment in which SPDs were expected to perform.

Part 4 Propagation and coupling of surges
Provides an example of how far (3000 meters) the low-frequency transients generated by capacitor switching can propagate, unabated, in a path involving two step-down transformers.

Part 7 Mitigation techniques
Provides an example of improved mitigation design based on field experience

VARISTOR VERSUS ENVIRONMENT: WINNING THE REMATCH

François D. Martzloff, Fellow IEEE
Corporate Research and Development
General Electric Company
Schenectady, New York 12345

Abstract — An unusual case of difficult application of surge protective devices was solved by field measurements with retrofit of protective devices suitable for the particular environment. On-site measurements indicated that capacitor switching transients were causing excessive current surges in the varistors and fuses protecting the input to a thyristor motor drive. Knowledge of the environment gained by the measurements allowed understanding of the problem and specification of matching surge protective devices.

SUMMARY

During the initial startup of a solid-state motor drive in a chemical processing plant, difficulties arose with the varistor and its protective fuse at the input of the thyristor circuits. Frequent blowing of the fuse was observed, with occasional failure of the varistor. On-site measurements of the voltages and currents at the input to the drive indicated that switching transients associated with the operation of a remote substation capacitor bank and the relatively low clamping level of the varistor were producing current above the fuse and varistor ratings; hence the short lives of these two components. When the actual conditions at that site were determined by measurements, it became possible to specify surge protective devices capable of withstanding that environment. Immediate relief was secured by the installation of a larger varistor at the same point of the circuit; long-term protection was obtained by the addition of a gapless metal-oxide varistor arrester on the primary side of the step-down transformer feeding the drive. The situation has been changed from failures occurring every few days to no further problems in the 3 years since the larger varistor was installed.

INTRODUCTION

This paper presents a case history illustrating how surge protective devices that are successfully applied for the majority of cases can occasionally suffer failure when exposed to exceptionally severe surge environments. This paper also shows how little attenuation occurs, at the frequencies produced by switching surges, between the distribution level (23 kV) and the utilization level (460 V), even though a long line and two step-down transformers exist between the source of the transient and the point of measurement.

The problem involved a 460 V power supply to a thyristor drive circuit in a chemical processing plant extending over several square miles. During the initial startup, difficulties arose with the varistor and its protective fuse at the input of the thyristor circuits. Frequent blowing of the fuse was observed, with occasional failure of the varistor. The plant substation, fed at 23 kV from the local utility, included a large capacitor bank with one-third of the bank switched on and off to provide power factor and system voltage regulation. These frequent switching operations were suspected of generating high-energy transients that might be the cause of the failure of the fuses and varistors, because literally thousands of similar drive systems have been installed in other locations without this difficulty. On-site measurements performed after repeated blowing of fuses and occasional failure of varistors connected at the input to the thyristor drive indicated that indeed the devices were not matched to their environment. From this point on, specifying larger sizes, sizes appropriate to the environment [1], solved the problem.

POWER SYSTEM AND SWITCHING TRANSIENTS

Figure 1 is a simplified one-line diagram of the significant elements of the power system causing the varistor failures. The incoming 115 kV power is stepped down to 23 kV. Three banks of 5400 kVAR capacitors are connected to the 23 kV bus. Typical operating conditions involve two banks connected at all times, with the third bank switched on or off automatically to provide voltage regulation. Power distribution throughout the site is done at the 23 kV level.

The various drive systems which experienced the difficulty are supplied at 460 V by a 2300/460 V transformer in their control house. A substation close to the control house supplies the 2300 V power from the 23 kV distribution system.
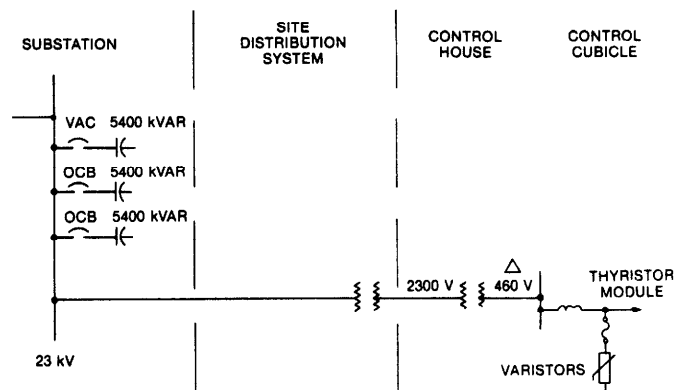

Figure 1. Simplified one-line diagram

Figure 2 is a simplified three-phase schematic of the power input. In the original circuit, the thyristor modules were protected by varistors at the power input of the 1250 hp drive, where the measurements were made. A 6 μH line inductance, L1, was inserted between the bus and the thyristor modules; 20 mm varistors rated 510 V were connected in a delta configuration, in series with a current-limiting fuse in each line. The varistor connection was about 80 cm long, introducing an estimated 1 μH inductance into each lead.
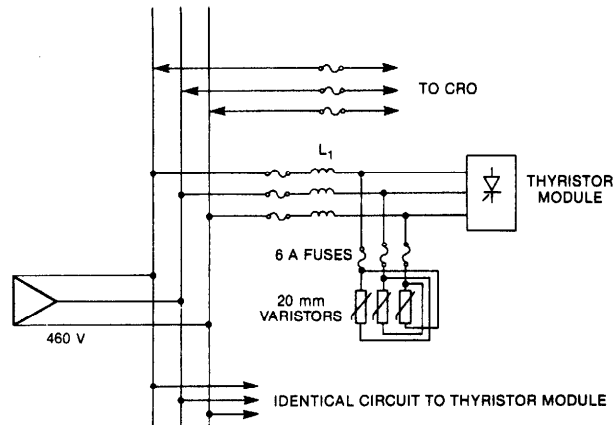

Figure 2.   Simplified three-phase schematic

Instrumentation and Measurements

Oscilloscopes were used to measure voltage across one varistor and its connection and currents through all varistors. Voltage measurements were made phase-to-phase on the floating delta 460 V bus bars with Tektronix P6015 1000:1 probes, connected to a Tektronix 7633 storage oscilloscope in differential mode. Current measurements were made with a Tektronix CT5 20:1 current transformer coupled with a P6021 current probe and connected to a second Tektronix 7633 storage oscilloscope.

The trigger modes used during a two-hour monitoring period included positive or negative slopes for both slow ac and high-frequency modes. For the various modes, the level was adjusted to produce a trigger for a voltage exceeding the normal line voltage crest by about 20%, or a varistor current in excess of 2 A. No trigger occurred during the monitoring period. A low-frequency voltage recorder installed by plant personnel produced a recording characterized as representative of an unusually quiet day in the power system operations.

Manual off-on switching of the 5400 kVAR capacitor bank at the 23 kV utility substation was the next step in the measurement procedures because the switching of a capacitor bank is always a prime suspect for producing transients. Measurements were performed with one oscilloscope monitoring the line voltage upstream of the line inductors (Figure 2) and another oscilloscope monitoring the sum of the currents in the three varistors (Figure 3).
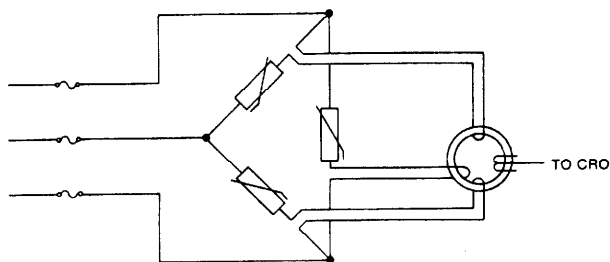
Figure 3.   CT connection for recording all three varistor currents

Results

The oscillograms of Figure 4 show typical voltage recordings made during this sequence. The voltages are *not* open-circuit transient voltages. They are instances of the voltage appearing at the bus entrance point. This voltage is the sum of the varistor clamping voltage, the voltage drop in the varistor connections, and the voltage across two L1 inductances.

A typical total event recorded on one of the phases during a capacitor bank closing is shown in Figure 4A. A low-frequency oscillation with a period of 3 ms (330 Hz) and initial peak-to-peak amplitude of 450 V decayed in about 10 ms. The high-frequency oscillations are resolved in the recording of Figure 4B (recorded during a similar switching sequence). This high frequency has an initial peak-to-peak amplitude of 2000 V, decaying in about 5 ms. The period is 180 μs (5.5 kHz). A similar, third event is shown in Figure 4C. For scaling the amplitudes, the steady-state voltage is shown in Figure 4D.
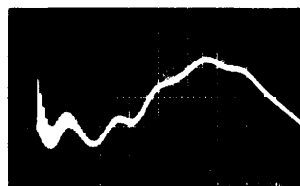
A   Sweep: 2 ms/div
Vertical: 500 V/div
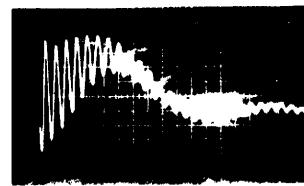
B   Sweep: 0.5 ms/div
Vertical: 500 V/div
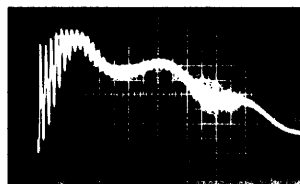
C   Sweep: 1 ms/div
Vertical: 500 V/div

D   Sweep: 2 ms/div
Vertical: 500 V/div

Figure 4.   Capacitor switching transients and steady-state voltage

Observe that, depending on the time of closing with respect to the 60 Hz voltage, the 5.5 kHz oscillation varies in amplitude; furthermore, the modulation by the 330 Hz oscillation pushes crests of the 5.5 kHz oscillation above the 1000 V level some time after the beginning of the trace, at a time when the 5.5 kHz amplitude is already lower, producing a burst of pulses above the 1000 V level.

The significance of this finding will be discussed next, with reference to Figure 5, which shows recordings of transient currents in all of the three varistors. The 510 V varistor has a nominal voltage at 1 mA [2] in the range of 735 V to 970 V. For a varistor with a nominal voltage in the middle of this range, a current in the order of tens to hundreds of amperes will flow if a voltage of 1000 V is applied to the varistor. Figure 5A shows a train of current pulses in the range of 10 to 40 A. In the burst of Figure 5B, the recorded current pulses range from 5 A to 200 A. The current and voltage traces are not simultaneous events because each of the two oscilloscopes was triggered by its internal circuit. The nearly symmetrical appearance of this burst can be compared to the symmetry of the voltage peaks exceeding the 1000 V level in Figure 4, the one correlating with the other.

The oscillograms of Figures 4 and 5 were selected as most severe from a series of 20 capacitor switching sequences. Some sequences could not even produce a current or voltage trigger; four sequences produced bursts with the central peak exceeding 120 A, two of these reaching 200 A peaks.

A Sweep: 0.2 ms/div
Vertical: 20 A/div

B Sweep: 0.5 ms/div
Vertical: 40 A/div

Figure 5.   Current surge bursts during capacitor switching

These recordings establish the nature of the current surges that are conducted by the varistors, with an estimate of 10% reaching 200 A maximum crests and another 10% reaching 120 A crests, for all capacitor bank switching.

In Figures 4 and 5, we note that the characteristic appearance of the voltage and current usually observed during a switch restrike is absent [3], indicating a clean switching action of the vacuum interrupters used for switching the capacitor bank. Restrikes are most likely to occur during de-energizing. In all the off-on switching sequences of this test series, no significant transient was observed during de-energizing; all occurred during energizing.

The oscillograms of Figures 4 and 5 establish and explain the pattern of current pulses. The voltages of Figure 4 are not the open-circuit voltages impinging the drive input but, rather, the voltages resulting from the clamping action of the varistors. To better evaluate the magnitude of the switching transients, open-circuit voltages were recorded in a next sequence, with all fuses to the drive open, thus disconnecting both the varistors and all sensitive loads. Figure 6 shows two typical recordings of open-circuit voltages and two of voltages resulting from varistor clamping, recorded during a series of 10 switching sequences for each condition. Table 1 shows the recorded crests of the five highest voltages in each condition; the difference between the two groups, with due allowance for the imperfect statistical basis of the obs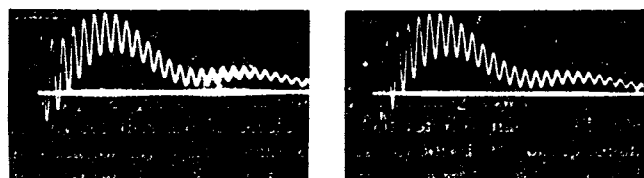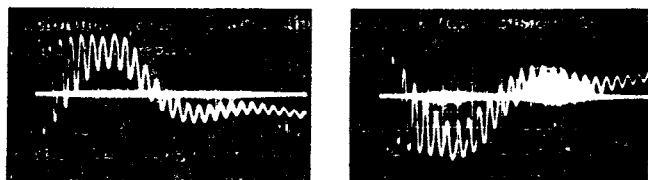ervations, indicates that the 510 V varistors reduced the peaks from a typical high of 1450 V to a typical high of 1100 V.

Open-Circuit Voltages

With 20 mm Varistors

All Traces: Sweep: 0.5 ms/div
Vertical: 500 V/div

Figure 6.   Capacitor switching transients

Table 1
FIVE HIGHEST TRANSIENTS IN SEQUENCE OF 10 SWITCHINGS

Without Varistors	With Varistors
1450	1100
1400	1100
1300	1050
1300	1050
1300	1050

DISCUSSION

Nature of the Transients

The absence of any transient (over 120% of normal crest) during the 2-hour monitoring period was somewhat surprising, in the context of earlier reports of high counts recorded with Dranetz disturbance analyzers. Frequent checks of threshold levels and variations of the possible trigger modes were made, maximizing the chance of catching an overvoltage, but indeed none occurred. This unusual quiet was also reflected in the chart recording made by the plant personnel, so that the absence of random transients for that period can be accepted at face value.

Therefore, conclusive evidence was obtained that substantial current pulses were absorbed by the varistors during capacitor switching. The magnitude and duration of these pulses were excessive for the capability of a 20 mm disc; many similar drives installed elsewhere do not experience the failures encountered at that particular location.

Another significant finding from these measurements is the fact that the switching transients, generated at the 23 kV level, propagate down to the point of utilization at the 460 V level. Numerical discussion of this finding is given later in this paper.

Effect of Transients on Varistors

Published varistor specifications include the "pulse ratings," a family of curves that define, for each varistor type, the number of isolated pulses that a varistor can absorb until its "rating" is reached [4]. The curves show lines relating amplitude, duration, and total number of pulses. Figure 7 shows this family of curves for the original 20 mm varistor.

Figure 8 shows the same curves for a proposed 32 mm varistor. It should be noted that the pulse rating does not mean catastrophic failure of the varistor at the end of this rating, but only a 10% change in the varistor nominal voltage. Although some change is indicated, the varistor is quite capable of staying on line voltage and of clamping surges.
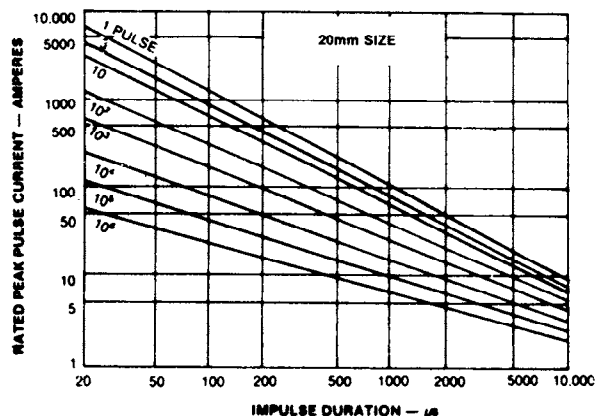

Figure 7.   Pulse ratings of 20 mm varistor [4]
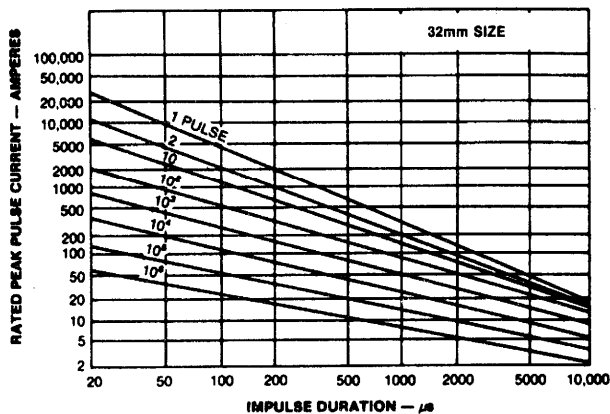
Figure 8.   Pulse ratings of 32 mm varistor [5]

A. Same current, increasing duration

B. Same number of pulses, increasing duration

Figure 9.   Reading pulse ratings curves

A careful examination of the pulse rating curves will show that the duration of the pulses has a strong influence on the number of permissible pulses. Furthermore, the relationship between the increased duration of the pulses and the decreased number of permissible pulses is not proportional. For instance, consider pulses of 100 A peak and 100 μs duration (Figure 9A): the curves show 5000 pulses allowed. Now increase the duration of the pulses to 1000 μs (a ten-fold increase), while keeping the amplitude at 100 A: the curves show the permissible number as one pulse only. Thus, the ten-fold increase in duration does not result in a ten-fold decrease in the number of permissible pulses; the reduction in that number is much greater than the inverse of the increase in duration. Conversely, taking a pulse duration of 1000 μs, and seeking the amplitude allowable for the same 5000 pulses, Figure 9B shows that the current is 20 A, which is five times less than the original 100 A, not ten times less. Therefore, it would be incorrect to treat the multiple pulses of Figure 5 as five separate short pulses; rather, one equivalent long pulse has to be defined.

The five-pulse burst of Figure 5 has been redrawn in Figure 10 in order to plot an equivalent continuous pulse of approximately equal duration, with a crest such that the i·t integral of the burst and the i·t of the equivalent pulse are approximately the same. The use of i·t rather than the i^2·t integral typically used for fuses or other linear loads is justified by the fact that heat deposited in the varistors is the significant parameter because the nominal voltage change process is temperature related; this heat is the product of the variable i and the nearly constant voltage across the nonlinear varistor during the burst.

The equivalent pulse of Figure 10 can then be used to evaluate, from the pulse ratings of Figure 7, the number of high-amplitude switching transients that will consume 100% of the varistor pulse rating. Inspection of Figure 6 shows that for a 800 μs duration and 100 A amplitude, the pulse rating of the 20 mm varistor (6 kA rating at 8/20 μs) is reached with two such events. With a probability of about 10% that this highest switching transient would occur during random timing of the switching (the effect decreases rapidly for transients other than the highest) and with 2 to 4 switching operations each day, the pulse rating of the varistors could be reached with 20 operations, failure perhaps starting at 40 to 50 operations, or after about 10 days of exposure to that power system environment. This estimate is unavoidably imprecise because the pulse rating curves represent a conservative minimum; actual failures will occur only for amplitudes or numbers of pulses exceeding the rating by a large but imprecise margin to allow for manufacturing variations. However, the order of magnitude of this estimated time to failure is in accord with the observations made at that installation.
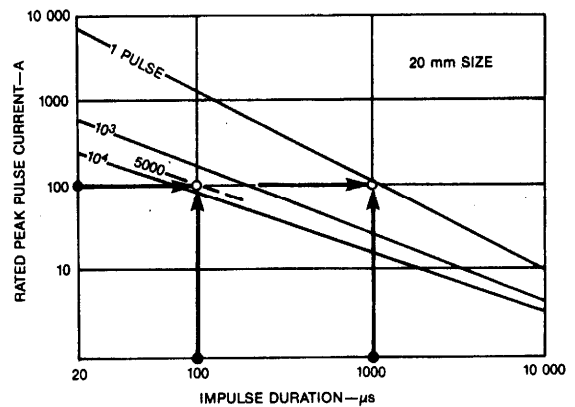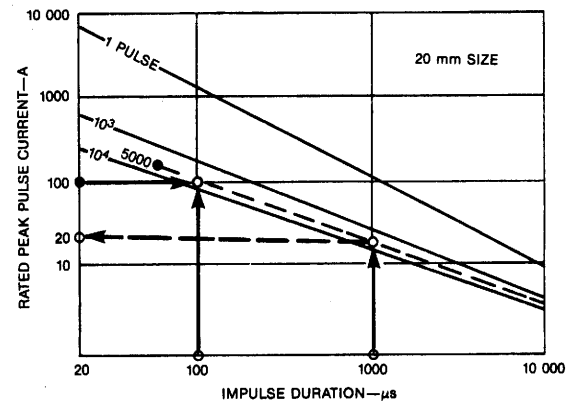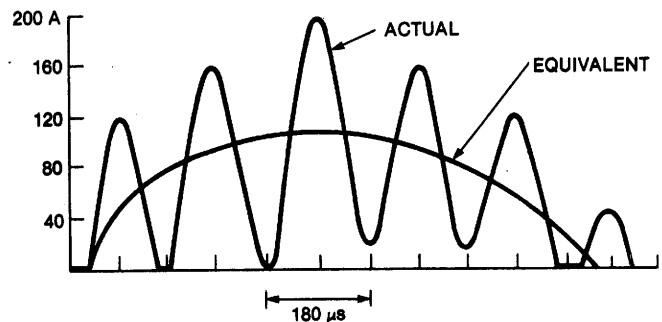
Figure 10.   Single-pulse equivalent pulse for multiple pulses

Note that two types of events occur. One is the premature blowing of the fuse, which is not caused by a varistor failure but by the i^2·t capacity of the fuse being exceeded by the environment [1]. The other is the fuse blowing caused by the varistor end-of-life ultimate failure.

Alternate Varistor Selection

An obvious remedy would be to use a varistor with greater energy-handling capability. The 32 mm size offers such a possibility. Inspection of Figures 7 and 8 shows that the equivalent pulse of Figure 10 (800 μs and 100 A) corresponds to a permissible occurrence of 100 pulses for the 32 mm varistor, in contrast to the two for the 20 mm varistor. The improvement in the number of pulses is 50 times more pulses until *pulse rating* is reached. The improvement in the number of pulses until *varistor failure* occurs, however, is not necessarily 50 times more pulses. Because of the imprecision mentioned previously in the margin between end of pulse rating and ultimate failure, that margin is not necessarily the same for the two sizes, 20 mm and 32 mm, but it is reasonable to expect the same order of magnitude improvement in the ultimate failure as in the pulse rating. This expectation of a 50 times improvement would change the time between failures from the few days observed with the 20 mm size to perhaps one year with the 32 mm size, providing immediate relief and time to make further changes for the long term. Therefore, the change to a 32 mm size, connected at the same point of the circuit, was immediately implemented for that particular environment.

Further gains could be obtained in the length of time between varistor failures by increasing the clamping voltage of the varistors. This increase would result in lower current pulses for the same open-circuit transient voltage. A 510 V rating had been selected by the designer of the drive as the result of a trade-off between varistor clamping voltage and the withstand voltage of the thyristors protected by the varistors. If thyristors with higher voltage withstand were used, the solution would be easy.

Of course, the standard varistor product line has a certain tolerance band, reflecting normal production lot variations. In principle, a selection could be requested from the manufacturer that varistors with a narrower band be supplied for this application. The maximum clamping voltage allowed by the drive specifications would be retained, but those varistors in the lower half of the distribution, which draw larger current pulses for a given open-circuit transient voltage, would have been removed from the population of varistors. For instance, the range of nominal voltages for a 575 V, 32 mm varistor (the next higher voltage offered) is 805 to 1005 V for 1 mA dc, while the maximum nominal voltage of the same diameter but rated 510 V is 910 V for 1 mA dc. Thus, for a normal distribution of nominal voltages of the 575 V varistor, 50% of the devices could theoretically be used without exceeding the upper limit of the 510 V varistor that is consistent with the drive specifications. To achieve this end, it would be necessary for the supplier or user to make a careful determination of the nominal voltage on a population of 575 V varistors in order to retain only the lower half of the distribution (Figure 11).
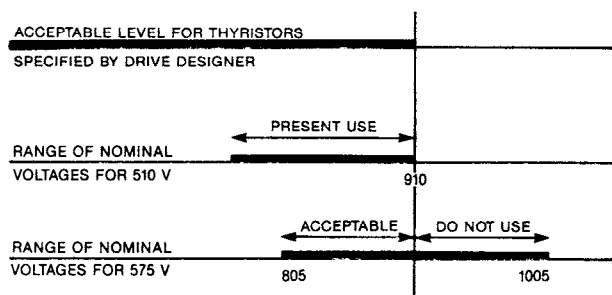

Figure 11.   Tolerances bands of 510 V and 575 V varistors

Other Remedies

In addition to the proposed upgrading of protection at the 460 V level, three other remedies could be considered: installation of surge arresters at the 2300 V level, installation of surge arresters at the 23 kV level, or a change in the circuits involved in the capacitor switching, designed to reduce the severity of the transients at their origin.

In general, the protection available from surge arresters tends to improve when the arresters are installed at higher circuit voltages. Thus, it is quite possible that arresters installed at the 2300 V primary of the 2300/460 transformer could provide a more effective clamping (and at the same time relieve some of the energy stress) than the varistors at the 460 V level. (It is of course implied that these would be the zinc-oxide type, gapless arresters.) The full benefit of these arresters depends on the configuration of the 2300 V system and its grounding (solidly grounded neutral in a wye system, resistance-grounded wye, or floating delta) when the arrestors are connected in the conventional line-to-ground mode. In a second phase of the retrofit described here, 2300 V arresters were installed at the transformer primary. A discussion of their expected performance, validated by the success of the retrofit, is given later on.

Likewise, arresters on the 23 kV side could be installed at the 23 kV substation to mitigate the capacitor switching transients at their origin, or at the primary of the 23 kV/2300 V substation near the control house, where they would also serve as lightning protection for the overhead 23 kV incoming power line. These arresters, again, must be of the gapless type to obtain the most effective protection.

The final remedy in the list of alternatives, but perhaps the first in effectiveness when the opportunity exists, would be to attempt reducing the severity of the capacitor switching transients at their origin. Series inductors or damping resistors may be considered, the effectiveness of which would be predictable if a simulation of the power system behavior were performed by computer modeling. While that remedy could not be applied to this particular location, it is a remedy that should be considered for a similar case of exceptionally severe environment.

EXPECTED PERFORMANCE OF THE 2300 V ARRESTERS

The measurements made first with open-circuit, then with the 20 mm, 510 V varistors on the 460 V side have shown a reduction of maximum voltage from 1450 V to 1100 V (Table 1) when a current of approximately 200 A is flowing in the line and varistors (Figure 5).

We can assume that the voltage drop in the line from the substation and two step-down transformers is mostly inductive at 5.5 kHz, and that the voltage in the varistors can be treated as the voltage across a resistor at the time of the crest of the current wave. The diagram of Figure 12 shows the relationship between the three voltages V_{OC}, V_L, and V_V, respectively, the open-circuit voltage generated by the capacitor switching action, the voltage drop in the line and two transformers, and the varistor voltage at the current peak. Treating this highly nonlinear circuit as a linear circuit is an approximation that will provide at each point of the full range of voltage and current conditions a valid order of magnitude for the purposes of this discussion. Numerical methods are available for rigorous treatment at any instant over the full range of conditions [6]. With this simplifying assumption, we can determine the order of magnitude of the 5.5 kHz current that would flow in an arrester installed at the primary terminals of the 2300 V/460 V transformer as follows.

1. From the actual measured voltages shown in Figure 12, we derive the voltage drop, V_L, in the 23 kV line and two step-down transformers:

$$V_L = (1450^2 - 1100^2)^{1/2}$$

$$= 940$$

Thus, at 5.5 kHz, the impedance between the source and the varistor is

$$Z_L = \frac{V_L}{I}$$

$$= \frac{940 \text{ V}}{200 \text{ A}}$$

$$= 4.7\Omega$$

Note that this 4.7Ω impedance means that the 5.5 kHz switching transient, generated at a distance of about 3000 m (2 miles) from the point of measurement, and at the 23 kV level, can travel a long distance and pass through two step-down transformers with less attenuation than might be expected from the unsound but popular view that "surges cannot travel that far without substantial attenuation."

2. We now arbitrarily assign equal values to the three elements of this impedance, Z_L: (1) the 23 kV line impedance; (2) the 23 kV/2300 V transformer; and (3) the 2300/460 V transformer. The impedance between the source and the primary of the 2300/460 V transformer is then two-thirds of the total impedance, Z_L, or about 3Ω for the 460 V side of the transformer.

3. On the 2300 V side, the impedance of 3Ω, calculated above, becomes $3\ \Omega \times (2300/460)^2 = 75\ \Omega$ and the open-circuit voltage of 1450 V which was measured on the 460 V side becomes $1450 \text{ V} \times (2300/460) = 7250 \text{ V}$.

4. Knowing the open-circuit voltage and the impedance between the source and the 2300 V arrester, we can compute the current in the arrester by iteration if we assume some current value and read the corresponding clamping voltage on the I-V characteristic of the arrester:

a) Assume a current crest of 50 A, producing a drop of 50 × 75 = 3750 V in the line and 23,000/2300 V transformer. Adding this voltage to the varistor voltage, corresponding to 50 A, which is read as about 5700 V on the arrester characteristic curve for minimum discharge voltage (Figure 13), we have $(3750^2 + 5700^2)^{1/2} = 6780 \text{ V}$, or somewhat below the expected 7250 V open-circuit voltage, which is to equal the quadratic sum of the two voltages V_L and V_V.

b) Assume, for a new iteration, a crest of 60 A, producing a drop of 60 × 75 = 4500 V, while the varistor voltage remains essentially the same, i.e., 5700 V. The quadratic addition becomes $(4500^2 + 5700^2)^{1/2} = 7210 \text{ V}$, or a value close to the goal of 7250.

5. Thus, we can expect that the 2300 V arrester will experience current pulses occurring in bursts not exceeding 60 to 70 A, with durations similar to those found on the 460 V varistors, i.e., 5 to 7 pulses per train, or a total duration in the order of 1 ms. Information on arrester duty available from the manufacturer indicates that, for a pulse train of that duration and a crest of less than 100 A, no limitation of the number of pulses need be imposed on the arrester as long as enough time is allowed between pulses to permit cooling of the arrester.

Furthermore, the 5700 V clamping level predicted for the 2300 V surge arresters at 60 A would be reflected as a crest of 5700 V × 460/2300 = 1140 V on the 460 V side. The 510 V, 32 mm varistors, connected in series with the impedance of the 2300/460 V transformer, would then be exposed to this maximum
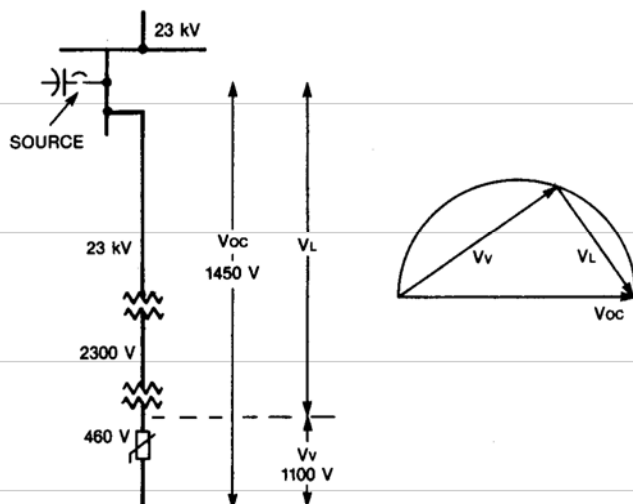
Figure 12.   Open-circuit voltage and voltage drops in the system
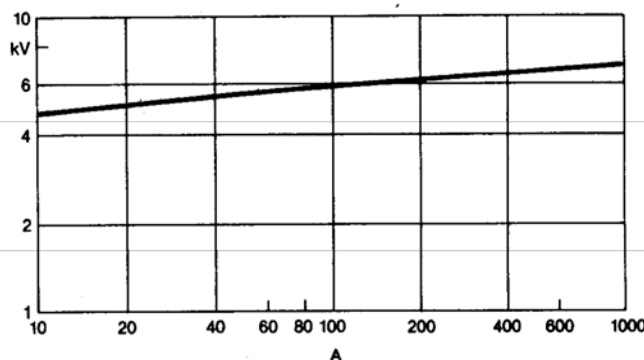
Figure 13.   Minimum clamping voltage characteristic for 2300 V arrester

open-circuit voltage of 1140 V, a value much lower than the 1450 V open-circuit voltage that was applied to them in the absence of the 2300 V arresters. For that applied voltage, the current drawn by the varistor would be in the range of 10 to 20 A, values much lower than the 200 A measured without the 2300 V arrester. Computing the equivalent pulse, as was done in Figure 10 for the 200 A crests, would yield an equivalent crest of about 10 A, for which the pulse rating curves of the 32 mm series show more than 100,000 pulses before its rating is reached.

To place these large differences of performance and withstand capability into perspective, Table 2 shows the relative sizes and volumes of varistor material applied to the taming of the capacitor switching transient. In other words, **the environment has now been matched by the capability of the varistors.**

Table 2

VARISTOR AND ARRESTER DIMENSIONS

Type	Diameter	Thickness	Volume
20 mm	1.8 cm	0.35 cm	0.9 cm³
32 mm	3.0 cm	0.35 cm	2.5 cm³
2300 V Arr.	6.1 cm	2.4 cm	70 cm³

CONCLUSIONS

Voltage and current measurements made on the 460 V input to a thyristor motor drive, during staged capacitor switching operations, showed current surges in the varistors originally used in the system that could consume the pulse rating life of these varistors in a few days of typical operation. Short- and long-term remedies were achieved.

For the short term, the change to a larger varistor connected on the 460 V side of the system was readily implemented to maintain the originally specified protective level, while the fuse-blowing nuisances were eliminated by use of a larger fuse. Available devices for this 460 V circuit may still have a relatively short life (a few hundred days) in the prevailing environment of the site, but they offered immediate relief and therefore allowed successful startup of the system.

For the long term, further protection was obtained by the installation of conventional station-class surge arresters, of the zinc-oxide, gapless type, at the 2300 V level. The system has now operated for 3 years without problems.

This case history also illustrates the low attenuation of the switching transient between the distant source at 23 kV (about 3000 m, or 2 miles) and the point of utilization at 460 V.

REFERENCES

[1] F.D. Martzloff, "Matching Surge Protective Devices to their Environment," *Proc. IEEE/IAS Meeting, October 1983*, pp. 387-392. (Also scheduled for *IAS Transactions*, Jan/Feb 1985.)

[2] ANSI/IEEE Std C62.33-1982, *IEEE Standard Test Specifications for Varistor Surge Protective Devices*, The Institute of Electrical and Electronic Engineers, Inc., New York.

[3] A. Greenwood, *Electrical Transients in Power Systems*, Wiley Interscience, New York, 1971.

[4] *Transient Voltage Suppression Manual*, Fourth Edition, General Electric Company, Auburn, NY, 1983.

[5] *Transient Voltage Suppression Manual*, Third Edition, General Electric Company, Auburn, NY, 1983.

[6] H.W. Dommel, "Digital Computer Solution of Electromagnetic Transients in Single and Multiphase Networks," *IEEE Transactions on Power Apparatus and Systems*, Vol. PAS-88, pp. 388-399, April 1969.

François D. Martzloff (M'56, F'83) was born in France, and received his undergraduate degree at the Ecole Spéciale de Mécanique et d'Electricité in 1951; he received the MS in Electrical Engineering degree from Georgia Tech in 1952 and the MS in Industrial Administration degree from Union College in 1971.

Since 1956 he has been with the General Electric Company, where he gained experience in the Transformer and Switchgear Division. Upon joining General Electric Corporate Research and Development in 1961, he became involved in power semiconductor circuits and overvoltage protection. He has participated in the introduction and application of metal oxide varistors since 1971.

In IEEE, Mr. Martzloff is active on the Surge Protective Devices Committee. He is chairman of the Working Group on Surge Characterization in Low-Voltage Circuits. He is also a member of the Ad Hoc Advisory Subcommittee of the USA Advisory Committee on IEC S/C 28A, ANSI C.62 Subcommittee on Low-Voltage Surge Protective Devices, and Chairman of the NEMA Low-Voltage Arresters Technical Committee. He has been awarded 13 U.S. patents, primarily in the field of varistors and transient protection.

Discussion

J. L. Koepfinger (Duquesne Light Company, Pittsburgh, PA): The author has addressed one of many mechanisms for producing repetitive overvoltages on low-voltage circuits. In this particular instance, it was possible to obtain controlled conditions so that a measurement could be made of the voltage and currents resulting from the capacitor switching. It would be useful if there was an analytical method presented that correlated the generation of the 5.5-kHz pulses with those measured. Did the author attempt to make such a correlation?

This paper points out the need to know the characteristic of the surge so that proper sizing of the protection can be achieved. Therefore it would be desirable to be able to have some analytical tool to permit calculation of the frequency of the surge due to remote capacitor switching.

Manuscript received July 24, 1985.

Francois D. Martzloff: The paper reported a case history from which useful information may be derived on retrofitting corrections of similar problems or, better, on avoiding the problem by foresight. The situations confronting the author was the need for immediate corrective action rather than complete investigation and mutual validation of analytical methods and field measurements.

The literature is fairly rich in both theoretical and practical papers on the problems associated with capacitor switching, both for energizing and for de-energizing, the latter involving the risk of restrikes. Because of this availability and the limited space available in the TRANSACTIONS on one hand, and because of the limitations in scope of the field retrofit mission on the other hand, no attempt was made to correlate the measurements with the power system parameters (which were not readily available to the author). In response to Mr. Koepfinger's suggestion, abstracts are cited below to provide references to both analytical tools and practical results published by other workers.

Bibliography, 1970-1985 : REFERENCES

[1] M. F. McGranaghan, W. E. Reid, S. W. Law, and D. W. Gresham, "Overvoltage Protection of Shunt-Capacitor Banks Using MOV Arresters," *IEEE Trans. Power App. Syst.*, PAS-103, No. 8, Aug. 1984, pp. 2326-2333.

Protection requirements and surge arrester duties are analyzed for both digital and transient network analyzer (TNA) simulations. Simple analytical expressions are developed for evaluating arrester duty as a function of capacitor bank size. Guidelines and limitations for applying arresters at grounded- and ungrounded-wye capacitor banks are developed based on overvoltage characteristics and arrester capabilities.

[2] J. H. Brunke and G. G. Schoeckelt "Synchronous Energization of Shunt Capacitors at 230 kV," IEEE PES (Power Eng. Soc.) Winter Meeting, New York, NY; Jan. 20-Feb. 3, 1978; Publ. by IEEE 1977, Paper A78-148-9, p. 4.

This paper reports on the application of synchronous switching to reduce inrush transients when switching a 230-kV shunt capacitor bank. Computer studies determined the required switch performance.

[3] J. D. Cuffman, John Linders, M. A. Zucker, and S. Willima , "Power Factor Correction Capacitors and Their Side Effects," IEEE Conf. Rec., 28th Ann. Conf. Electr. Ens. Probl. Rubber Plast. Ind., Akron, OH, April 5-6, 1976, pp. 37-49.

The major reason for applying capacitors to an electrical distribution system is to correct poor power factor. In the greater majority of installtions it is a routine procedure. In some instances capacitors may cause problems with other in-plant equipment and in other instances they may suffer undesirable side effects that originate in other equipment. Among these problems are switching surges, voltage unbalance due to fuses blowing, and harmonics generated by SCR-controlled equipment.

[4] H. J. Yelland, and C. P. Yellna, "Vacuum Contactors: Latest Development in Their Design and Application," Certif. Ens. V 54, No. 1, Jan. 1981, pp. 824-841.

The paper includes the following topics: Design of vacuum bottles (glass and ceramic); design of the complete vacuum contactor and their panels; panels with on-load isolation, and panels with off-load isolation; vacuum contactor applications (motor control), capacitor switching, arc and other (furnace-switching, transformer switching, mine-winder-reversers). Surge generation by vacuum contactors is considered under the following heads: basic energization and de-energization transients; transients generated when switching inductive loads; assessment of a vacuum contactor from a surge generation point of view; types of surge suppression devices; switching of capacitive loads. An extensive discussion of the paper is appended.

[5] Jack R. Harbaugh and John E. Harder, "Important Considerations for Capacitor Applications in the Petroleum and Chemical Process Industries," IEEE Pet. Chem. Ind. Conf., 27th Ann. Rec. of Conf. Pap., Houston, TX, Sept. 8-10, 1980; IEEE, #80CH1549-5 IA), Piscataway, NJ, pp. 157-167.

The location of capacitors may have a significant effect of the (I**2R losses within the plant transformers and conductors, which is wasted energy. Transients generated by capacitor switching may require attention in the selection of arresters, system insulation, or other equipment. The presence of capacitors amy require some special attention to large motors during system reclosing or load transfer. This study addresses each of these considerations, providing some guidelines for effective, reliable capacitor application. In addition, a checklist is provided for general industrial capacitor applications.

[6] J. F. Burser, R. J. Santoro, J. W. Stolle, R. E. Owen and C. R. Clinkenbeard, "Comparative Evaluation of Field Test Data and Computer Results on Capacitor Switching Transients," Meeting Minutes PA Electr. Assoc., Eng. Sect., Trans. and Distrb. Comm. West Middlesec, PA, May 15-16, 1979; PA Electr. Assoc., Eng. Sect., Harrisburg, PA 1979.

An arrester failure case was analyzed occurring at the time of substation capacitor bank switching with the use of a transient network analyzer (TNA) and digital computer techniques. The case involved a 12.5-kV ground-wye distribution sytem. Results of the TNA study, which were validated by field tests, showed the effects of system configuration magnitude of transient over voltages.

[7] Eldon J. Rosers, and Don A. Gilles, "Shunt Capacitor Switching EMI Voltages, Their Reduction in Bonneville Power Administration Substations," *IEEE Trans. Power Appar. Syst.* PAS-93, No. 6, Nov.-Dec. 1974, pp. 1849-1860.

Back-to-back switching of grounded wye shunt capacitors cause high frequency, high-magnitude current flow in overhead bus and ground mat conductors. Measurements of induced voltages on control cables and receptacles, transverse voltages on fuse blown PT secondaries and personnel intercept voltages are reported. BPA methods of confining transients to capacitor areas and shielding techniques are reviewed.

[8] Paul C. Krause and William C. Mauser, "On-Line Transient Control of Capacitor Switching to Improve System Stability," *IEEE Trans. Power Appar. Syst.* PAS-92, No. 1, Jan-Feb. 1973, pp. 321-329.

A simplified voltage-reactance equivalent of the one-machine infinite bus system was used. The material presented in this paper shows that this simplified model does not predict the performance of a one-machine infinite bus system with the accuracy necessary to determine the capacitor switching times so as to achieve the control objectives. However, it is shown that computation accuracy may be improved by including system losses. It appears that in order to apply optimal control techniques it will be necessary to develop more accurate models of the power system components. Also, faster than real time iterative, on-line computation techniques as simulated in this paper should be implemented and used to calculate the switching times. Until these obstacles are overcome, optimal control theory will have little impact upon the power industry.

[9] D. O. Wiitanen, J. D. Morgan, and G. L. Gaibrois, "Station Capacitor Switching Transients, Analytical and Experimental Results," *IEEE Trans. Power App. Syst.* PAS-90, No. 4, July-Aug. 1971, pp. 1639-1645.

Station capacitor bank energization transients predicted by a circuit model are compared to field-test results. Selection of a suitable model is discussed. A computer solution of the model is presented.

Manuscript received September 19, 1985.

STATISTICS ON FAILURE RATES OF CLOCK MOTORS

Statistics on Failure Rates of Clock Motors

Clock and Timer Department
General Electric Company

Excerpt of a 1964 declassified General Electric memorandum discussing failure of clock motors

Significance:
Part 3 Recorded occurrences

The memorandum from which this excerpt is drawn was provided to Martzloff in support of his contribution to gathering data on the occurrence of surges in low-voltage ac power systems, for a just-launched IEEE project on the emerging concerns about surge occurrences.

These statistics provide convincing evidence, based on a large number of reported failures, that a correlation exists between the rate of failures and the surge withstand capability of the motor windings.

A design change in this withstand level, from 2 kV to 6 kV produced a 100:1 drop in the failure rate. Interestingly, this 100:1 ratio, when plotted on a chart in which data from other sources were entered, produced a slope in good agreement with these other sources. Thus, the large number of clocks, operating 24/7/365 and unwittingly serving as sacrificial "surge counters" boosted confidence that the limited observations (in duration and in locations) being reported by other researchers were consistent.

Of course, the present-day significance of surge voltages is affected by the proliferation of surge-protective devices, but these data are still useful as an indication of the occurrence of surges, only the levels have changed but presumably the mechanisms are still in action.
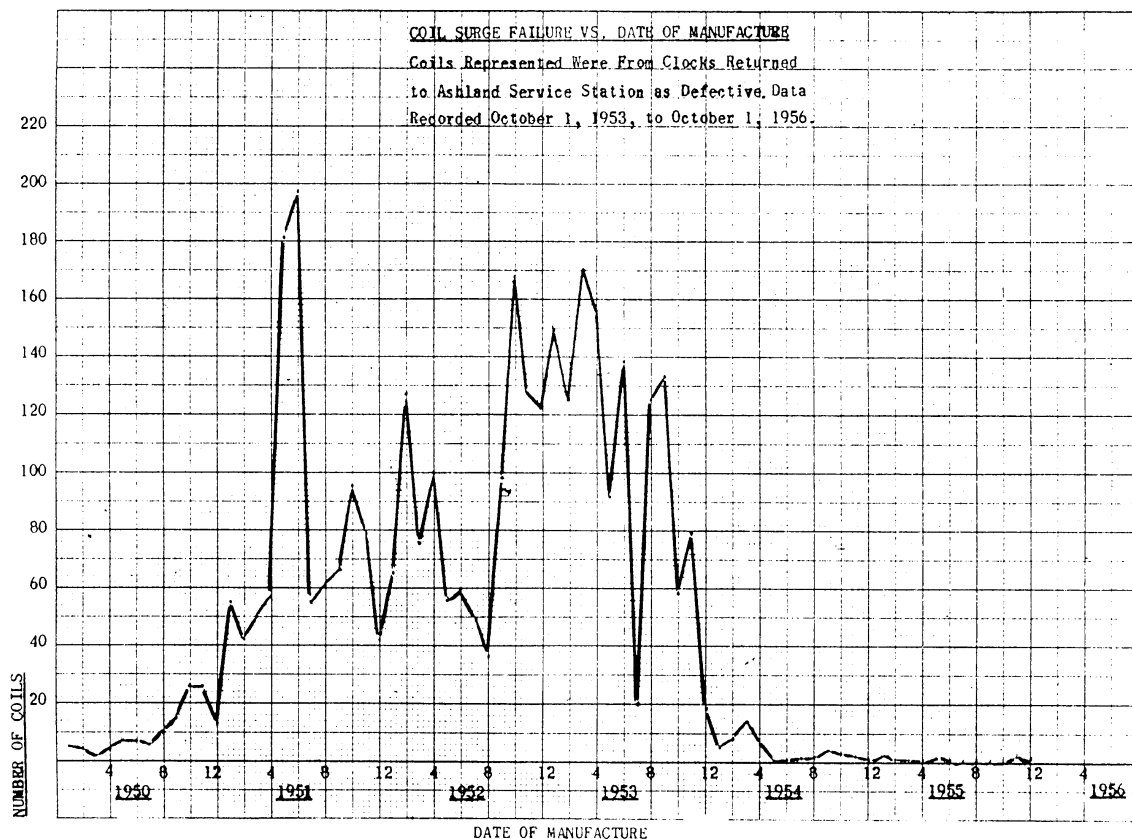
January 9, 1964

Subject: Surge Information - Clock and
           Timer Dept. Motor Coil

During the summer of 1953, an increase in defective coil returns to Service
Stations became apparent. An investigation showed that the majority of
failures were due to surge conditions. A study was made of the coil design
at that time and it was found that impulse insulation levels down to 2000V
were obtained. In October of 1953, a change was made in the coil design to
improve the insulation level at the points of highest potential within the
coil. This had an immediate effect of increasing the surge protection of
the coil from approximately 2000V to approximately 6000V minimum.

At the same time, a study was undertaken to collect all defective coil
returns to the Ashland Service Station. These returns were examined to
determine the causes for failure. This study continued for a period of
three years during which time 5,254 coils were collected and examined.
Approximately 75% of these coils returned failed due to lightning and/or
other transient surge conditions. The attached chart shows the number of
coils received for surge failure in the field versus their date of manu-
facture. The large numbers shown, particularly during 1951, can be explained
by the fact that our collection of these coils was started in October of
1953. If the study which started in October had been started earlier, the
portion of the curve prior to 1951 would have shown a corresponding increase
in numbers. It was found in this study that it took approximately 18 months
for a clock to find its way from our factory to use in the field.

COIL SURGE FAILURE VS. DATE OF MANUFACTURE

Coils Represented Were From Clocks Returned
to Ashland Service Station as Defective. Data
Recorded October 1, 1953, to October 1, 1956.